

# MERCURY2 USB3 Vision Cameras

## User Manual

All rights reserved. No parts of this manual may be used or reproduced, in any forms or by any means, without prior written permission of China Daheng Group, Inc. Beijing Image Vision Technology Branch.

The right is also reserved to modify or change any parts of this manual in the future without prior notification.

All other trademarks are the properties of their respective owners.

© 2020 China Daheng Group, Inc. Beijing Image Vision Technology Branch

Web: <http://www.daheng-imaging.com/en>

Sales Email: [isales@daheng-imaging.com](mailto:isales@daheng-imaging.com)

Sales Tel: +86 10 8282 8878

Support Email: [isupport@daheng-imaging.com](mailto:isupport@daheng-imaging.com)

# Preface

We really appreciate your choosing of DAHENG IMAGING products.

The MERCURY2 USB3.0 series camera is DAHENG IMAGING's latest area scan industrial digital camera with large and high-quality sensor, featuring high resolution, high definition and extremely low noise. The camera is equipped with standard USB3.0 interface, is easy to install and use.

The MERCURY2 family cameras are especially suitable for machine vision applications such as industrial inspection, medical, scientific research, education, security and so on.

This manual describes in detail on how to install and use the MERCURY2 USB3 Vision digital cameras.

# Contents

<b>1. Introduction</b>	<b>1</b>
1.1. Series Introduction	1
1.2. Naming Rules	1
1.3. Standards	1
1.4. Document, CAD/Technical Drawing and Software Downloads	2
<b>2. Precautions</b>	<b>3</b>
2.1. Guideline for Avoiding EMI and ESD	3
2.2. Environmental Requirements	3
2.3. Camera Mechanical Installation Precautions	3
<b>3. Installation Guideline</b>	<b>4</b>
3.1. Host Preparation	4
3.1.1. Software Package	4
3.1.2. User Software Interface	4
3.2. Camera Power	5
3.3. Camera Driver Installation	6
3.3.1. System Requirements	6
3.3.2. Driver Installation	6
3.4. Open Device and Start Acquisition	6
<b>4. General Specification</b>	<b>7</b>
4.1. Explanation of Important Parameters	7
4.1.1. About Spectral Response	7
4.2. MER2-041-436U3M/C(-L)	7
4.2.1. Parameter	7
4.2.2. Spectral Response	10
4.3. MER2-160-227U3M/C(-L)	11
4.3.1. Parameter	11
4.3.2. Spectral Response	13
4.4. MER2-230-168U3M/C(-L)	14
4.4.1. Parameter	14
4.4.2. Spectral Response	17
4.5. MER2-231-41U3M/C(-L)	18
4.5.1. Parameter	18
4.5.2. Spectral Response	20
4.6. MER2-301-125U3M/C(-L)	21
4.6.1. Parameter	21
4.6.2. Spectral Response	24
4.7. MER2-302-56U3M/C(-L)	25

4.7.1. Parameter .....	25
4.7.2. Spectral Response .....	27
4.8. MER2-502-79U3M/C(-L) .....	28
4.8.1. Parameter .....	28
4.8.2. Spectral Response .....	31
4.9. MER2-503-36U3M/C(-L) .....	32
4.9.1. Parameter .....	32
4.9.2. Spectral Response .....	34
4.10. MER2-630-60U3M/C(-L) .....	35
4.10.1. Parameter .....	35
4.10.2. Spectral Response .....	38
4.11. MER2-1220-32U3M/C(-L).....	39
4.11.1. Parameter .....	39
4.11.2. Spectral Response .....	41
4.12. MER2-2000-19U3M/C(-L) .....	42
4.12.1. Parameter .....	42
4.12.2. Spectral Response .....	45
4.13. ME2P-1230-23U3M/C .....	45
4.13.1. Parameter .....	45
4.13.2. Spectral Response .....	48
4.14. ME2P-2621-15U3M/C .....	49
4.14.1. Parameter .....	49
4.14.2. Spectral Response .....	52
4.15. ME2L-161-61U3M(-L) .....	52
4.15.1. Parameter .....	52
4.15.2. Spectral Response .....	54
<b>5. Dimensions .....</b>	<b>55</b>
5.1. Camera Dimensions .....	55
5.2. Optical Interface .....	58
5.3. Tripod Adapter Dimensions .....	59
<b>6. Filters and Lenses .....</b>	<b>61</b>
6.1. Filters .....	61
6.2. Lens Selection Reference .....	62
6.2.1. HN-2M Series .....	63
6.2.2. HN-5M Series .....	63
<b>7. Electrical Interface.....</b>	<b>65</b>
7.1. LED Light.....	65
7.2. USB Port .....	65
7.3. I/O Port.....	65
7.3.1. MER2/ME2P Series.....	65

7.3.1.1. Line0 (Opto-isolated Input) Circuit.....	66
7.3.1.2. Line1 (Opto-isolated Output) Circuit.....	68
7.3.1.3. GPIO 2/3 (Bidirectional) Circuit .....	69
7.3.2. ME2L Series .....	73
7.3.2.1. Line0 (Opto-isolated Input) Circuit.....	73
7.3.2.2. Line2 (Bidirectional) Circuit.....	76
<b>8. Features.....</b>	<b>81</b>
8.1. I/O Control .....	81
8.1.1. MER2/ME2P Series.....	81
8.1.1.1. Input Mode Operation .....	81
8.1.1.2. Output Mode Operation .....	82
8.1.1.3. Read the LineStatus .....	86
8.1.2. ME2L Series .....	86
8.1.2.1. Input Mode Operation .....	86
8.1.2.2. Output Mode Operation .....	88
8.1.2.3. Read the LineStatus .....	90
8.2. Image Acquisition Control.....	90
8.2.1. Acquisition Start and Stop .....	90
8.2.1.1. Acquisition Start .....	90
8.2.1.2. Acquisition Stop .....	91
8.2.2. Acquisition Mode .....	92
8.2.3. Trigger Type Selection.....	93
8.2.4. Switching Trigger Mode.....	95
8.2.5. Continuous Mode and Configuration.....	96
8.2.6. Software Trigger Acquisition and Configuration .....	96
8.2.7. External Trigger Acquisition and Configuration .....	97
8.2.8. Set Exposure .....	99
8.2.8.1. Set Exposure Mode .....	99
8.2.8.2. Set Exposure Value .....	101
8.2.9. Overlapping Exposure and Non-overlapping Exposure.....	105
8.3. Basic Features .....	107
8.3.1. Gain .....	107
8.3.2. Pixel Format.....	108
8.3.3. ROI.....	112
8.3.4. Auto Exposure/Auto Gain .....	112
8.3.4.1. ROI Setting of Auto Exposure/ Auto Gain.....	112
8.3.4.2. Auto Gain .....	114
8.3.4.3. Auto Exposure.....	114
8.3.5. Auto White Balance .....	115
8.3.5.1. Auto White Balance ROI .....	115
8.3.5.2. Auto White Balance Adjustment .....	116
8.3.6. Test Pattern.....	116
8.3.7. User Set Control .....	118

8.3.8. Device User ID .....	120
8.3.9. Timestamp .....	121
8.3.10. Binning.....	121
8.3.11. Decimation .....	123
8.3.12. Reverse X and Reverse Y .....	125
8.3.13. Digital Shift.....	127
8.3.14. Acquisition Status .....	129
8.3.15. Black Level .....	130
8.3.16. Remove Parameter Limits.....	130
8.3.17. User Data Area .....	131
8.3.18. Timer.....	132
8.3.19. Counter .....	133
8.3.20. Exposure Overlap Time Max.....	134
<b>8.4. Image Processing.....</b>	<b>135</b>
8.4.1. Color Transformation Control .....	135
8.4.2. Gamma .....	137
8.4.3. Lookup Table .....	138
8.4.4. Sharpness.....	139
8.4.5. Flat Field Correction .....	140
8.4.5.1. FFC Factor Calculation and Preview.....	142
8.4.5.2. Read/Save Factor.....	143
8.4.5.3. Load/Save File .....	143
8.4.6. Noise Reduction .....	143
<b>8.5. Image Transmission .....</b>	<b>144</b>
8.5.1. Calculate Frame Rate.....	144
8.5.2. USB Interface Bandwidth .....	145
8.5.3. DeviceLinkThroughputLimit.....	145
8.5.4. Camera Acquisition Time.....	147
<b>8.6. Events .....</b>	<b>150</b>
8.6.1. ExposureEnd Event.....	151
8.6.2. BlockDiscard Event .....	151
8.6.3. BlockNotEmpty Event.....	152
8.6.4. FrameStartOvertrigger Event .....	152
8.6.5. FrameBurstStartOvertrigger Event.....	152
8.6.6. FrameStartWait Event .....	152
8.6.7. FrameBurstStartWait Event.....	152
<b>9. Software Tool .....</b>	<b>153</b>
9.1. LUT Create Tool .....	153
9.1.1. GUI.....	153
9.1.2. User Guide.....	154
9.1.2.1. User Case .....	154

9.1.2.2. GroupBox .....	154
9.1.2.3. Auto Create Lut .....	158
9.1.2.4. Save Lut .....	159
9.1.3. Precautions .....	159
9.1.3.1. Read From Device .....	159
9.1.3.2. Write To Device .....	160
9.1.3.3. Directory Structure .....	160
9.2. Flat Field Correction Plugin .....	160
9.2.1. GUI .....	161
9.2.2. User Guide .....	162
9.2.2.1. FFC Execution Steps .....	162
9.2.2.2. Acquisition of Bright Field Images .....	162
9.2.2.3. Execute FCC .....	164
9.2.2.4. Read FFC Data from Device / Write FFC Data to Device .....	164
9.2.2.5. Load FFC Data from File / Save FFC Data to File .....	165
9.2.3. Precautions .....	165
9.2.3.1. FFC Implementation .....	165
9.2.3.2. Preview .....	165
9.3. Frame Rate Calculation Tool .....	166
<b>10. FAQ .....</b>	<b>168</b>
<b>11. Revision History .....</b>	<b>170</b>
<b>12. Contact Us .....</b>	<b>171</b>
12.1. Contact Sales .....	171
12.2. Contact Support .....	172



## 1. Introduction

### 1.1. Series Introduction

The MERCURY2 USB3 Vision series camera is DAHENG IMAGING's mature area scan industrial digital camera, featuring outstanding performance, powerful features, outstanding price/performance ratio. The MER2-U3 series cameras are available in a variety of resolutions and frame rates, and are available with CMOS sensors from leading chip manufacturers, which is easy to install and use.

The MER2-U3 series digital camera transmits image data through the USB3.0 data interface. Thanks to the locking screw connectors, the MERCURY2 series cameras can secure the reliability of cameras deployed in harsh industrial environments. Featuring high reliability and high price/performance ratio, the MERCURY2 series cameras are especially suitable for machine vision applications such as industrial inspection, medical, scientific research, education, security and so on.

### 1.2. Naming Rules

Details of the MERCURY2 USB3 Vision series camera are given in the general specifications below. Each camera model name is determined by its sensor's maximum resolution, maximum frame rate at maximum resolution, the color/monochrome type of the sensor, etc.

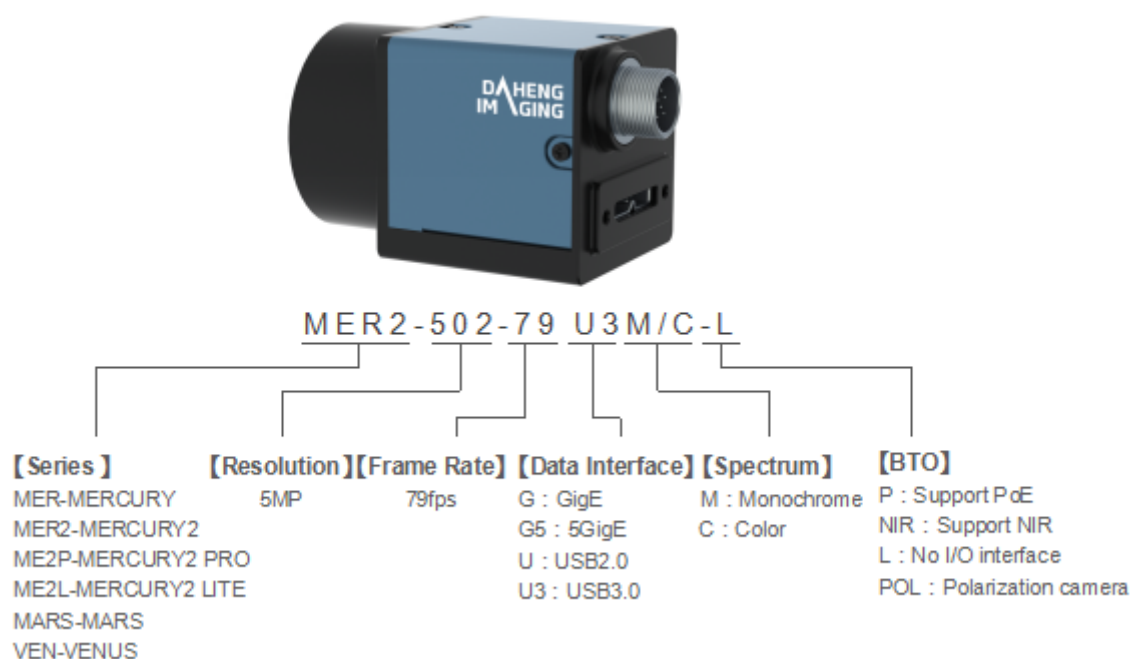


Figure 1-1 Naming rules

### 1.3. Standards

The camera follows the USB3 Vision1.0 standard, and its development interface GalaxySDK is implemented based on the GEN<i>CAM standard.

## 1.4. Document, CAD/Technical Drawing and Software Downloads

Product related document, CAD/Technical drawing and software can be downloaded from the [Downloads](#) of DAHENG IMAGING website. The relevant contents are as follows:

Document	MERCURY2 USB3 Vision Cameras User Manual
CAD/Technical Drawing	DAHENG IMAGING MER2-U3 CAD/Technical Drawing
Software	Galaxy Windows SDK—USB3.0, GigE, MERCURY USB2.0 Cameras
	Galaxy Linux SDK—USB3.0, GigE, MERCURY USB2.0 Cameras
	Galaxy Android SDK—USB3.0 Cameras

## 2. Precautions

### 2.1. Guideline for Avoiding EMI and ESD

You should consider the EMI (Electro Magnetic Interference) and ESD (Electro-Static discharge) problem in the process of using the camera, to guarantee the camera to work in a relatively good electromagnetic environment. The main measures are as follows:

- 1) USB cables certificated by USB IF with lock screw are recommended.
- 2) Using shielded cable can avoid electro-magnetic interface. Shielding layer of the cable should conduct to ground nearby and not until stretched too long. When many devices need conduct to ground, using single point grounding to avoid earth loop.
- 3) Keep your cameras away from equipment with high voltage, or high current (such as motor, inverter, relay, etc.). If necessary, use additional shielding.
- 4) ESD (electro-static discharge) may damage cameras permanently, so use suitable clothing (cotton) and shoes, and touch the metal to discharge the electro-static before operating cameras.

### 2.2. Environmental Requirements

- 1) Housing temperature during operation: 0°C ~ 45°C, humidity during operation: 10% ~ 80%.  
Storage temperature: -20°C ~ 70°C.
- 2) To avoid collecting dust in the optical filter, always keep the plastic cap on cameras when no lens is mounted.
- 3) PC requirement: Intel Core 2 Duo, 2.4GHz or above, and 2GB memory or above.
- 4) USB3.0 host controller requirement: Intel controller integrated in mainboard is recommend. Select Renesas controller if external frame grabber is needed.
- 5) The cable must have a locking screw at the end of the device.
- 6) Make sure that cameras are transported in the original factory packages.

### 2.3. Camera Mechanical Installation Precautions

Camera installation requirements:

- 1) The M3 screw and the camera should have a screw length between 2.5 and 2.7mm, and the M2 screw and the camera should have a screw length between 3 and 3.3mm
- 2) The M3 screw assembly torque  $\leq 1\text{N.M}$ , and the M2 screw assembly torque  $\leq 0.5\text{N.M}$ . If the screw assembly torque is too large, it may cause the camera thread stripping.

## 3. Installation Guideline

### 3.1. Host Preparation

#### 3.1.1. Software Package

The software package of DAHENG IMAGING's MERCURY2 series is used to control the MERCURY2 series camera to provide stable, real-time image transmission, and provides multiple samples and easy-to-integrate SDKs for various programming tools. The package is composed of the following modules:

- 1) Driver Package (Driver): This package provides the MERCURY2 series camera driver program, such as: the USB3.0 cameras' driver program.
- 2) Interface Library (API): This package provides the camera control interface library and the image processing interface library, supports the user for secondary development.
- 3) Demonstration Program (GalaxyView.exe): This demonstration program is used to display the camera control, image acquisition and image processing functions, the user can control the camera directly by the demonstration program, and the user can develop their own control program based on the camera interface library.
- 4) Sample: These samples demonstrate cameras' functions, the user can easily use these samples to control cameras, or refer to the samples to develop their own control programs.
- 5) Programmer's Manual: This manual is the users programming guide that instructs the users how to configure the programming environment and how to control cameras and acquire images through the camera interface library.

You can download the latest software package from the website: [www.daheng-imaging.com/en/Downloads](http://www.daheng-imaging.com/en/Downloads).

#### 3.1.2. User Software Interface

After installing the MERCURY2 series camera software package, the user can use the demonstration program and the samples to control the camera, also the user can control the camera by the program which is written by the user themselves. The software package provides three kinds of program interface, the user can select the suitable one for use according to their own requirements:

##### 1) API Interface

In order to simplify the users' programming complexity, the package provides the general C programming interface GxIAP.dll and image processing algorithm interface DxImageProc.dll for the user to control the camera, and provides the samples and software development manual which are based on these interfaces. The API interface supports C/C++/C#/Python, etc.

##### 2) GenTL Interface

This interface is developed according to the standard of general transport layer in GEN<sup>i</sup>CAM standard, DAHENG IMAGING follows the GEN<sup>i</sup>CAM standard and provides the GenTL interface for the user, the

user can use the GenTL interface directly to develop their own control program. The definition and usage of GenTL interfaces can be downloaded from the website of EMVA.

In addition, users can use some third-party software that supports GEN<i>CAM standard to control the camera, such as HALCON.

### 3) USB3 Vision interface

The MERCURY2 series USB3.0 camera is compatible with the USB3 Vision protocol, which allows the user to control the camera directly through the USB3 Vision protocol. In addition, the user can use some third-party software that supports the USB3 Vision protocol to control the camera, such as HALCON.

#### ● Note

**GEN<i>CAM standard:** GEN<i>CAM is administered by the European Machine Vision Association (EMVA). GenICam provides a generic programming interface for all kinds of cameras and devices. It provides a standard application programming interface (API), no matter what interface technology is being used. It mainly includes the following modules:

- GenAPI: an XML description file format defining how to capture the features of a device and how to access and control these features in a standard way
- GenTL: a generic Transport Layer Interface, between software drivers and libraries, that transports the image data from the camera to the application running on a PC
- SFNC: common naming convention for camera features, which promotes interoperability between products from different manufacturers

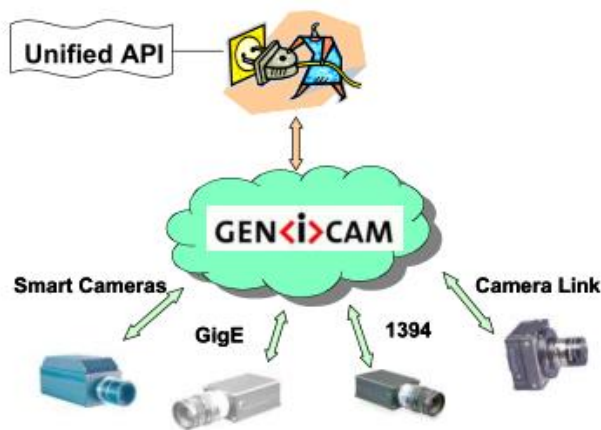


Figure 3-1 GEN<i>CAM standard schematic diagram

## 3.2. Camera Power

MER2-U3 series camera is powered by the USB 3.0 interface.

### 3.3. Camera Driver Installation

#### 3.3.1. System Requirements

GalaxySDK is suitable for all cameras in the MERCURY2 series. The GalaxySDK contains various operating systems such as Windows, Android and Linux. The requirements for the operating system and version of the installation package are as follows:

Operating Systems	Applicable Version
Windows	<ul style="list-style-type: none"><li>➤ Windows XP (32bit, 64bit)</li><li>➤ Windows 7 (32bit, 64bit)</li><li>➤ Windows 8 (32bit, 64bit)</li><li>➤ Windows 8.1 (32bit, 64bit)</li><li>➤ Windows 10 (32bit, 64bit)</li></ul>
Linux	<ul style="list-style-type: none"><li>➤ Ubuntu 12.04 or above, kernel version 3.5.0.23 or above</li></ul>
Android	<ul style="list-style-type: none"><li>➤ Android6 or above</li></ul>

#### 3.3.2. Driver Installation



The steps to install the Galaxy SDK under Windows are as follows:

- 1) Download the corresponding version of the installation package from [www.daheng-imaging.com/en/Downloads](http://www.daheng-imaging.com/en/Downloads).
- 2) Run the installer.
- 3) Follow the instructions of the installation wizard to complete the installation process. During the installation process, you can choose the camera interface you need (USB2.0, USB3 Vision, GigE Vision, etc.).

During the installation process, especially when installing the \*.sys file, you must always pay attention to whether the anti-virus software intercepts the driver. If intercepted, it may cause the driver installation to fail.

### 3.4. Open Device and Start Acquisition

After powering the device, connecting the device to the USB3.0 interface of the host. Double-click the GalaxyView software to acquire image. The steps are as follows:

- 1) Click the  icon on the toolbar in the GalaxyView to refresh device list.
- 2) After the device is enumerated, double-click the device enumerated in the device list.
- 3) Click the  icon on the toolbar to perform the Start Acquisition operation on the current device.

## 4. General Specification

### 4.1. Explanation of Important Parameters

#### 4.1.1. About Spectral Response

QE: Quantum efficiency, which is the ratio of the average number of photoelectrons produced per unit time to the number of incident photons at a given wavelength.

Sensitivity: The change of the sensor output signal relative to the incident light energy. The commonly used sensitivity units are  $V/((W/m^2) \cdot s)$ ,  $V/lux \cdot s$ ,  $e-/((W/m^2) \cdot s)$  or  $DN/((W/m^2) \cdot s)$ .

The spectral response graphs given by different manufacturers are different. Some graphs' ordinate is relative sensitivity response, and abscissa is wavelength. Some graphs' ordinate is QE, and abscissa is wavelength.

### 4.2. MER2-041-436U3M/C(-L)

#### 4.2.1. Parameter

Specifications	MER2-041-436U3C	MER2-041-436U3C-L
Resolution	720 × 540	
Sensor Type	Sony IMX287 global shutter CMOS	
Optical Size	1/2.9 inch	
Pixel Size	6.9 $\mu$ m × 6.9 $\mu$ m	
Frame Rate	438fps@720 × 540	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20 $\mu$ s~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	
Signal Noise Ratio	44dB	
Synchronization	External trigger, software trigger	Software trigger

I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-1 MER2-041-436U3C(-L) camera specifications

Specifications	MER2-041-436U3M	MER2-041-436U3M-L
Resolution	720 x 540	
Sensor Type	Sony IMX287 global shutter CMOS	
Optical Size	1/2.9 inch	
Pixel Size	6.9μm ×6.9μm	
Frame Rate	438fps@720x540	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	



Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	43.46dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-2 MER2-041-436U3M(-L) camera specifications

### 4.2.2. Spectral Response

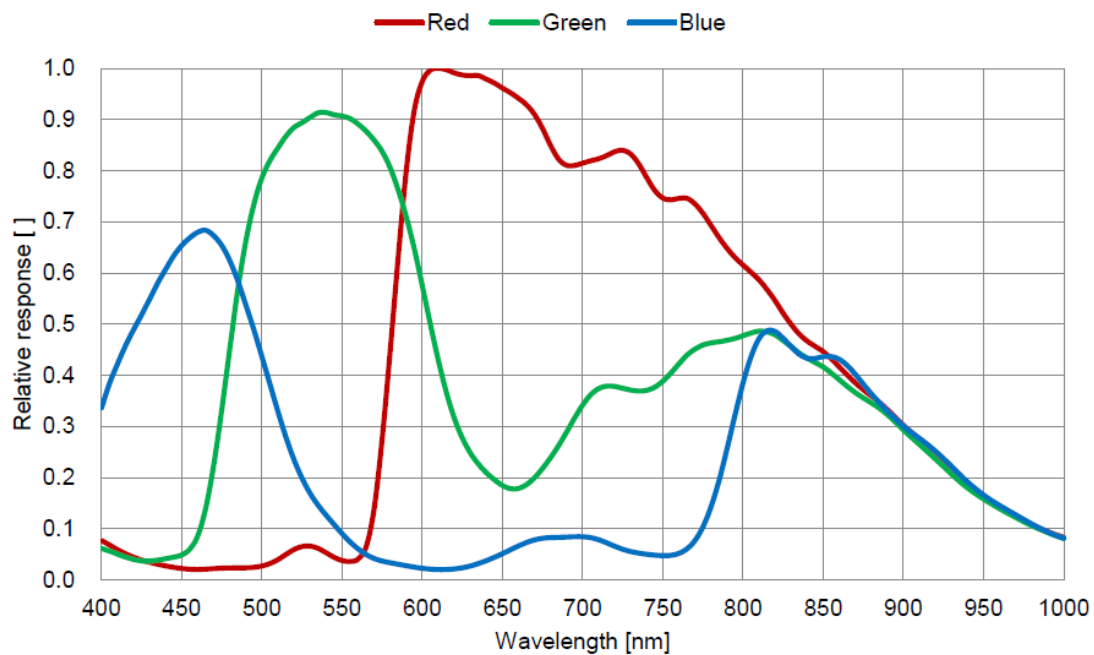


Figure 4-1 MER2-041-436U3C(-L) sensor spectral response

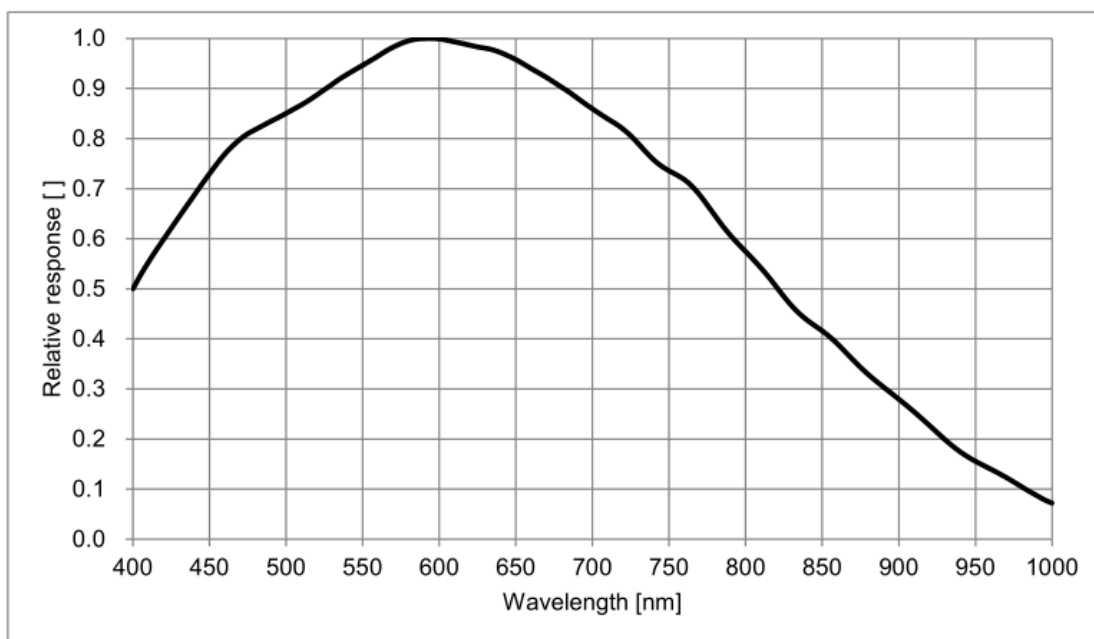


Figure 4-2 MER2-041-436U3M(-L) sensor spectral response

### 4.3. MER2-160-227U3M/C(-L)

#### 4.3.1. Parameter

Specifications	MER2-160-227U3C	MER2-160-227U3C-L
Resolution	1440 × 1080	
Sensor Type	Sony IMX273 global shutter CMOS	
Optical Size	1/2.9 inch	
Pixel Size	3.45μm × 3.45μm	
Frame Rate	227fps@1440 × 1080	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	
Signal Noise Ratio	41dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	

Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-3 MER2-160-227U3C(-L) camera specifications

Specifications	MER2-160-227U3M	MER2-160-227U3M-L
Resolution	1440x1080	
Sensor Type	Sony IMX273 global shutter CMOS	
Optical Size	1/2.9 inch	
Pixel Size	3.45μm × 3.45μm	
Frame Rate	227fps@1440x1080	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	41dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	

Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-4 MER2-160-227U3M(-L) camera specifications

### 4.3.2. Spectral Response

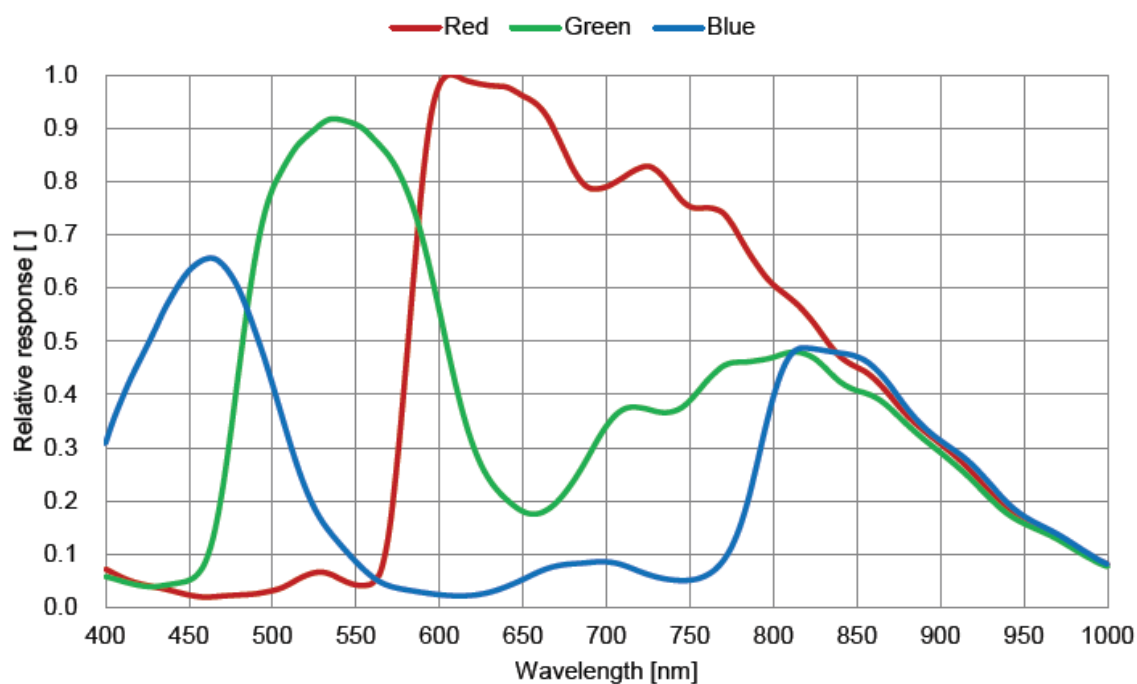


Figure 4-3 MER2-160-227U3C(-L) sensor spectral response

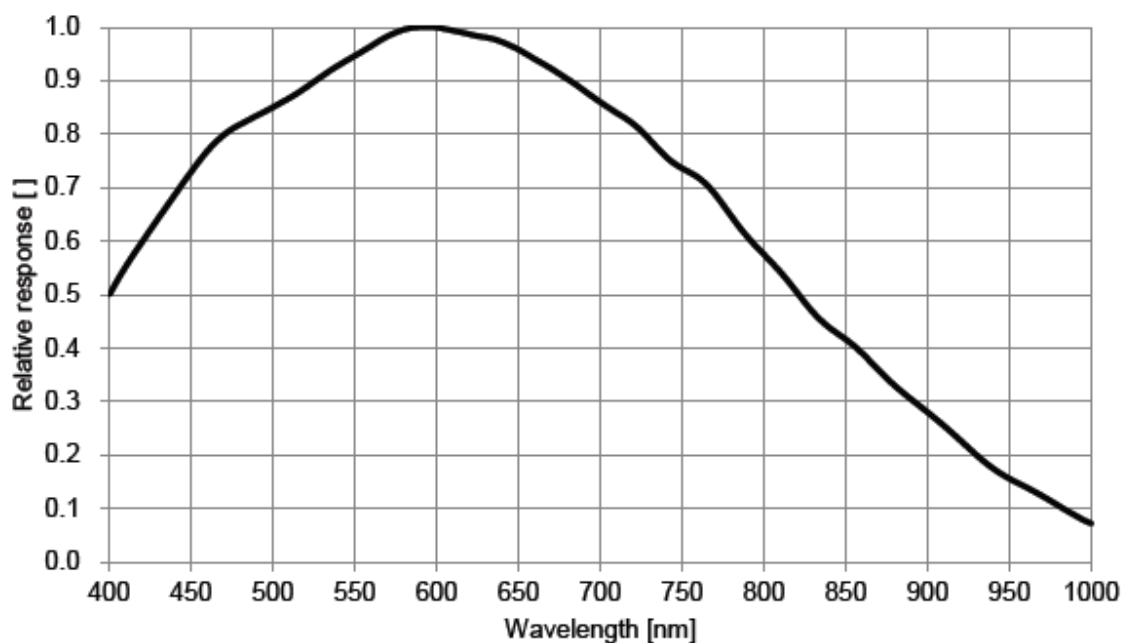


Figure 4-4 MER2-160-227U3M(-L) sensor spectral response

## 4.4. MER2-230-168U3M/C(-L)

### 4.4.1. Parameter

Specifications	MER2-230-168U3C	MER2-230-168U3C-L
Resolution	1920×1200	
Sensor Type	Sony IMX174 global shutter CMOS	
Optical Size	1/1.2 inch	
Pixel Size	5.86μm ×5.86μm	
Frame Rate	168fps@1920×1200	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	

Signal Noise Ratio	45.32dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-5 MER2-230-168U3C(-L) camera specifications

Specifications	MER2-230-168U3M	MER2-230-168U3M-L
Resolution	1920×1200	
Sensor Type	Sony IMX174 global shutter CMOS	
Optical Size	1/1.2 inch	
Pixel Size	5.86μm ×5.86μm	
Frame Rate	168fps@1920×1200	
ADC Bit Depth	10bit	

Pixel Bit Depth	8bit, 10bit	
Shutter Time	20 $\mu$ s~1s	
Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	45.32dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-6 MER2-230-168U3M(-L) camera specifications



### 4.4.2. Spectral Response

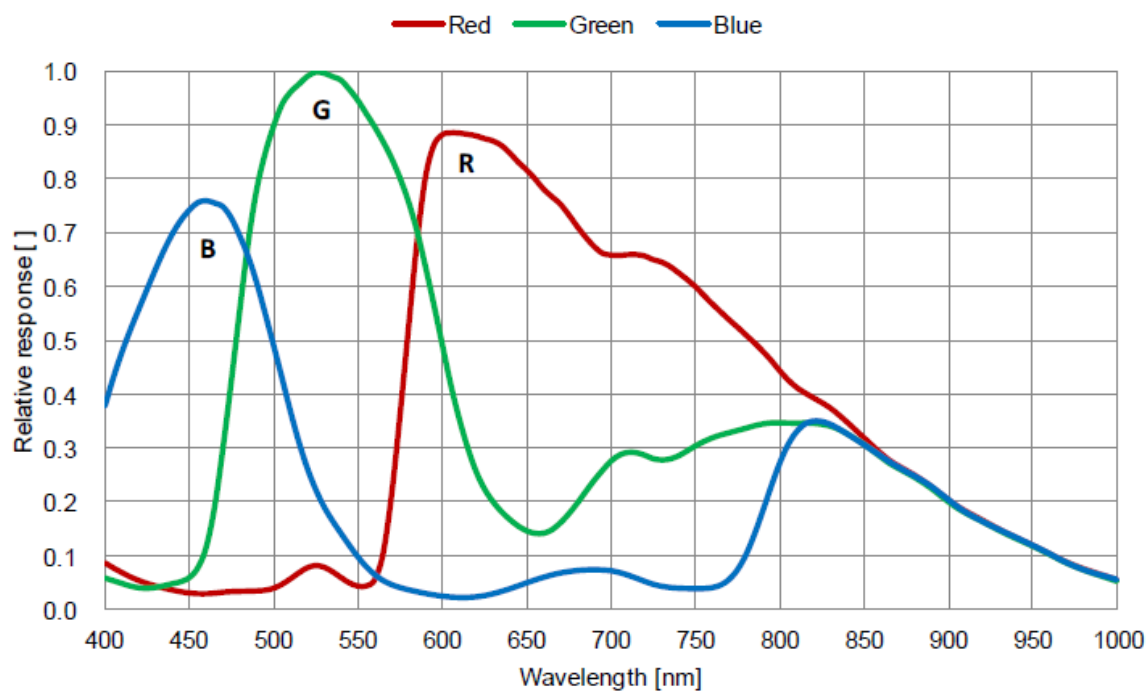


Figure 4-5 MER2-230-168U3C(-L) sensor spectral response

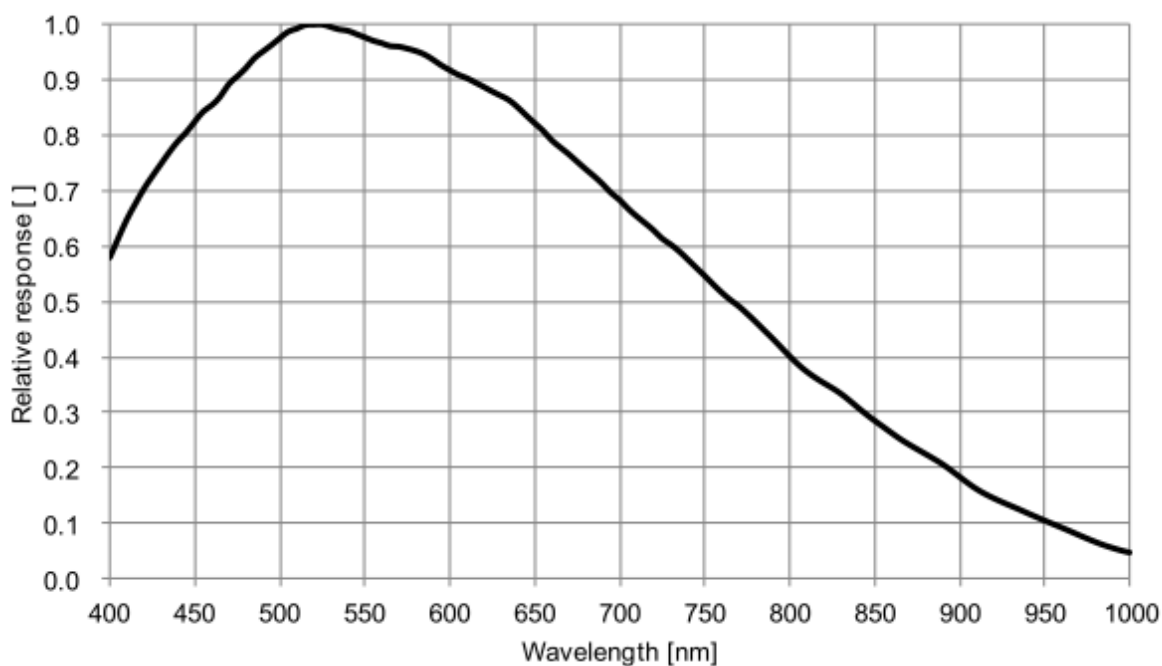


Figure 4-6 MER2-230-168U3M(-L) sensor spectral response

## 4.5. MER2-231-41U3M/C(-L)

### 4.5.1. Parameter

Specifications	MER2-231-41U3C	MER2-231-41U3C-L
Resolution	1920×1200	
Sensor Type	Sony IMX249 global shutter CMOS	
Optical Size	1/1.2 inch	
Pixel Size	5.86μm×5.86μm	
Frame Rate	41fps @ 1920 × 1200	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	
Signal Noise Ratio	45.33dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g

Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-7 MER2-231-41U3C(-L) camera specifications

Specifications	MER2-231-41U3M	MER2-231-41U3M-L
Resolution	1920×1200	
Sensor Type	Sony IMX249 global shutter CMOS	
Optical Size	1/1.2 inch	
Pixel Size	5.86μm×5.86μm	
Frame Rate	41fps @ 1920 × 1200	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	45.33dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	

Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-8 MER2-231-41U3M(-L) camera specifications

#### 4.5.2. Spectral Response

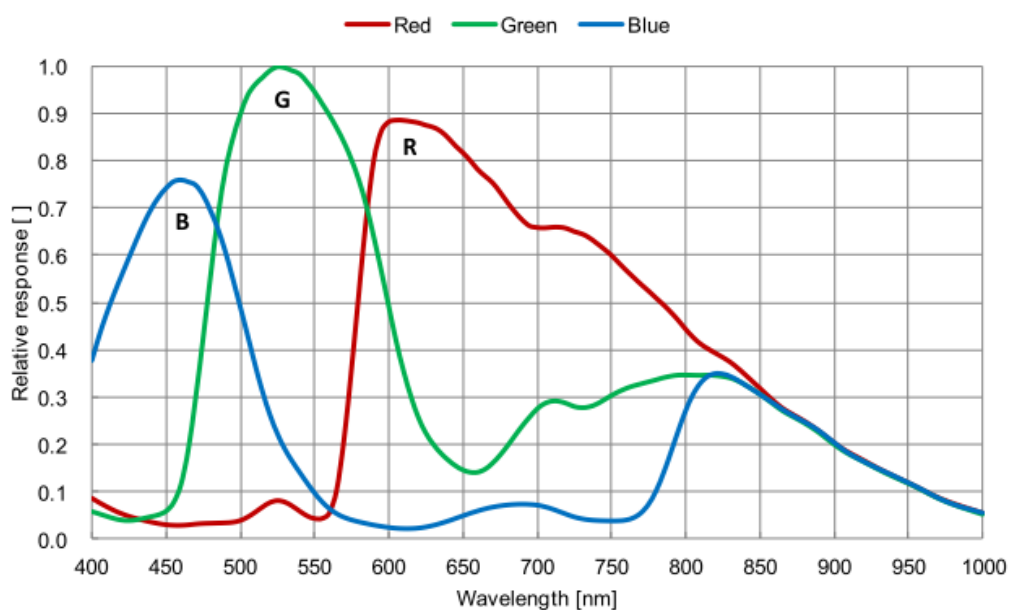


Figure 4-7 MER2-231-41U3C(-L) sensor spectral response

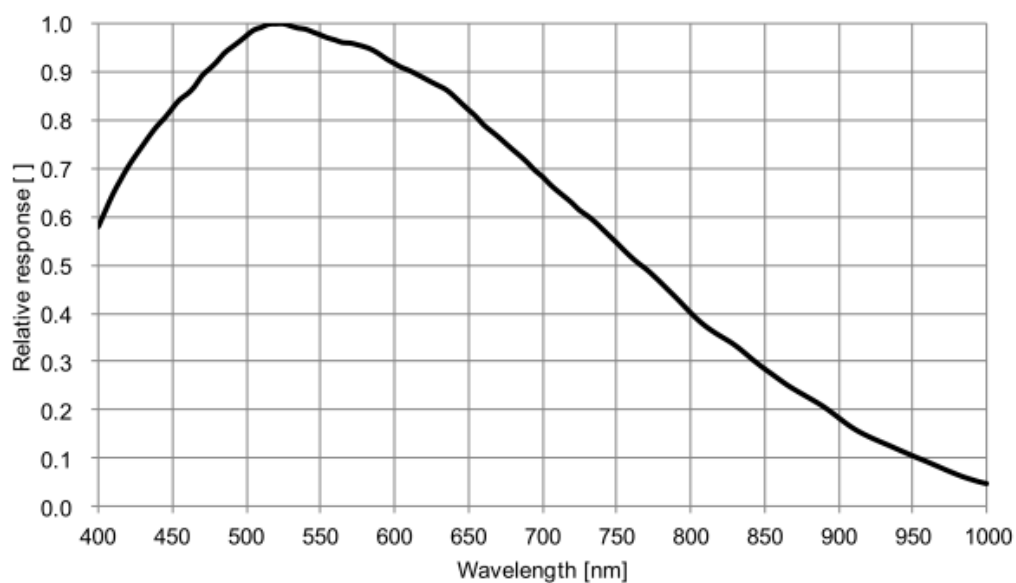


Figure 4-8 MER2-231-41U3M(-L) sensor spectral response

## 4.6. MER2-301-125U3M/C(-L)

### 4.6.1. Parameter

Specifications	MER2-301-125U3C	MER2-301-125U3C-L
Resolution	2048×1536	
Sensor Type	Sony IMX252 global shutter CMOS	
Optical Size	1/1.8 inch	
Pixel Size	3.45μm×3.45μm	
Frame Rate	125fps @ 2048 × 1536	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	
Signal Noise Ratio	40.63dB	

Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-9 MER2-301-125U3C(-L) camera specifications

Specifications	MER2-301-125U3M	MER2-301-125U3M-L
Resolution	2048×1536	
Sensor Type	Sony IMX252 global shutter CMOS	
Optical Size	1/1.8 inch	
Pixel Size	3.45μm×3.45μm	
Frame Rate	125fps @ 2048 × 1536	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	

Shutter Time	20 $\mu$ s~1s	
Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	40.55dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-10 MER2-301-125U3M(-L) camera specifications

### 4.6.2. Spectral Response

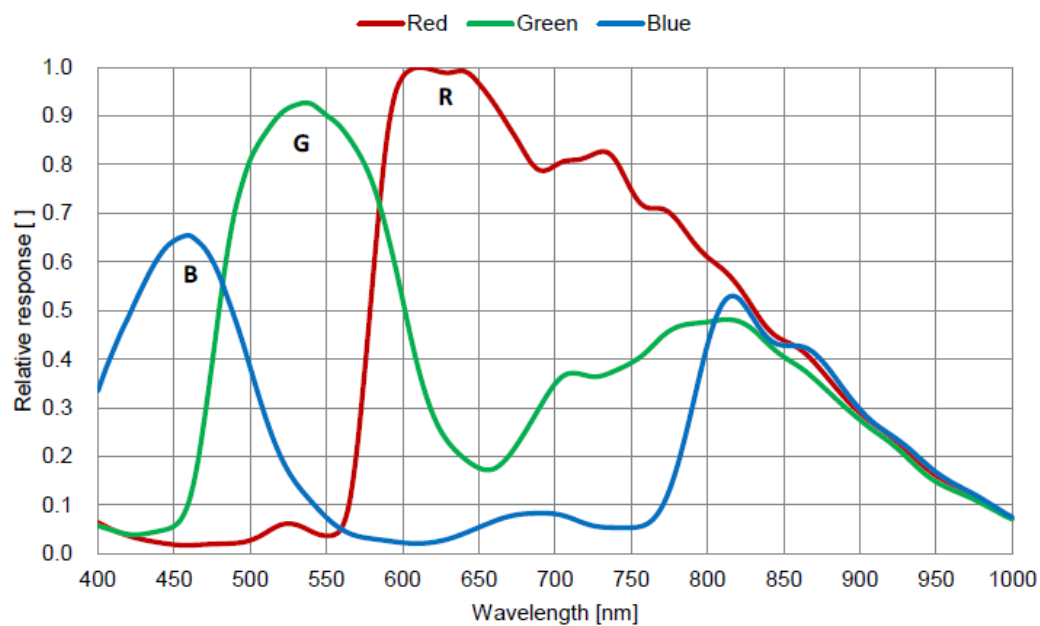


Figure 4-9 MER2-301-125U3C(-L) sensor spectral response

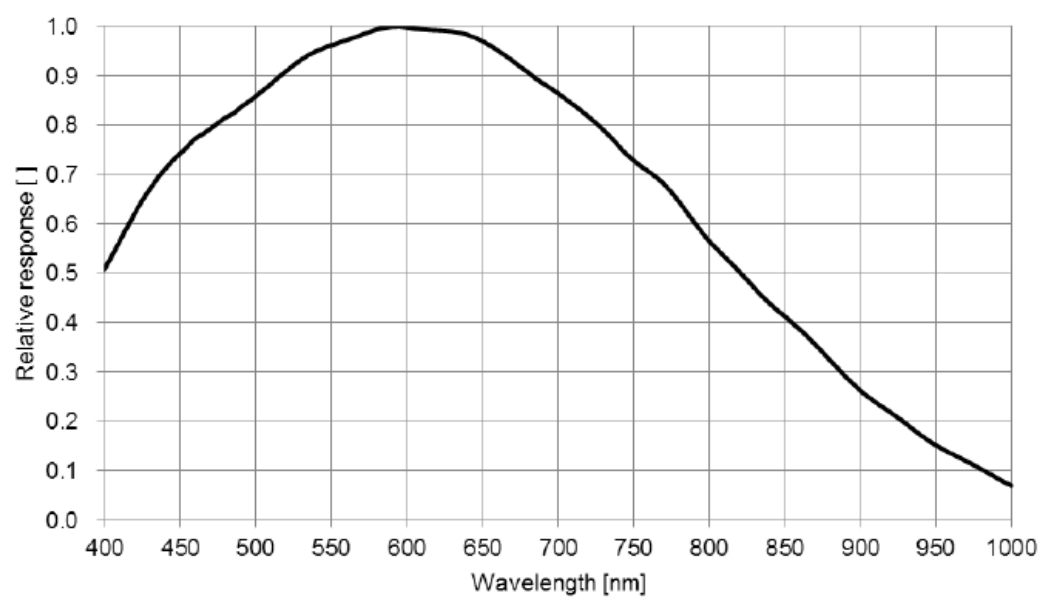


Figure 4-10 MER2-301-125U3M(-L) sensor spectral response



## 4.7. MER2-302-56U3M/C(-L)

### 4.7.1. Parameter

Specifications	MER2-302-56U3C	MER2-302-56U3C-L
Resolution	2048×1536	
Sensor Type	Sony IMX265 global shutter CMOS	
Optical Size	1/1.8 inch	
Pixel Size	3.45μm × 3.45μm	
Frame Rate	56fps@2048×1536	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	
Signal Noise Ratio	40.09dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	

Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-11 MER2-302-56U3C(-L) camera specifications

Specifications	MER2-302-56U3M	MER2-302-56U3M-L
Resolution	2048×1536	
Sensor Type	Sony IMX265 global shutter CMOS	
Optical Size	1/1.8 inch	
Pixel Size	3.45μm × 3.45μm	
Frame Rate	56fps@2048×1536	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	40.76dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	

Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-12 MER2-302-56U3M(-L) camera specifications

#### 4.7.2. Spectral Response

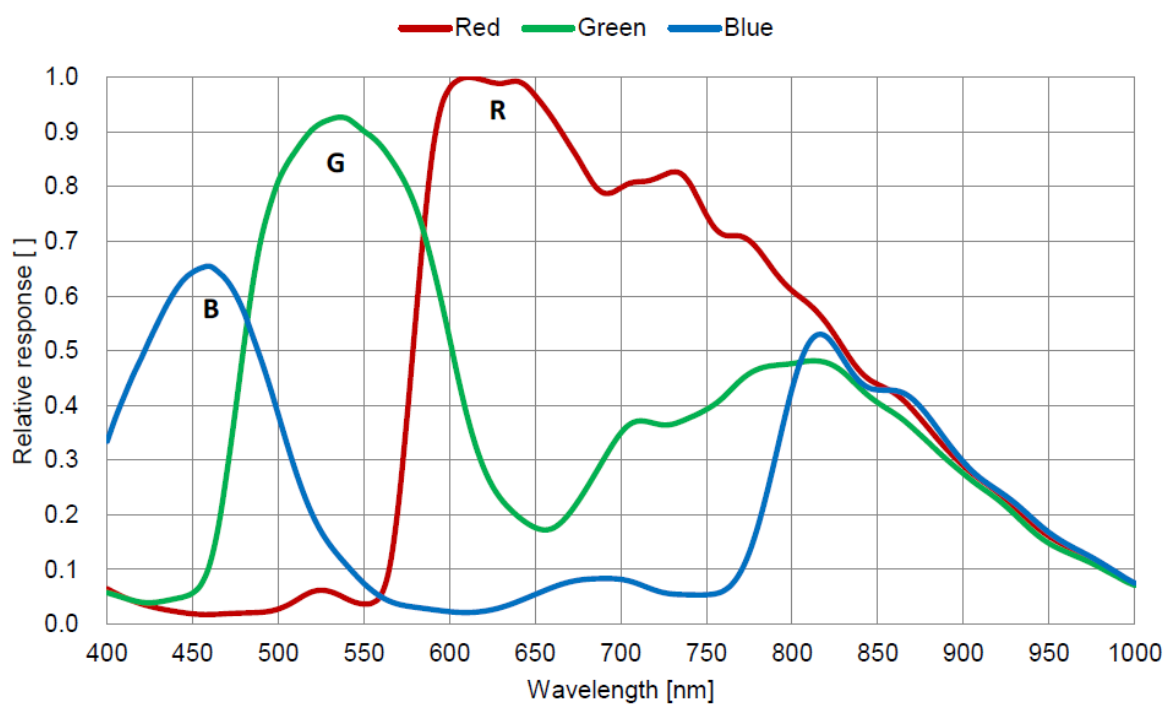


Figure 4-11 MER2-302-56U3C(-L) sensor spectral response

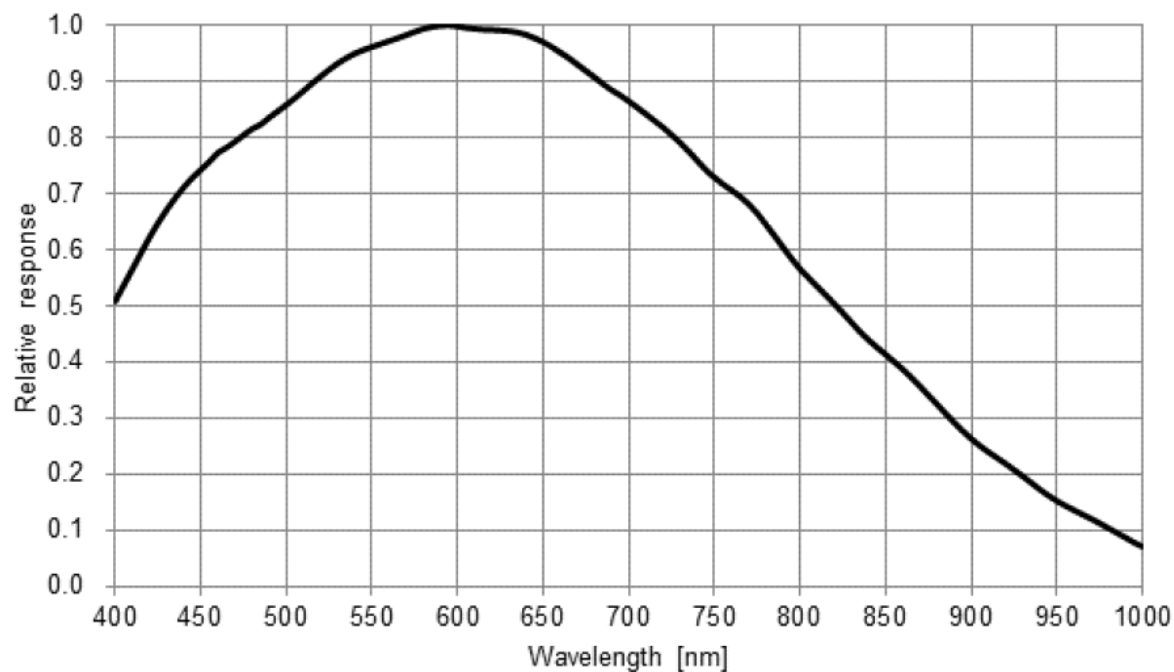


Figure 4-12 MER2-302-56U3M(-L) sensor spectral response

## 4.8. MER2-502-79U3M/C(-L)

### 4.8.1. Parameter

Specifications	MER2-502-79U3C	MER2-502-79U3C-L
Resolution	2448×2048	
Sensor Type	Sony IMX250 global shutter CMOS	
Optical Size	2/3 inch	
Pixel Size	3.45μm×3.45μm	
Frame Rate	79.1fps @ 2448×2048	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	

Signal Noise Ratio	40.58dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-13 MER2-502-79U3C(-L) camera specifications

Specifications	MER2-502-79U3M	MER2-502-79U3M-L
Resolution	2448×2048	
Sensor Type	Sony IMX250 global shutter CMOS	
Optical Size	2/3 inch	
Pixel Size	3.45μm×3.45μm	
Frame Rate	79.1fps @ 2448×2048	
ADC Bit Depth	10bit	

Pixel Bit Depth	8bit, 10bit	
Shutter Time	20 $\mu$ s~1s	
Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	40.65dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-14 MER2-502-79U3M(-L) camera specifications

### 4.8.2. Spectral Response

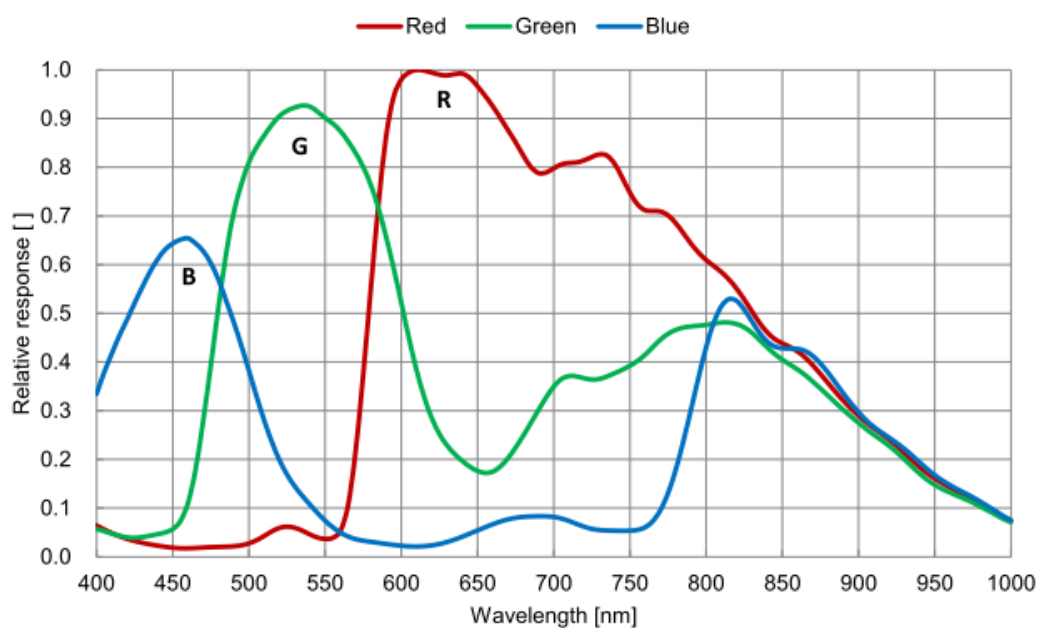


Figure 4-13 MER2-502-79U3C(-L) sensor spectral response

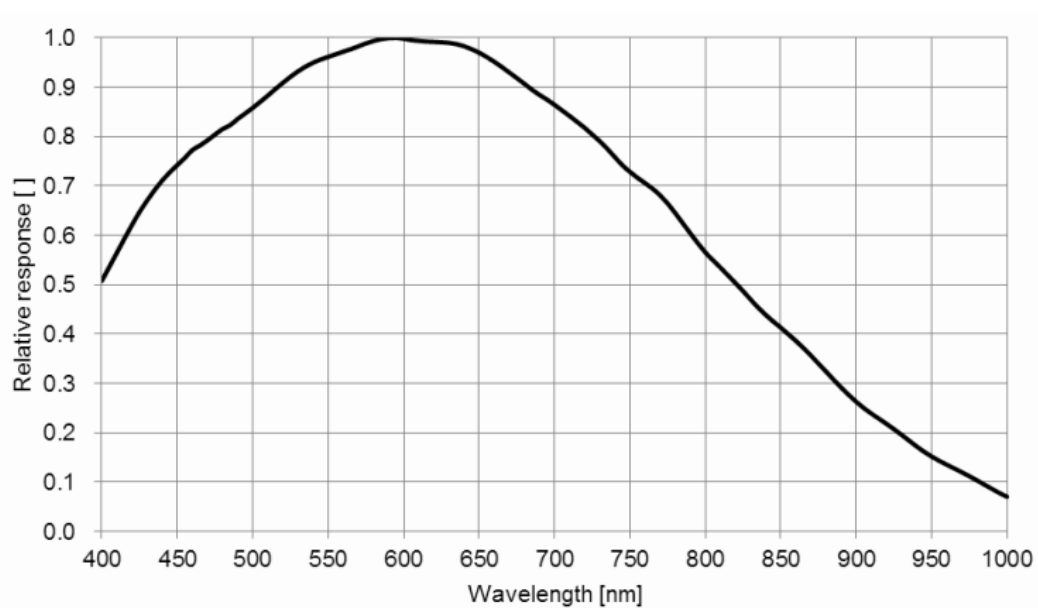


Figure 4-14 MER2-502-79U3M(-L) sensor spectral response

## 4.9. MER2-503-36U3M/C(-L)

### 4.9.1. Parameter

Specifications	MER2-503-36U3C	MER2-503-36U3C-L
Resolution	2448×2048	
Sensor Type	Sony IMX264 global shutter CMOS	
Optical Size	2/3 inch	
Pixel Size	3.45μm×3.45μm	
Frame Rate	36fps @ 2448×2048	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~23.9dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	
Signal Noise Ratio	40.5dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	



Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-15 MER2-503-36U3C(-L) camera specifications

Specifications	MER2-503-36U3M	MER2-503-36U3M-L
Resolution	2448×2048	
Sensor Type	Sony IMX264 global shutter CMOS	
Optical Size	2/3 inch	
Pixel Size	3.45μm×3.45μm	
Frame Rate	36fps @ 2448×2048	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs~1s	
Gain	0dB~23.9dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	40.4dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	

Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-16 MER2-503-36U3C(-L) camera specifications

#### 4.9.2. Spectral Response

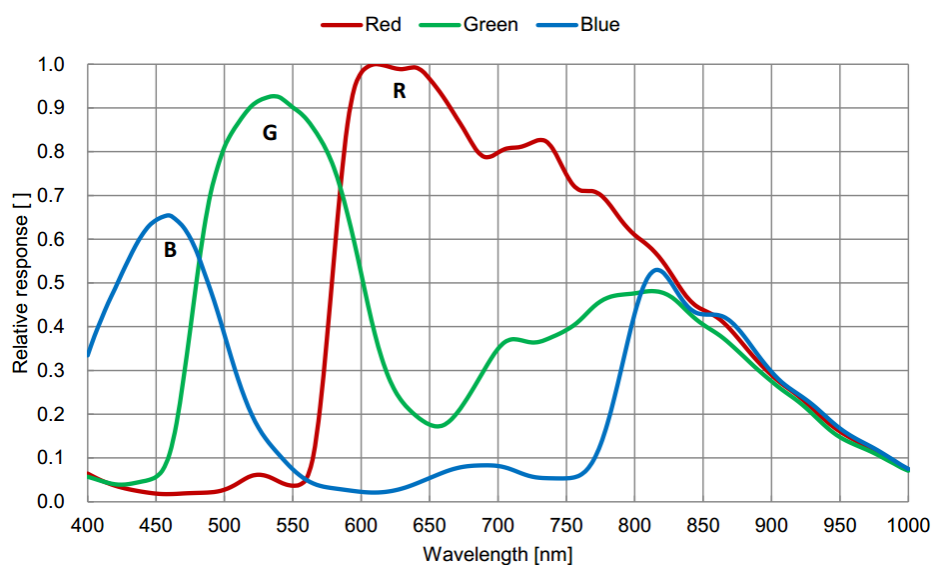


Figure 4-15 MER2-503-36U3C(-L) sensor spectral response

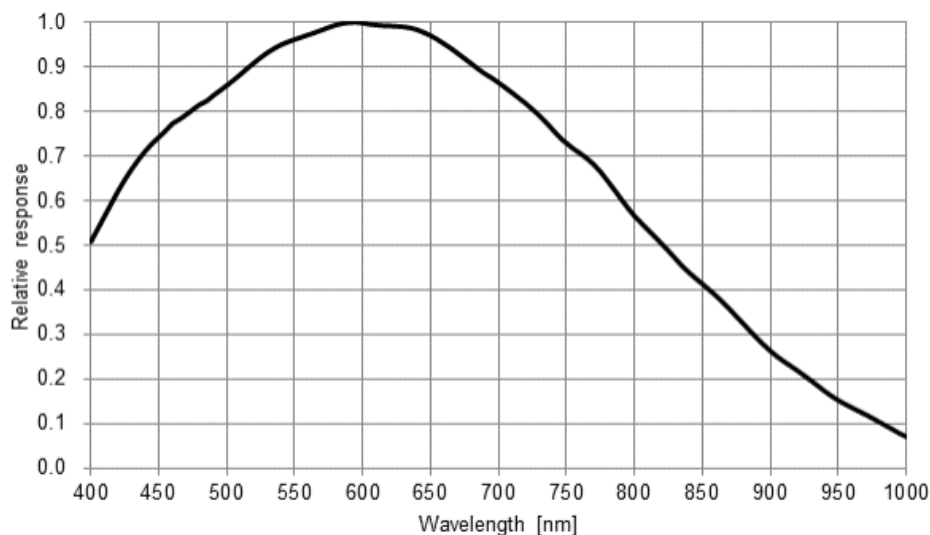


Figure 4-16 MER2-503-36U3M(-L) sensor spectral response

## 4.10. MER2-630-60U3M/C(-L)

### 4.10.1. Parameter

Specifications	MER2-630-60U3C	MER2-630-60U3C-L
Resolution	3088×2064	
Sensor Type	Sony IMX178 rolling shutter CMOS	
Optical Size	1/1.8 inch	
Pixel Size	2.4μm × 2.4μm	
Frame Rate	60fps@3088×2064	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	8μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG10	
Signal Noise Ratio	40.19dB	
Synchronization	External trigger, software trigger	Software trigger

I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-17 MER2-630-60U3C(-L) camera specifications

Specifications	MER2-630-60U3M	MER2-630-60U3M-L
Resolution	3088×2064	
Sensor Type	Sony IMX178 rolling shutter CMOS	
Optical Size	1/1.8 inch	
Pixel Size	2.4μm × 2.4μm	
Frame Rate	60fps@3088×2064	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	8μs~1s	

Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono10	
Signal Noise Ratio	40.18dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-18 MER2-630-60U3M(-L) camera specifications

### 4.10.2. Spectral Response

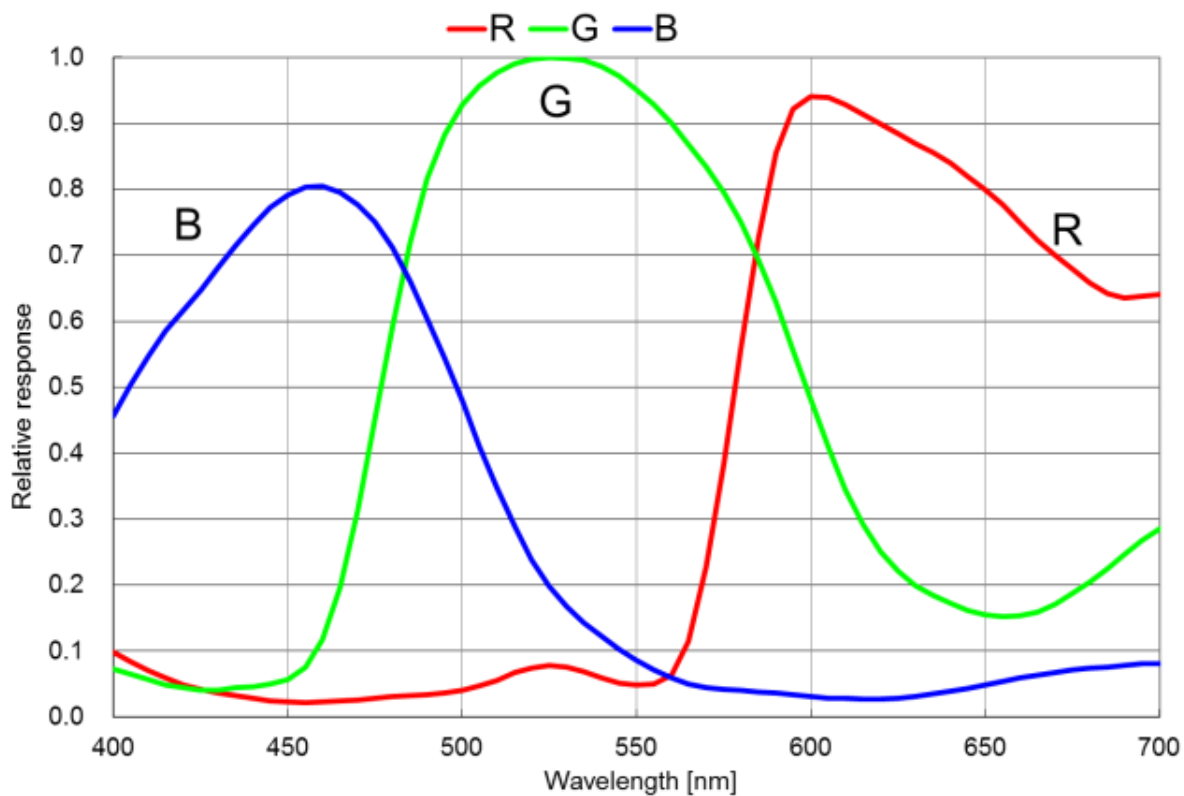


Figure 4-17 MER2-630-60U3C(-L) sensor spectral response

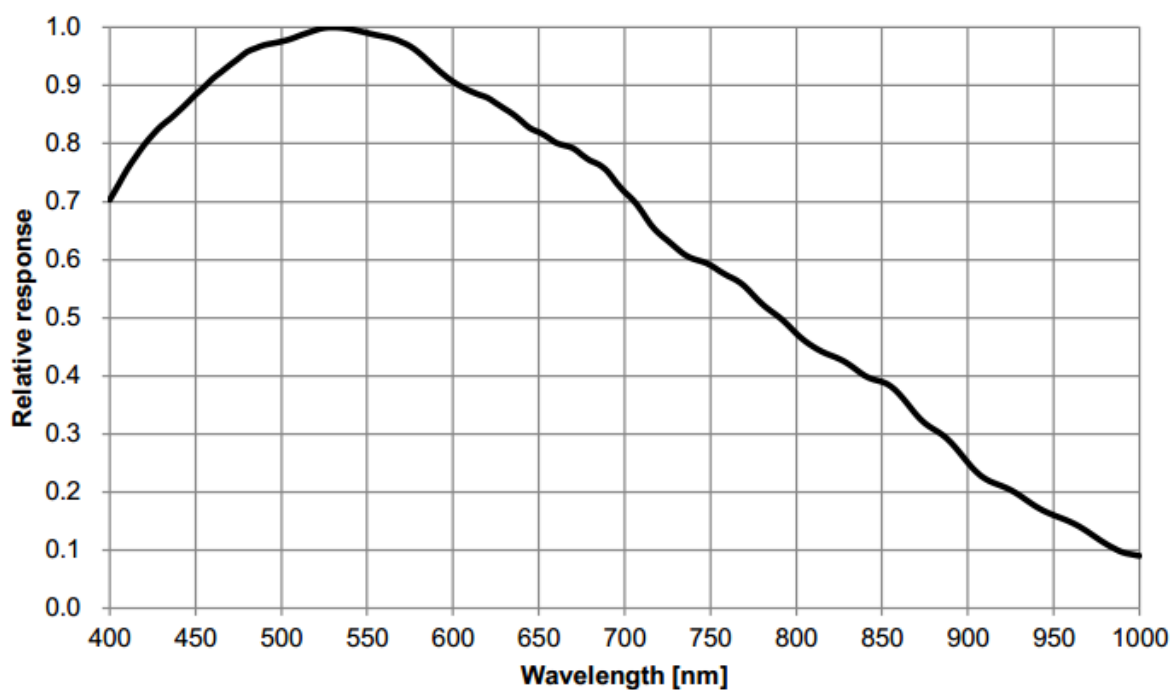


Figure 4-18 MER2-630-60U3M(-L) sensor spectral response

## 4.11. MER2-1220-32U3M/C(-L)

## 4.11.1. Parameter

Specifications	MER2-1220-32U3C	MER2-1220-32U3C-L
Resolution	4024×3036	
Sensor Type	Sony IMX226 rolling shutter CMOS	
Optical Size	1/1.7 inch	
Pixel Size	1.85μm×1.85μm	
Frame Rate	32.3fps @ 4024×3036	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 12bit	
Shutter Time	10μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG12	
Signal Noise Ratio	40.61dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g

Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-19 MER2-1220-32U3C(-L) camera specifications

Specifications	MER2-1220-32U3M	MER2-1220-32U3M-L
Resolution	4024×3036	
Sensor Type	Sony IMX226 rolling shutter CMOS	
Optical Size	1/1.7 inch	
Pixel Size	1.85μm×1.85μm	
Frame Rate	32.3fps @ 4024×3036	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 12bit	
Shutter Time	10μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Mono8/Mono12	
Signal Noise Ratio	40.77dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	



Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-20 MER2-1220-32U3M(-L) camera specifications

#### 4.11.2. Spectral Response

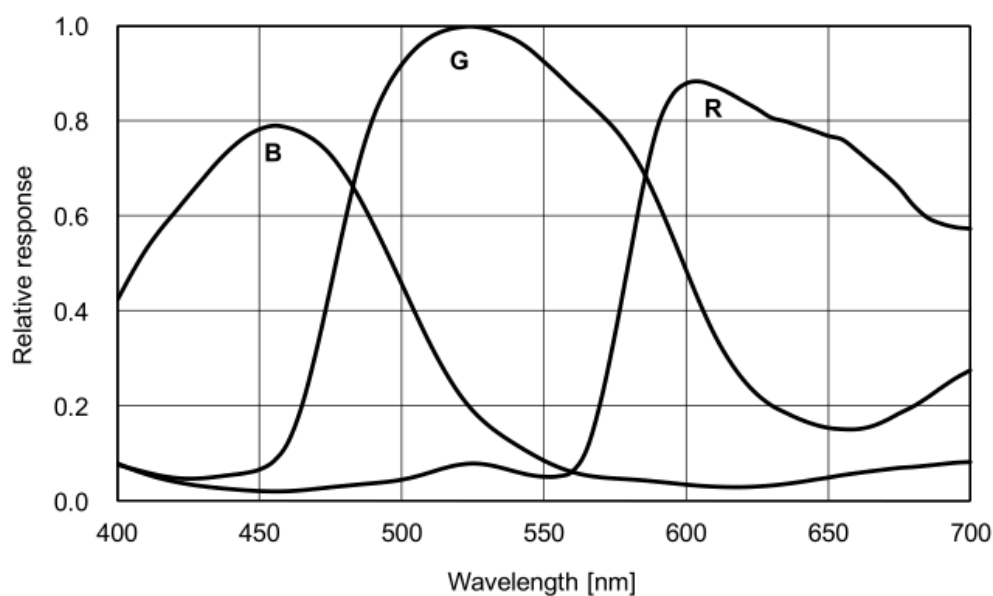


Figure 4-19 MER2-1220-32U3C(-L) sensor spectral response

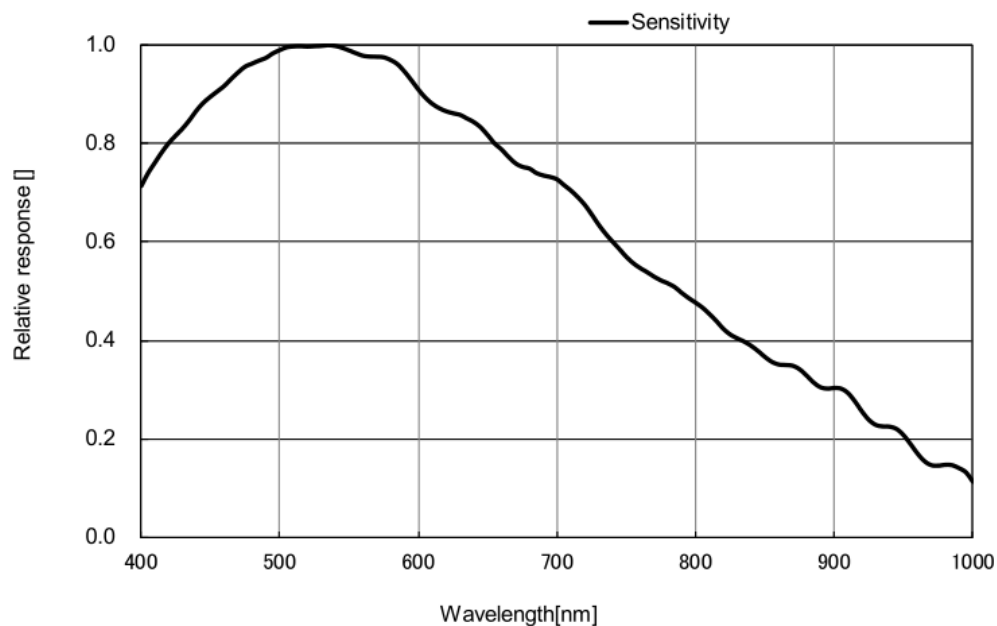


Figure 4-20 MER2-1220-32U3M(-L) sensor spectral response

## 4.12. MER2-2000-19U3M/C(-L)

### 4.12.1. Parameter

Specifications	MER2-2000-19U3C	MER2-2000-19U3C -L
Resolution	5496×3672	
Sensor Type	Sony IMX183 rolling shutter CMOS	
Optical Size	1 inch	
Pixel Size	2.4μm×2.4μm	
Frame Rate	19.6fps @ 5496×3672	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 12bit	
Shutter Time	12μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Bayer RG8/Bayer RG12	
Signal Noise Ratio	41.56dB	

Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-21 MER2-2000-19U3C(-L) camera specifications

Specifications	MER2-2000-19U3M	MER2-2000-19U3M-L
Resolution	5496×3672	
Sensor Type	Sony IMX183 rolling shutter CMOS	
Optical Size	1 inch	
Pixel Size	2.4μm×2.4μm	
Frame Rate	19.6fps @ 5496×3672	
ADC Bit Depth	12bit	
Pixel Bit Depth	8bit, 12bit	

Shutter Time	12μs~1s	
Gain	0dB~24dB	
Pixel Data Formats	Mono8/ Mono12	
Signal Noise Ratio	42.08dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×29mm (without lens adapter or connectors)	
Weight	65g	61g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-22 MER2-2000-19U3M(-L) camera specifications

### 4.12.2. Spectral Response

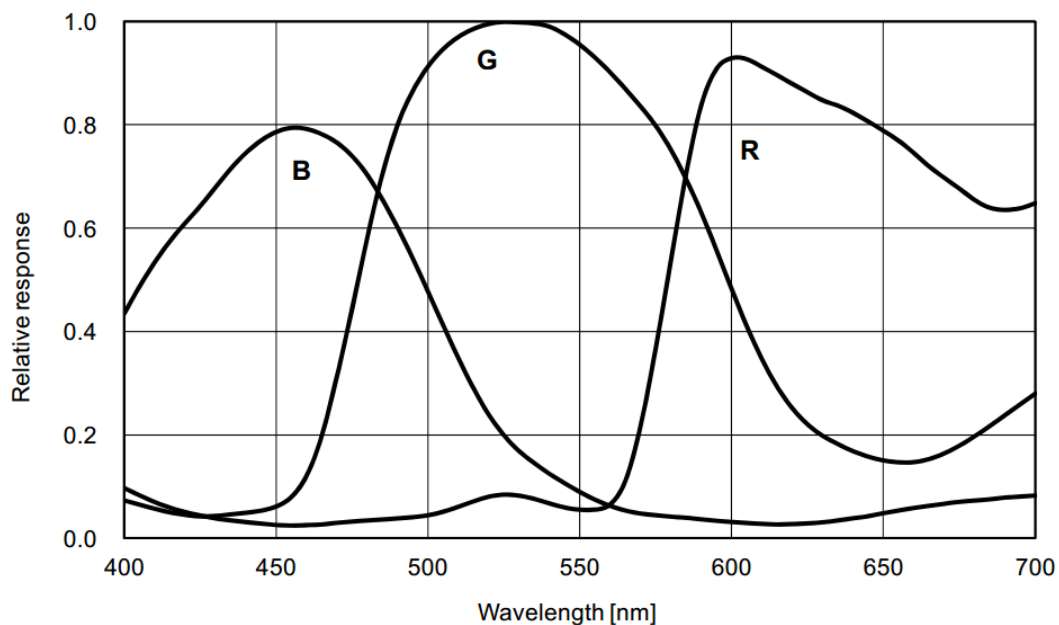


Figure 4-21 MER2-2000-19U3C(-L) sensor spectral response

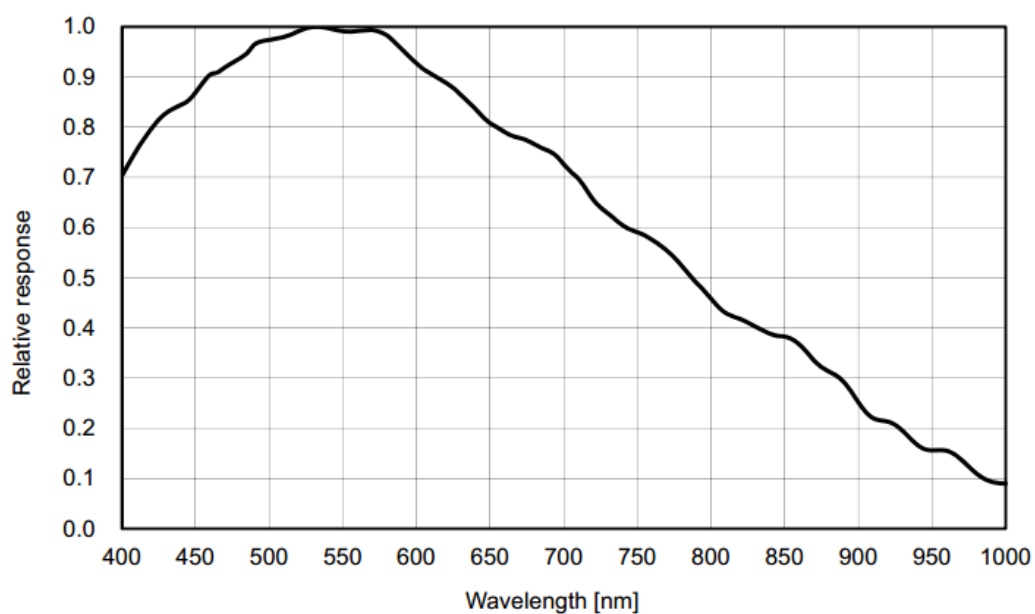


Figure 4-22 MER2-2000-19U3M(-L) sensor spectral response

## 4.13. ME2P-1230-23U3M/C

### 4.13.1. Parameter

Specifications	ME2P-1230-23U3C
Resolution	4096 × 3000

Sensor Type	Sony IMX304 LQR global shutter CMOS
Optical Size	1.1inch
Pixel Size	3.45μm × 3.45μm
Frame Rate	23.5fps @ 4096 × 3000
ADC Bit Depth	12bit
Pixel Bit Depth	8bit, 12bit
Shutter Time	28μs~1s
Gain	0dB~24dB
Pixel Data Formats	Bayer RG8/Bayer RG12
Signal Noise Ratio	40.59dB
Synchronization	External trigger, software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs
Operating Temp.	0°C~45°C
Storage Temp.	-20°C~70°C
Operating Humidity	10%~80%
Power Consumption	< 3.5W@5V
Lens Mount	C
Dimensions	36mmx31mmx38.8mm
Weight	66g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS
Data Interface	USB3.0
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity

Conformity	CE, RoHS, FCC, USB3 Vision, GenICam
------------	-------------------------------------

Table 4-23 ME2P-1230-23U3C camera specifications

Specifications	ME2P-1230-23U3M
Resolution	4096 × 3000
Sensor Type	Sony IMX304 LLR global shutter CMOS
Optical Size	1.1inch
Pixel Size	3.45μm × 3.45μm
Frame Rate	23.5ps @ 4096 × 3000
ADC Bit Depth	12bit
Pixel Bit Depth	8bit, 12bit
Shutter Time	28μs~1s
Gain	0dB~24dB
Pixel Data Formats	Mono8/ Mono12
Signal Noise Ratio	40.47dB
Synchronization	External trigger, software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs
Operating Temp.	0°C~45°C
Storage Temp.	-20°C~70°C
Operating Humidity	10%~80%
Power Consumption	< 3.5W@5V
Lens Mount	C
Dimensions	36mmx31mmx38.8mm

Weight	66g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS
Data Interface	USB3.0
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam

Table 4-24 ME2P-1230-23U3M camera specifications

#### 4.13.2. Spectral Response

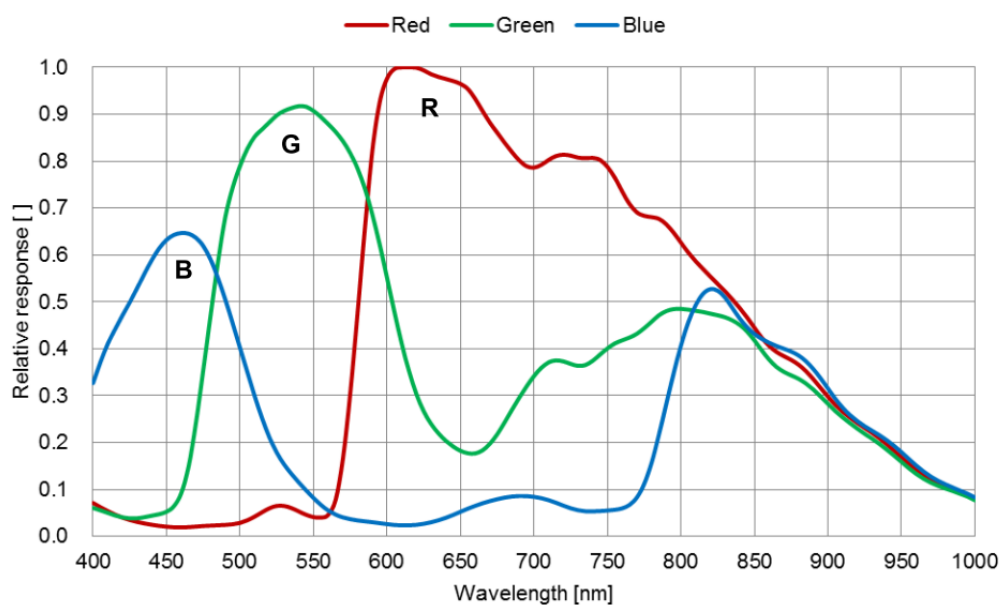


Figure 4-23 ME2P-1230-23U3C sensor spectral response



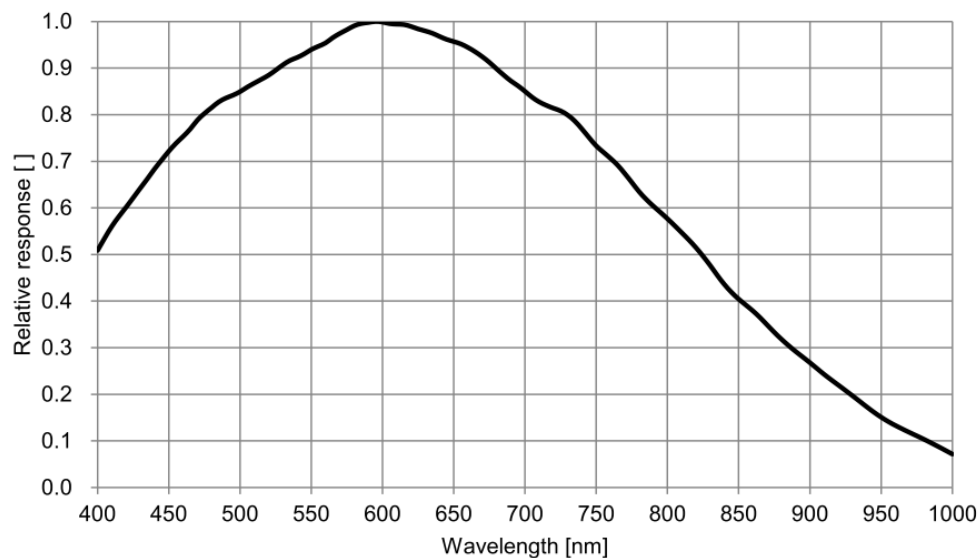


Figure 4-24 ME2P-1230-23U3M sensor spectral response

## 4.14. ME2P-2621-15U3M/C

### 4.14.1. Parameter

Specifications	ME2P- 2621-15U3C
Resolution	5120 × 5120
Sensor Type	GMAX0505 global shutter CMOS
Optical Size	1.1inch
Pixel Size	2.5μm ×2.5μm
Frame Rate	15.1fps @ 5120 × 5120
ADC Bit Depth	12bit
Pixel Bit Depth	8bit, 12bit
Shutter Time	10μs~1s
Gain	0dB~16dB
Pixel Data Formats	Bayer GB8/Bayer GB12
Signal Noise Ratio	36.18dB
Synchronization	External trigger, software trigger

I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs
Operating Temp.	0°C~45°C
Storage Temp.	-20°C~70°C
Operating Humidity	10%~80%
Power Consumption	< 2.5W@5V
Lens Mount	C
Dimensions	36mmx31mmx38.8mm
Weight	66g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS
Data Interface	USB3.0
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam

Table 4-25 ME2P-2621-15U3C camera specifications

Specifications	ME2P-2621-15U3M
Resolution	5120 × 5120
Sensor Type	GMAX0505 global shutter CMOS
Optical Size	1.1inch
Pixel Size	2.5μm ×2.5μm
Frame Rate	15.1ps @ 5120 × 5120
ADC Bit Depth	12bit
Pixel Bit Depth	8bit, 12bit
Shutter Time	10μs~1s

Gain	0dB~16dB
Pixel Data Formats	Mono8/ Mono12
Signal Noise Ratio	36.15dB
Synchronization	External trigger, software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs
Operating Temp.	0°C~45°C
Storage Temp.	-20°C~70°C
Operating Humidity	10%~80%
Power Consumption	< 2.5W@5V
Lens Mount	C
Dimensions	36mmx31mmx38.8mm
Weight	66g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS
Data Interface	USB3.0
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam

Table 4-26 ME2P-2621-15U3M camera specifications

## 4.14.2. Spectral Response

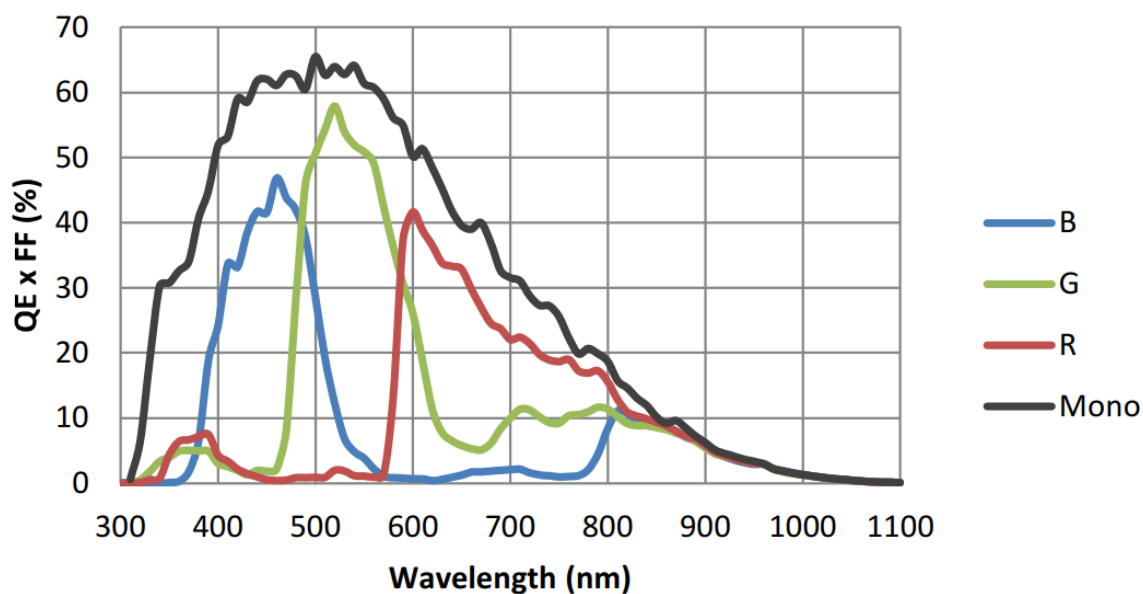


Figure 4-25 ME2P-2621-15U3M/C sensor spectral response

## 4.15. ME2L-161-61U3M(-L)

## 4.15.1. Parameter

Specifications	ME2L-161-61U3M	ME2L-161-61U3M-L
Resolution	1440×1080	
Sensor Type	Sony IMX296 global shutter CMOS	
Optical Size	1/2.9 inch	
Pixel Size	3.45μm × 3.45μm	
Frame Rate	61.2fps@1440×1080	
ADC Bit Depth	10bit	
Pixel Bit Depth	8bit, 10bit	
Shutter Time	20μs ~ 1s	
Gain	0 dB ~ 24dB	
Pixel Data Formats	Mono8/Mono10	

Signal Noise Ratio	40.6dB	
Synchronization	External trigger, software trigger	Software trigger
I/O	1 input and 1 output with opto-isolated, 2 programmable GPIOs	N/A
Operating Temp.	0°C~45°C	
Storage Temp.	-20°C~70°C	
Operating Humidity	10%~80%	
Power Consumption	< 2.7W@5V	
Lens Mount	C	
Dimensions	29mm×29 mm×28.1mm (without lens adapter or connectors)	
Weight	47g	44g
Software	Windows XP/Win7/Win8/Win10 32bit, 64bit OS	
Data Interface	USB3.0	
Programmable Control	Image size, gain, exposure time, trigger polarity, flash polarity	Image size, gain, exposure time
Conformity	CE, RoHS, FCC, USB3 Vision, GenICam	

Table 4-27 ME2L-161-61U3M(-L) camera specifications

### 4.15.2. Spectral Response

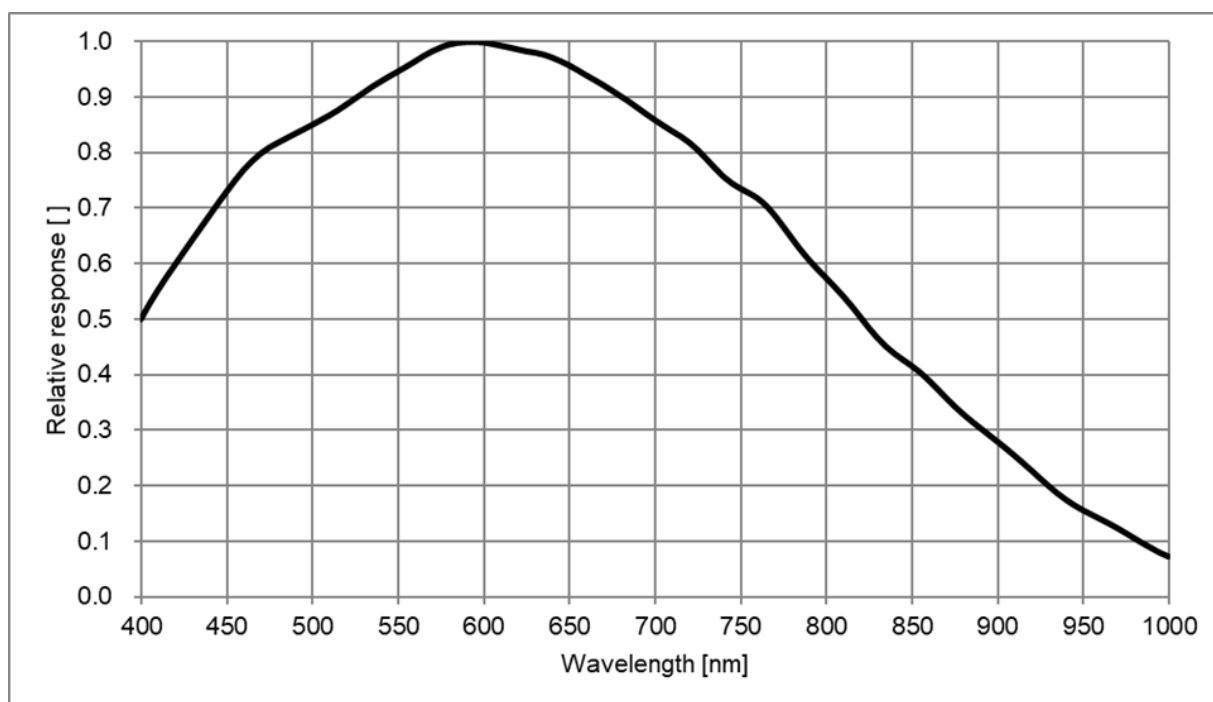


Figure 4-26 ME2L-161-61U3M(-L) sensor spectral response

## 5. Dimensions

### 5.1. Camera Dimensions

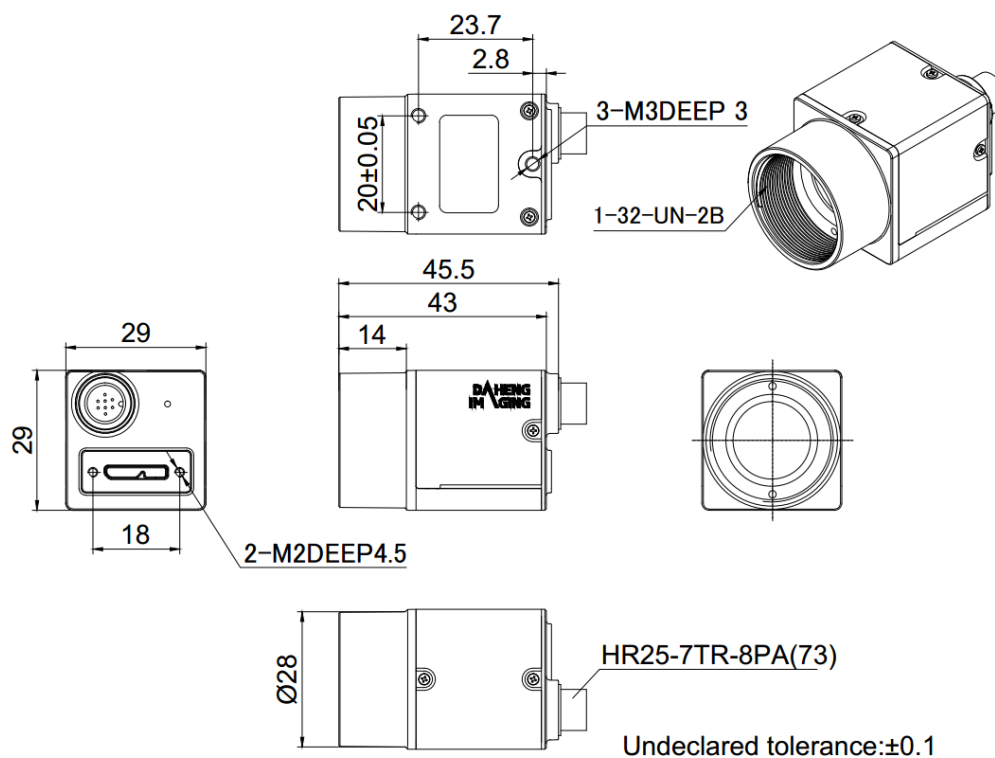


Figure 5-1 MER2-U3 mechanical dimensions

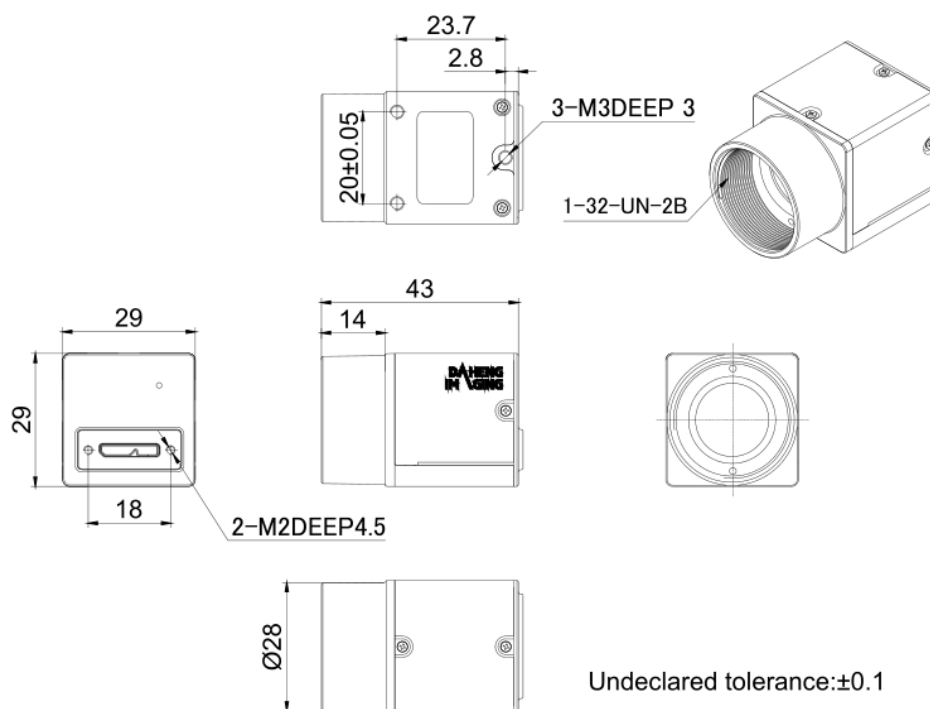


Figure 5-2 MER2-U3-L mechanical dimensions


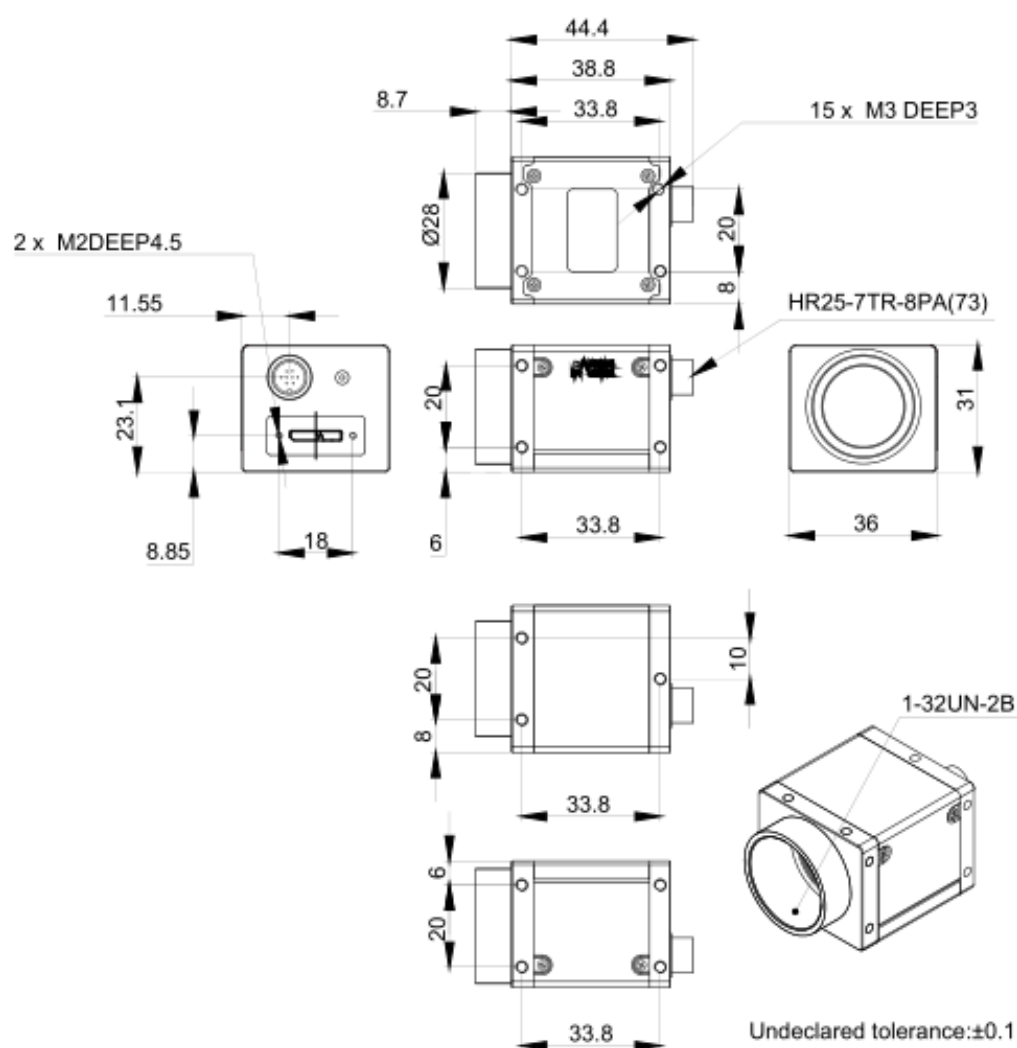


Figure 5-3 ME2P-U3 mechanical dimensions



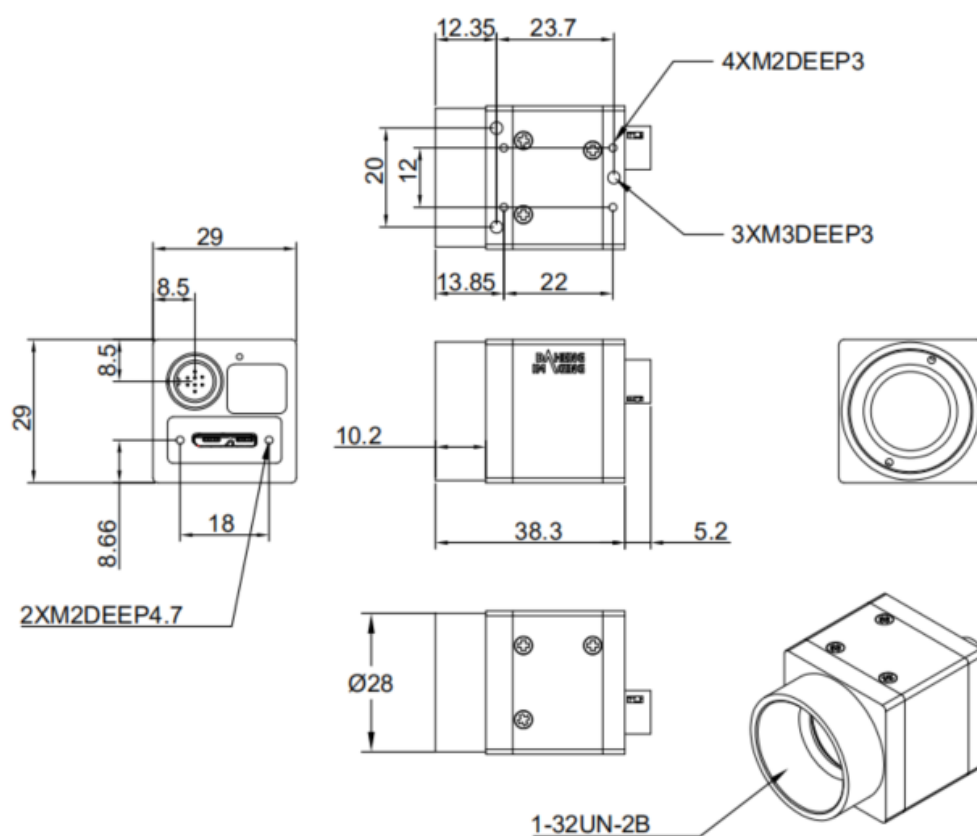

Undeclared tolerance:  $\pm 0.1$

Figure 5-4 ME2L-U3 mechanical dimensions

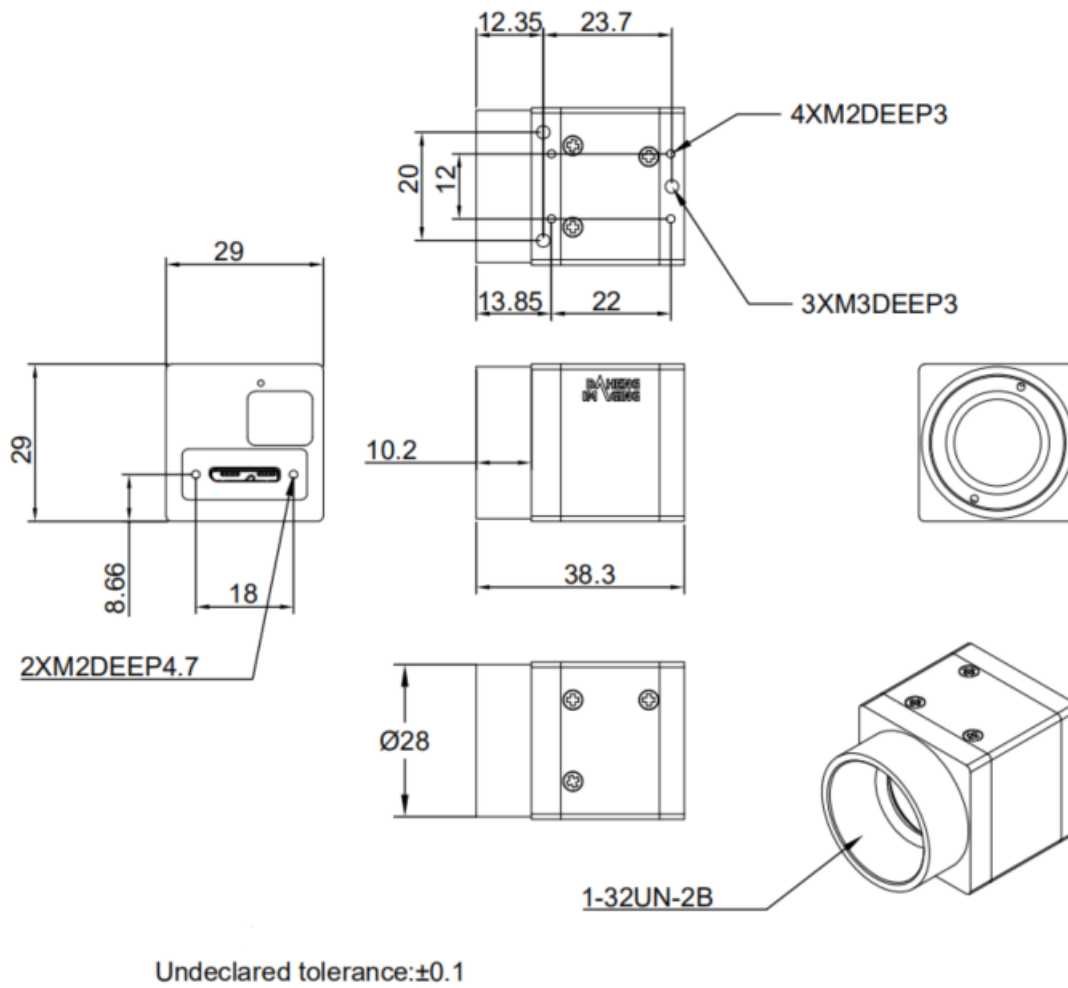


Figure 5-5 ME2L-U3-L mechanical dimensions

## 5.2. Optical Interface

MER2-U3 cameras are equipped with C-mount lens adapters. The back-flange distance is 17.526 mm (in the air). The maximum lens allowed thread length of ME2P and MER2 cameras should be less than 11.3mm, as shown in Figure 5-6. And the maximum lens allowed thread length of ME2L cameras should be less than 9.4mm, as shown in Figure 5-7.

The color models are equipped with an IR filter and the cut-off frequency is 700nm. The mono models are equipped with a transparent glass. Remove IR-filter or transparent glass will defocus the image plane.

Contact our technical support when the glass needed to be removed.

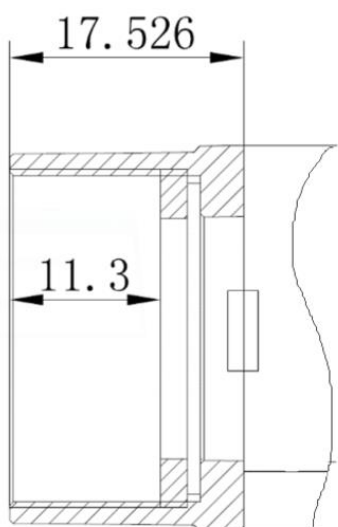


Figure 5-6 C-mount optical interface of ME2P/MER2

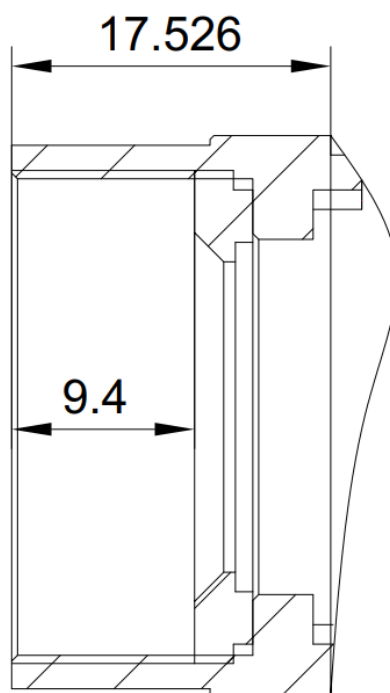


Figure 5-7 C-mount optical interface of ME2L

### 5.3. Tripod Adapter Dimensions

When customizing the tripod adapter, you need to consider the relationship between tripod adapter, screw length and step thickness of tripod adapter.

- 1) Screw length = tripod adapter step thickness + spring washer thickness + screwing length of camera screw thread

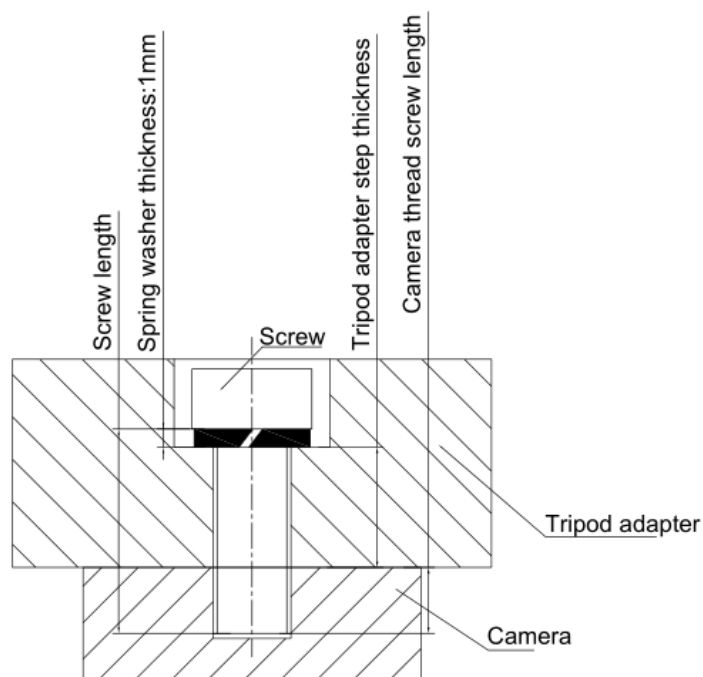


Figure 5-8 Schematic diagram of screw specification, tripod adapter step thickness and spring washer thickness

- 2) It is recommended that you select the screw specifications and the tripod adapter step thickness from the table below:

Screw specification	Tripod adapter step thickness (mm)	Spring washer thickness (mm)	Screwing length of camera screw thread (mm)
M3*6 hexagon socket head cap screw	2.5	0.8	2.7
M3*8 hexagon socket head cap screw	4.5	0.8	2.7
M3*10 hexagon socket head cap screw	6.5	0.8	2.7
M2*4 hexagon socket head cap screw	1.1	0.6	2.3
M2*5 hexagon socket head cap screw	2.1	0.6	2.3
M2*6 hexagon socket head cap screw	3.1	0.6	2.3



If the screw specification and the thickness of the tripod adapter do not conform to the above table, it may cause the camera thread hole through or thread stripping.

## 6. Filters and Lenses

### 6.1. Filters

The MERCURY2 color models are equipped with IR filters. The monochrome models are equipped with transparent glasses.

Contact our technical support when the glass needed to be removed.

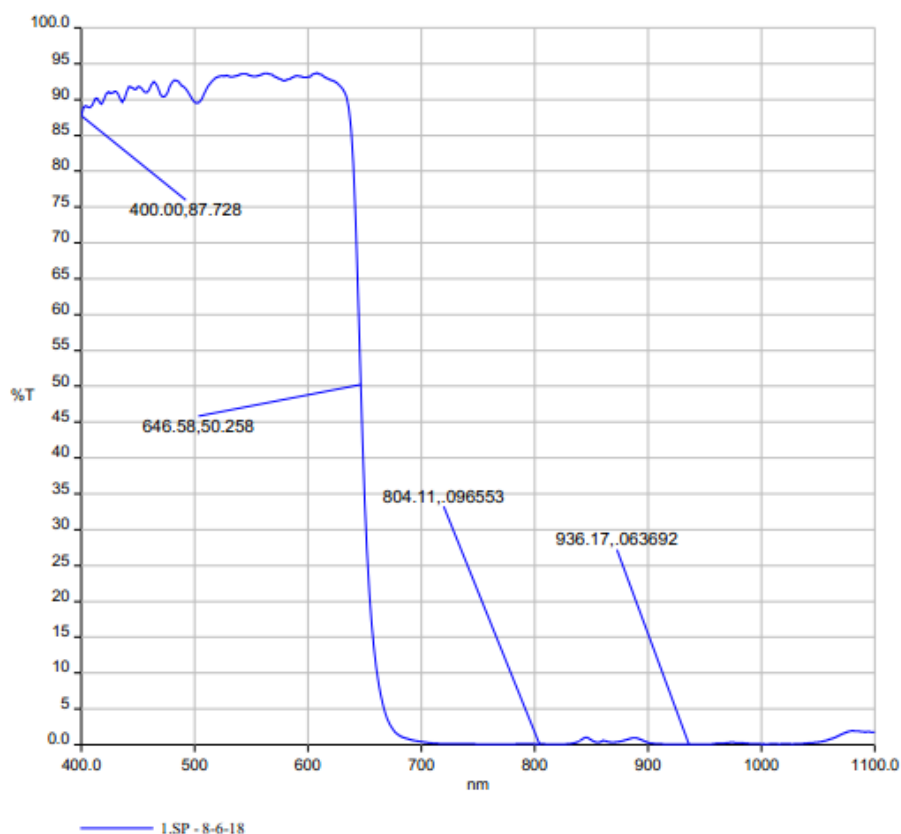


Figure 6-1 Infrared cut-off filter transmittance curve for MERCURY2 series color camera

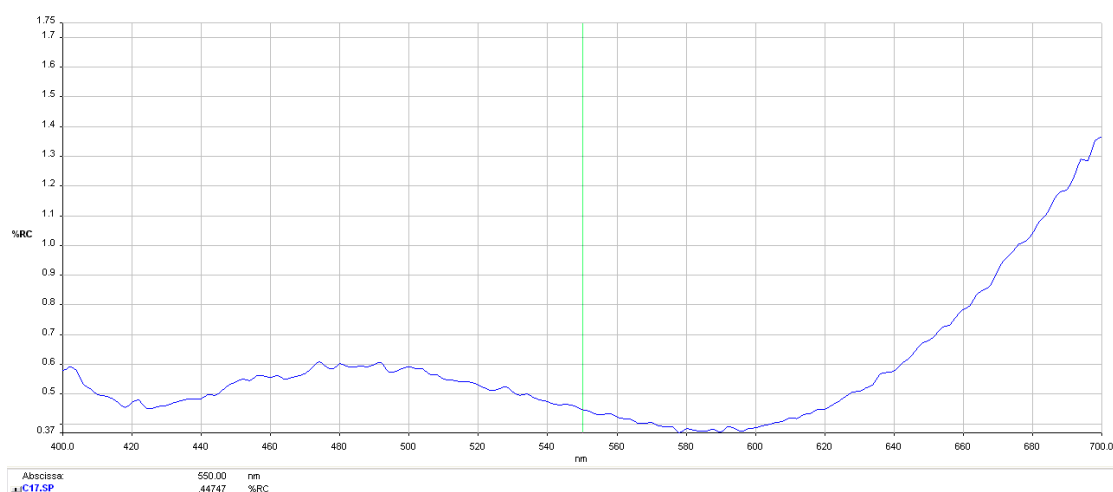


Figure 6-2 Transparent glass reflectance curve for MERCURY2 series mono camera

## 6.2. Lens Selection Reference

DAHENG IMAGING is a professional supplier for images and machine vision devices in China. In addition to industrial cameras, it also provides high-resolution, high-optical machine vision lenses for a wide range of industrial cameras on the market.

In order to meet the requirements of machine vision for high resolution and low distortion, DAHENG IMAGING released two series of lenses, including industrial lenses of 2 megapixels and 5 megapixels, with small size, light weight, high resolution and low distortion rate, etc.

When choosing a lens, there are several factors to consider:

### 1) Mount

- The lens and camera connection methods, commonly used mounts include C, CS, F, V, Leica, M42, M58, M72, M90, and so on
- The MERCURY2 series USB3.0 digital camera is equipped with a standard C-Mount. When selecting a lens, select the lens of the same mount as the camera

### 2) Optical size

- The maximum sensor size that the lens image can cover. There are mainly 1/2", 2/3", 1/1.2", 1", 1.1", 4/3", and so on
- When selecting a lens, make sure that the optical size of the lens is not smaller than the sensor size of the digital camera

### 3) Resolution

- The resolution represents the ability of the lens to record the details of the object, usually in units of line pairs that can be resolved per millimeter: line pair/mm (lp/mm). The higher the resolution of the lens, the sharper the image
- When selecting a lens, make sure that the accuracy required by the system is less than the resolution of the lens

### 4) Working distance

- The distance from the first working surface of the lens to the object being measured
- When selecting a lens, make sure that the working distance is larger than the lens parameter "minimum object distance"

### 5) Focal length

- The focal length is the distance from the center point of the lens to the clear image formed on the focal plane. The smaller the focal length, the larger the field of view of the digital camera
- For focal length calculation, we need to confirm three parameters: the field of view, the sensor size of the digital camera and the working distance. The focal length (f) of the expected lens can be calculated by the following formula

$f$  = sensor size (horizontal or vertical) \* Working distance / Field of View (corresponding to the horizontal or vertical direction of the sensor size)

The corresponding lens is selected by the calculated focal length.

### 6.2.1. HN-2M Series

The HN-2M series lenses are 2 megapixels for industrial, suitable for sensors with optical size of 1/2" ~ 2/3". This series of lenses has the following features:

- High optical performance with optical design supporting up to 2/3" sensor size, 6.2μm pixel size (up to 2 megapixels) sensor. 8 models with F values below 2.8, clear images can be obtained even in low light environment
- Excellent anti-shock and anti-vibration performance, with a unique mechanical structure, optical axis changes below 10μm
- The housing is small and compact, the minimum outer diameter is only φ29.5mm, and it can be installed in various limited spaces
- Easy to install, there are 3 fixing holes on the lens barrel for fixing the iris and focusing. The best fixing hole can be selected according to the installation environment

Models:

- HN-0612-2M-C1/2X
- HN-0914-2M-C2/3X
- HN-12.514-2M-C2/3X
- HN-1614-2M-C2/3X
- HN-2514-2M-C2/3X
- HN-3516-2M-C2/3X
- HN-5023-2M-C2/3X
- HN-7528-2M-C2/3X

### 6.2.2. HN-5M Series

The HN-5M series lenses are 5 megapixels for industrial, suitable for sensors with optical size of 2/3" ~ 1.1". This series of lenses has the following features:

- 5 megapixels resolution, the definition is consistent from the center to the periphery, greatly improving the distance between iris and photography
- The housing is small and compact, the minimum outer diameter is only φ29.5mm, and it can be installed in various limited spaces

- Easy to install, there are 3 fixing holes on the lens barrel for fixing the iris and focusing. The best fixing hole can be selected according to the installation environment

Models:

- HN-0619-5M-C2/3X
- HN-0816-5M-C2/3X
- HN-1216-5M-C2/3X
- HN-1616-5M-C2/3X
- HN-2516-5M-C2/3X
- HN-3519-5M-C2/3X
- HN-5024-5M-C2/3X



## 7. Electrical Interface

### 7.1. LED Light

An LED light is set on the back cover of camera which indicates camera's status, as shown in Table 7-1. LED light can display 3 colors: red, yellow and green.

LED status	Camera status
Off	The camera is powered off
Solid red	The camera is not boot-loaded
Flashing red	The camera is in low power consumption mode
Solid green	The camera has been boot-loaded, but no data is being transmitted
Flashing green	Data is being transmitted
Flashing yellow	The camera's initialization failed

Table 7-1 Camera status

### 7.2. USB Port

Recommend to use the cables officially recognized by USB IF.

### 7.3. I/O Port

#### 7.3.1. MER2/ME2P Series

I/O port is implemented by Hirose 8-pin receptacle (No. HR25-7TR-8PA(73)), and the corresponding plug is HR25-7TP-8S.

Diagram	Pin	Definition	Core Color	Description
	1	Line0+	Green	Opto-isolated input +
	2	GND	Blue	GPIO GND
	3	Line0-	Grey	Opto-isolated input -
	4	NC	Purple	NC
	5	Line2	Orange	GPIO input/output
	6	Line3	Pink	GPIO input/output

	7	Line1-	White Green	Opto-isolated output -
	8	Line1+	White Blue	Opto-isolated output +

Table 7-2 I/O port definition (back sight of the camera)



The polarity of GPIO pins cannot be reversed, otherwise, camera or other peripherals could burn out.

#### 7.3.1.1. Line0 (Opto-isolated Input) Circuit

Hardware schematics of opto-isolated input circuit is shown as Figure 7-1.

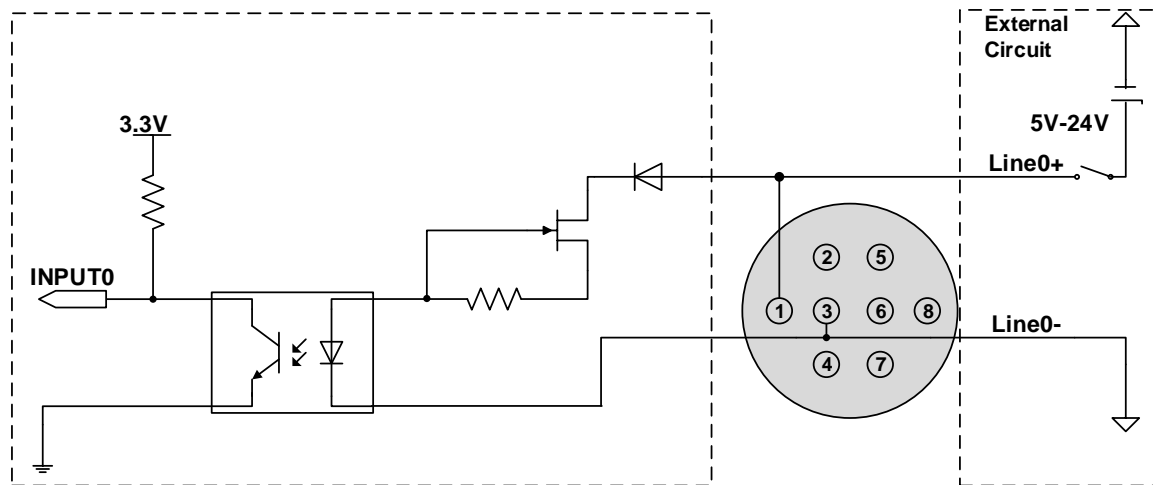


Figure 7-1 Opto-isolated input circuit

- Logic 0 input voltage: 0V~+2.5V (Line0+ voltage)
- Logic 1 input voltage: +5V~+24V (Line0+ voltage)
- Minimum input current: 7mA
- The status is unstable when input voltage is between 2.5V and 5V, which should be avoided
- When peak voltage of input signal over 9V, a current limiting resistor is recommended to protect the input Line0+. The recommended resistance is shown in Table 7-3

External input voltage	Circuit-limiting resistance R <sub>limit</sub>	Line0+ input voltage
9V	680Ω	About 5.5V
12V	1kΩ	About 6V
24V	2kΩ	About 10V

Table 7-3 Circuit-limiting resistor value

The connection method of the opto-isolated input circuit and the NPN and PNP photosensor is shown in Figure 7-2 and Figure 7-3. The relationship between the pull-up resistor and the external power supply voltage is shown in Table 7-3.

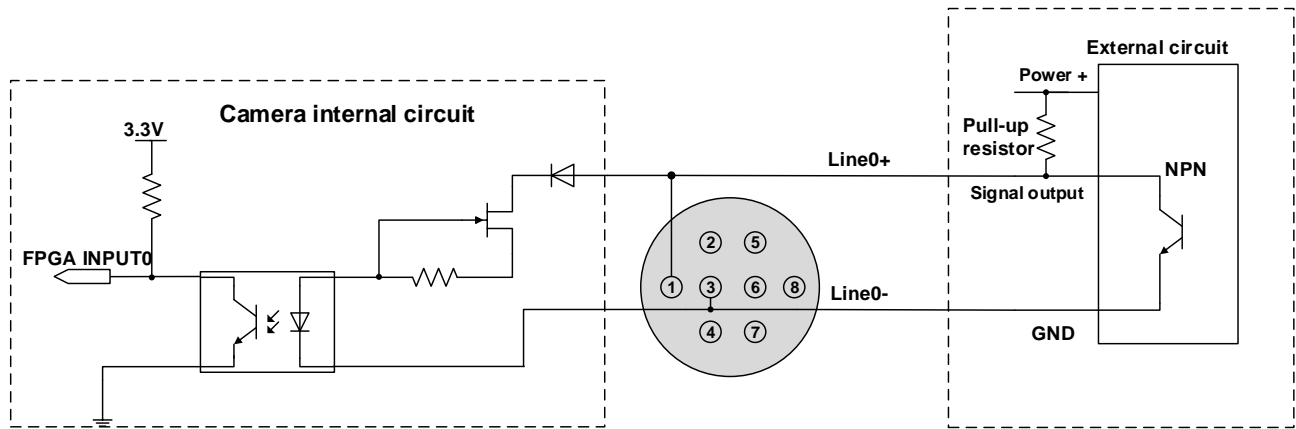


Figure 7-2 NPN photosensor connected to opto-isolated input circuit

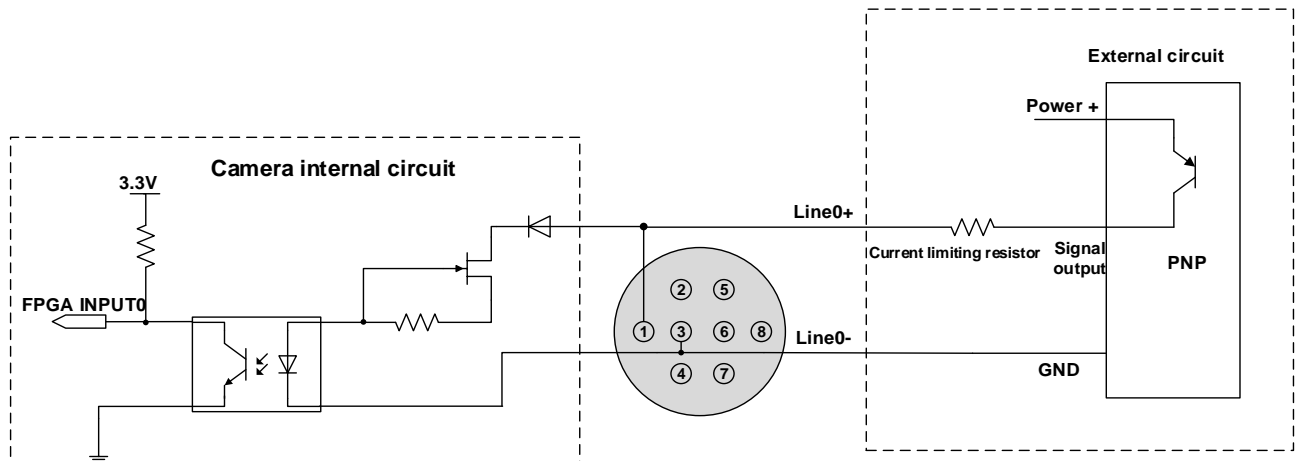


Figure 7-3 PNP photosensor connected to opto-isolated input circuit

- Rising edge delay:  $<50\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ), parameter description as shown in Figure 7-4
- Falling edge delay:  $<50\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ), parameter description as shown in Figure 7-4
- Different environment temperature and input voltage have influence on delay time of opto-isolated input circuit. Delay times in typical application environment (temperature is  $25^{\circ}\text{C}$ ) is as shown in Table 7-4

Parameter	Test condition	Value (us)		
Rising edge delay	VIN=5V	3.02	~	6.96
	VIN=12V	2.46	~	5.14
Falling edge delay	VIN=5V	6.12	~	17.71
	VIN=12V	8.93	~	19.73

Table 7-4 Delay time of opto-isolated input circuit in typical application environment

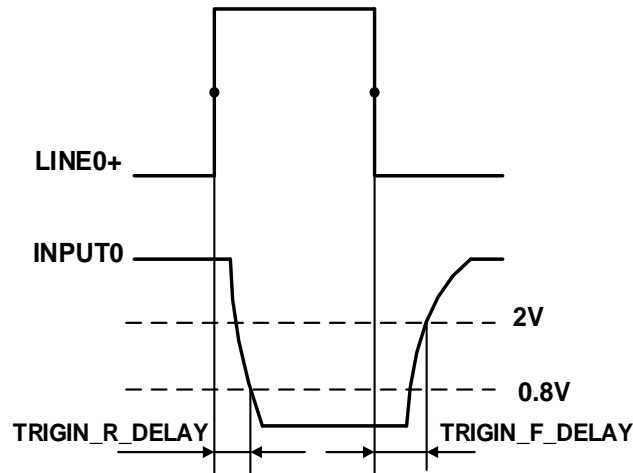


Figure 7-4 Parameter of opto-isolated input circuit

- Rising time delay (TRIGIN\_R\_DELAY): the time required for the response to the decrease to 0.8V of INPUT0 from 50% rising of LINE0+
- Falling time delay (TRIGIN\_F\_DELAY): the time required for the response to the rise to 2V of INPUT0 from 50% falling of LINE0+

#### 7.3.1.2. Line1 (Opto-isolated Output) Circuit

Hardware schematics of opto-isolated output circuit is shown as Figure 7-5.

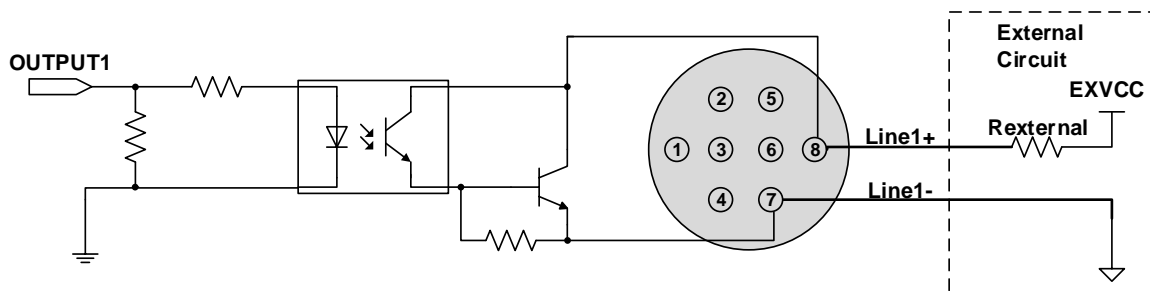


Figure 7-5 Opto-isolated output circuit

- Range of external voltage (EXVCC) is 5~24V
- Maximum output current of Line1 is 25mA
- Output voltage and output current of opto-isolated output circuit in typical application environment (temperature is 25°C) is as shown in Table 7-5

External voltage EXVCC	External resistance Rexternal	Output voltage (V)	Output current (mA)
5V	1kΩ	0.90	4.16
12V	1kΩ	0.97	11.11
24V	1kΩ	1.04	23.08

Table 7-5 Output voltage and output current of opto-isolated output circuit in typical application environment

- Rising time delay =  $t_r + t_d$ :  $< 50\mu s$  ( $0^\circ C \sim 45^\circ C$ ) (parameter description is shown in Figure 7-6)
- Falling time delay =  $t_s + t_f$ :  $< 50\mu s$  ( $0^\circ C \sim 45^\circ C$ ) (parameter description is shown in Figure 7-6)
- Delay time in typical application conditions (environment temperature is  $25^\circ C$ ) are shown in Table 7-6

Parameter	Test Condition	Value (us)		
Storage time ( $t_s$ )	External power is 5V, pull-up resistor is $1k\Omega$	6.16	~	13.26
Delay time ( $t_d$ )		1.90	~	3.16
Rising time ( $t_r$ )		2.77	~	10.60
Falling time ( $t_f$ )		7.60	~	11.12
Rising time delay = $t_r + t_d$		4.70	~	13.76
Falling time delay = $t_f + t_s$		14.41	~	24.38

Table 7-6 Delay time of opto-isolated output circuit in typical application environment

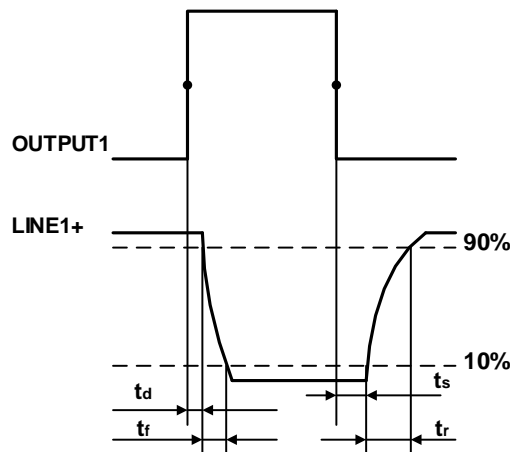


Figure 7-6 Parameter of opto-isolated output circuit

- Delay time ( $t_d$ ): the time required from 50% rising of OUTPUT1 to the decrease to 90% of the maximum value of LINE1+
- Falling time ( $t_f$ ): the time taken for the amplitude of LINE1+ to decrease from 90% to 10% of the maximum value
- Storage time ( $t_s$ ): the time required from 50% falling of OUTPUT1 to the rise to 10% of the maximum value of LINE1+
- Rising time ( $t_r$ ): the time for the response of LINE1+ to rise from 10% to 90% of its final value

#### 7.3.1.3. GPIO 2/3 (Bidirectional) Circuit

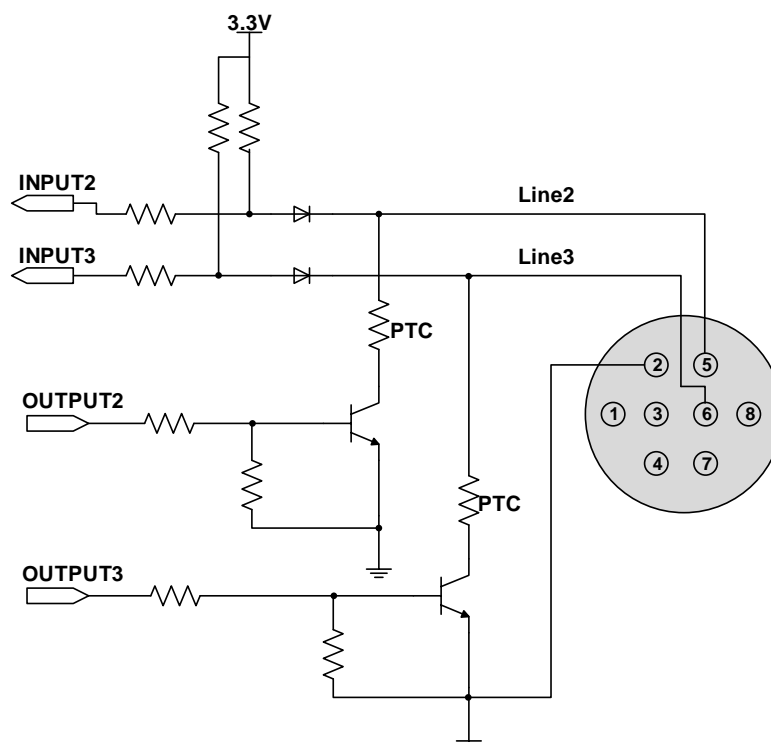


Figure 7-7 GPIO 2/3 (bidirectional) circuit

#### 7.3.1.3.1. Line2/3 is Configured as Input

- When Line2/3 is configured as input, the internal equivalent circuit of camera is shown in Figure 7-8, taking Line2 as an example

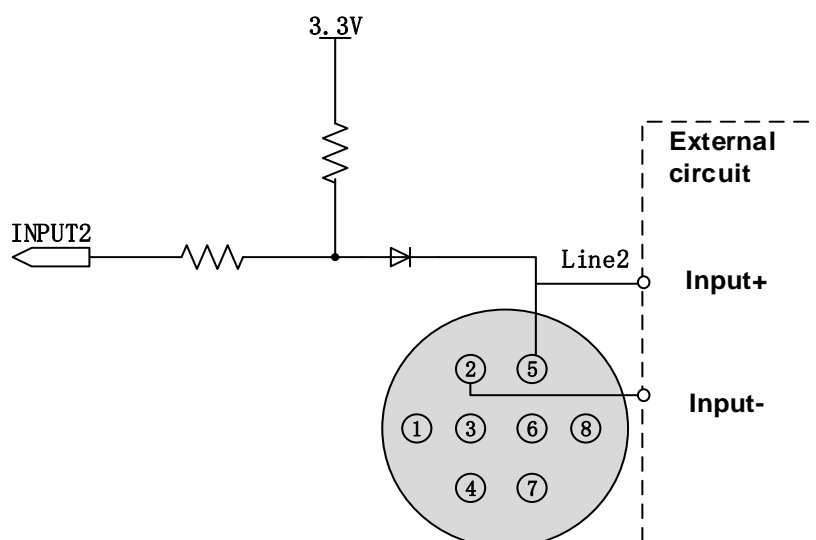


Figure 7-8 Internal equivalent circuit of camera when Line2 is configured as input



To avoid the damage of GPIO pins, please connect GND pin before supplying power to Line2/3.

- Logic 0 input voltage: 0V~+0.6V(Line2/3 voltage)

- Logic 1 input voltage: +1.9V~+24V(Line2/3 voltage)
- The status is unstable when input voltage is between 0.6V and 1.9V, which should be avoided
- When input of Line2/3 is high, input current is lower than 100uA. When input of Line2/3 is low, input current is lower than -1mA
- When Line2/3 is configured as input. The connection method between them and NPN and PNP photoelectric sensors is shown in Figure 7-9 and Figure 7-10. The relationship between the pull-up resistor value and the external input voltage is shown in Table 7-3

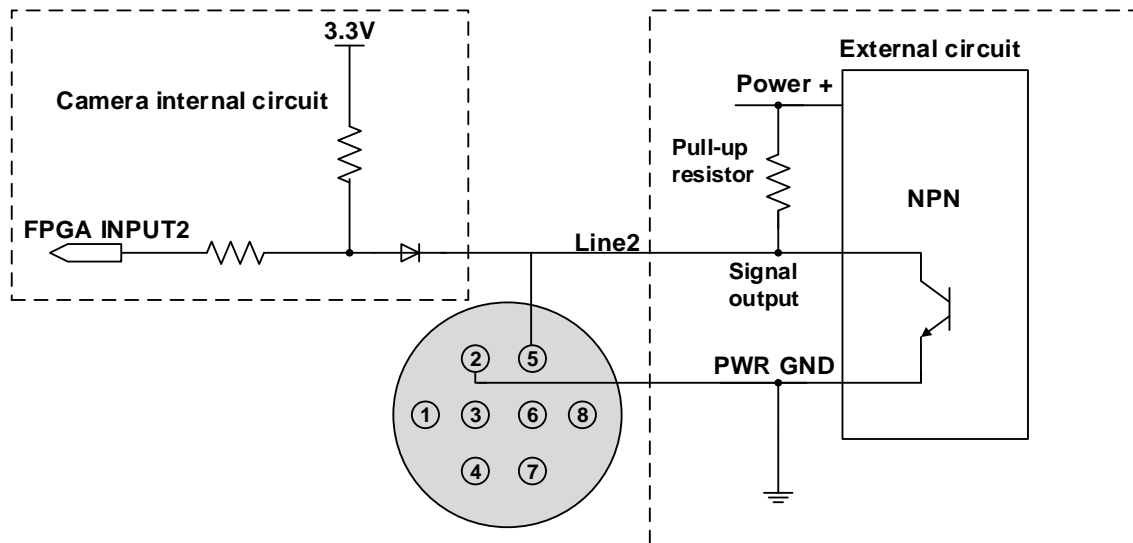


Figure 7-9 NPN photoelectric sensor connected to Line2 input circuit

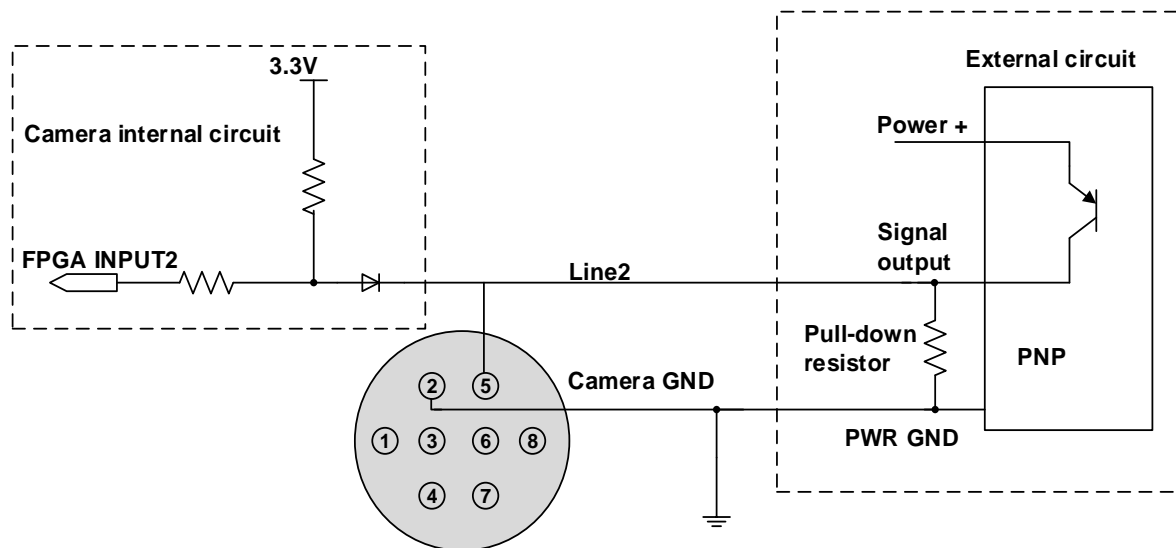


Figure 7-10 PNP photoelectric sensor connected to Line2 input circuit

- When Line2/3 is configured as input, pull-down resistor over 1K should not be used, otherwise the input voltage of Line2/3 will be over 0.6V and logic 0 cannot be recognized stably
- Input rising time delay:  $<2\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ), parameter description as shown in Figure 7-4
- Input falling time delay:  $<2\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ), parameter description as shown in Figure 7-4

### 7.3.1.3.2. Line2/3 is Configured as Output

- Range of external voltage (EXVCC) is 5~24V
- Maximum output current of Line2/3 is 25mA, output impedance is 40Ω
- Output voltage and output current in typical application conditions (temperature is 25°C) are shown in Table 7-7

External voltage EXVCC	External resistance Rexternal	Line2/3 voltage (V)	Output current (mA)
5V	1kΩ	0.19	4.8
12V		0.46	11.6
24V		0.92	23.1

Table 7-7 Voltage and output current of Line2/3 in typical conditions

- Rising time delay = tr+td: <20μs (0°C~45°C) (parameter description as shown in Figure 7-6)
- Falling time delay = ts+tf: <20μs (0°C~45°C) (parameter description as shown in Figure 7-6)
- Delay parameters are affected greatly by external voltage and external pull-up resistor, but little by temperature. Output delay time in typical application conditions (temperature is 25°C) are shown in Table 7-8

Parameter	Test Conditions	Value (us)		
Storage time (ts)	External power is 5V, pull-up resistor is 1kΩ	0.17	~	0.18
Delay time (td)		0.08	~	0.09
Rising time (tr)		0.11	~	0.16
Falling time (tf)		1.82	~	1.94
Rising time delay = tr+td		0.19	~	0.26
Falling time delay = tf+ts		1.97	~	2.09

Table 7-8 Delay time when GPIO is configured as output in typical conditions

- When Line2/3 is configured as output, the internal equivalent circuit of camera is shown in Figure 7-11, taking Line2 as an example



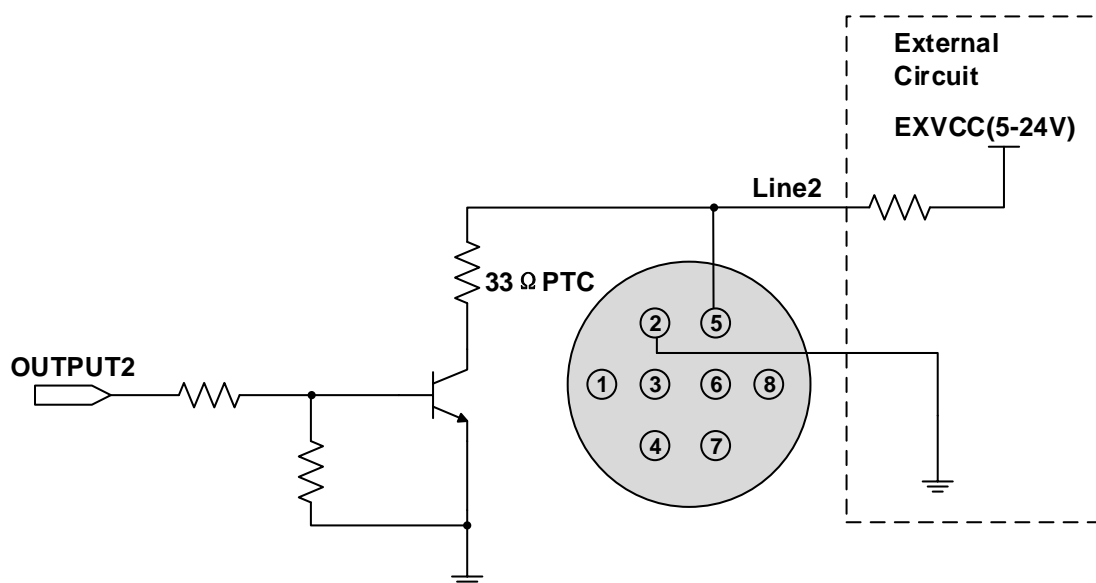


Figure 7-11 Internal equivalent circuit of camera when Line2 is configured as output

### 7.3.2. ME2L Series

I/O port is implemented by 8-pin receptacle.

Diagram	Pin	Definition	Core Color	Description
	1	Line0+	Pink	Opto-isolated input +
	2	GND	White	GPIO GND
	3	Line0-	Grey	Opto-isolated input -
	4	NC	Brown	NC
	5	Line2	Green	GPIO input/output
	6	NC	Yellow	NC
	7	NC	-	NC
	8	NC	-	NC

Table 7-9 I/O port definition (back sight of the camera)



The polarity of GPIO pins cannot be reversed, otherwise, camera or other peripherals could burn out.

#### 7.3.2.1. Line0 (Opto-isolated Input) Circuit

Hardware schematics of opto-isolated input circuit is shown as Figure 7-12.

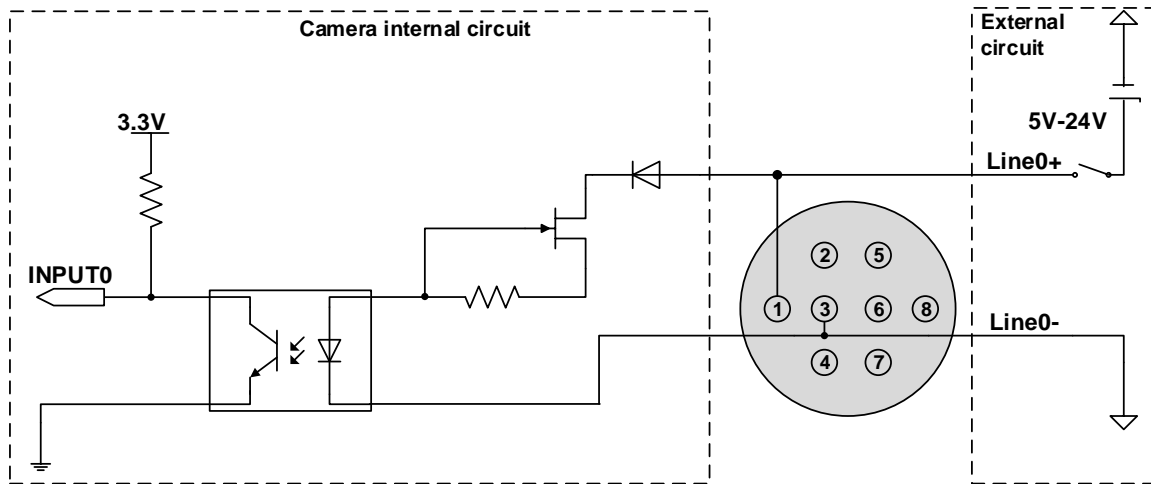


Figure 7-12 Opto-isolated input circuit

- Logic 0 input voltage: 0V~+2.5V (Line0+ voltage)
- Logic 1 input voltage: +5V~+24V (Line0+ voltage)
- Minimum input current: 7mA
- The status is unstable when input voltage is between 2.5V and 5V, which should be avoided
- When peak voltage of input signal over 9V, a current limiting resistor is recommended to protect the input Line0+. The recommended resistance is shown in Table 7-10.

External input voltage	Circuit-limiting resistance R <sub>limit</sub>	Line0+ input voltage
9V	680Ω	About 5.5V
12V	1kΩ	About 6V
24V	2kΩ	About 10V

Table 7-10 Circuit-limiting resistor value

The connection method of the opto-isolated input circuit and the NPN and PNP photosensor is shown in Figure 7-13 and Figure 7-14. The relationship between the pull-up resistor and the external power supply voltage is shown in Table 7-10.

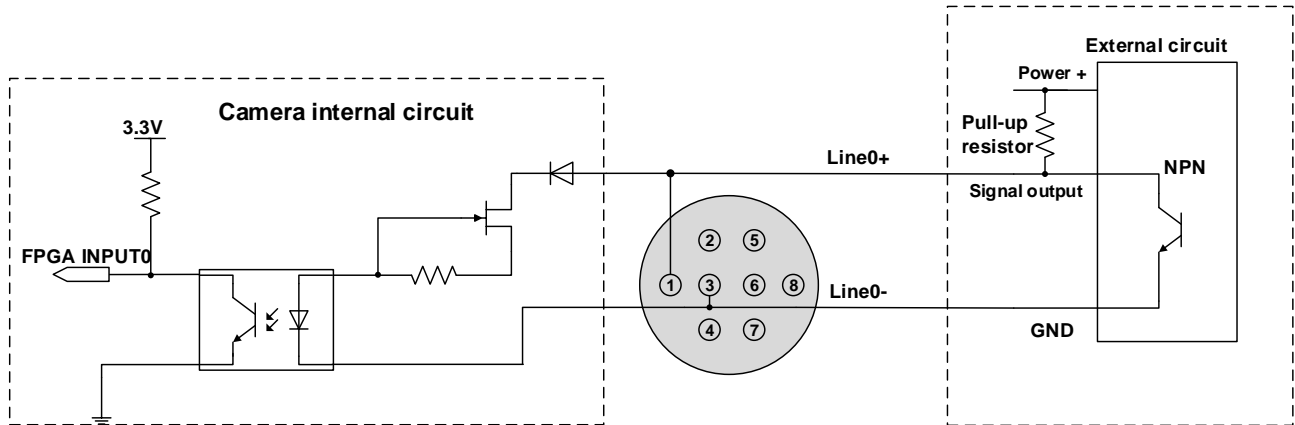


Figure 7-13 NPN photosensor connected to opto-isolated input circuit

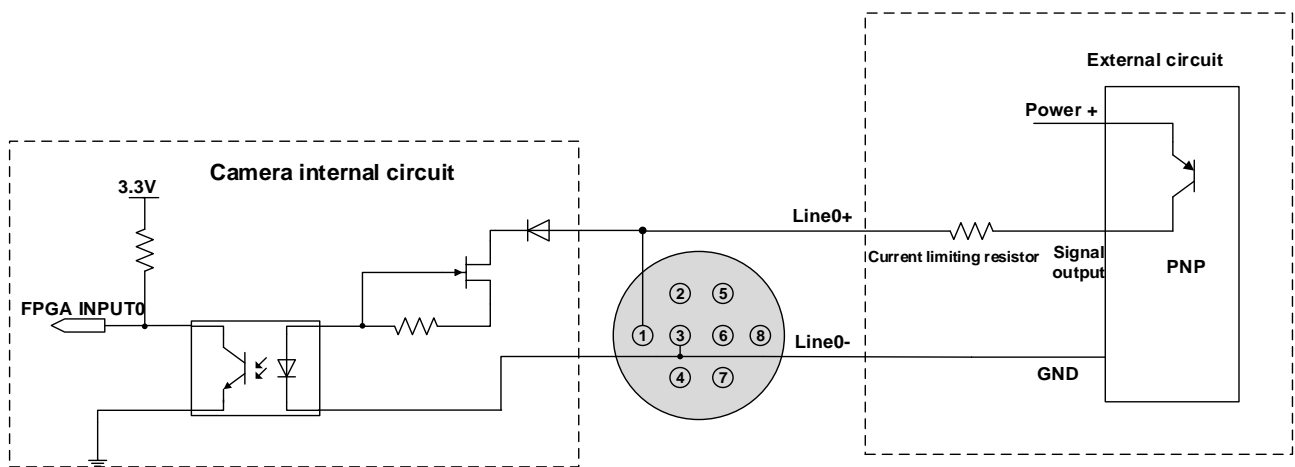


Figure 7-14 PNP photosensor connected to opto-isolated input circuit

- Rising edge delay:  $<50\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ), parameter description as shown in Figure 7-15
- Falling edge delay:  $<50\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ), parameter description as shown in Figure 7-15
- Different environment temperature and input voltage have influence on delay time of opto-isolated input circuit. Delay times in typical application environment (temperature is  $25^{\circ}\text{C}$ ) is as shown in Table 7-11

Parameter	Test condition	Value (us)		
Rising edge delay	VIN=5V	3.02	~	6.96
	VIN=12V	2.46	~	5.14
Falling edge delay	VIN=5V	6.12	~	17.71
	VIN=12V	8.93	~	19.73

Table 7-11 Delay time of opto-isolated input circuit in typical application environment

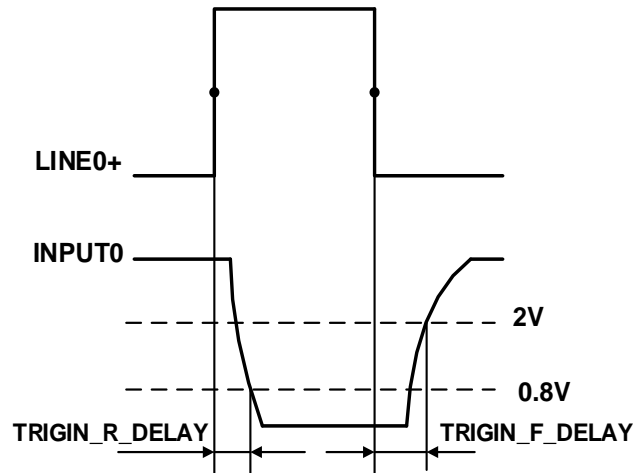


Figure 7-15 Parameter of opto-isolated input circuit

- Rising time delay (TRIGIN\_R\_DELAY): the time required for the response to the decrease to 0.8V of INPUT0 from 50% rising of LINE0+
- Falling time delay (TRIGIN\_F\_DELAY): the time required for the response to the rise to 2V of INPUT0 from 50% falling of LINE0+

#### 7.3.2.2. Line2 (Bidirectional) Circuit

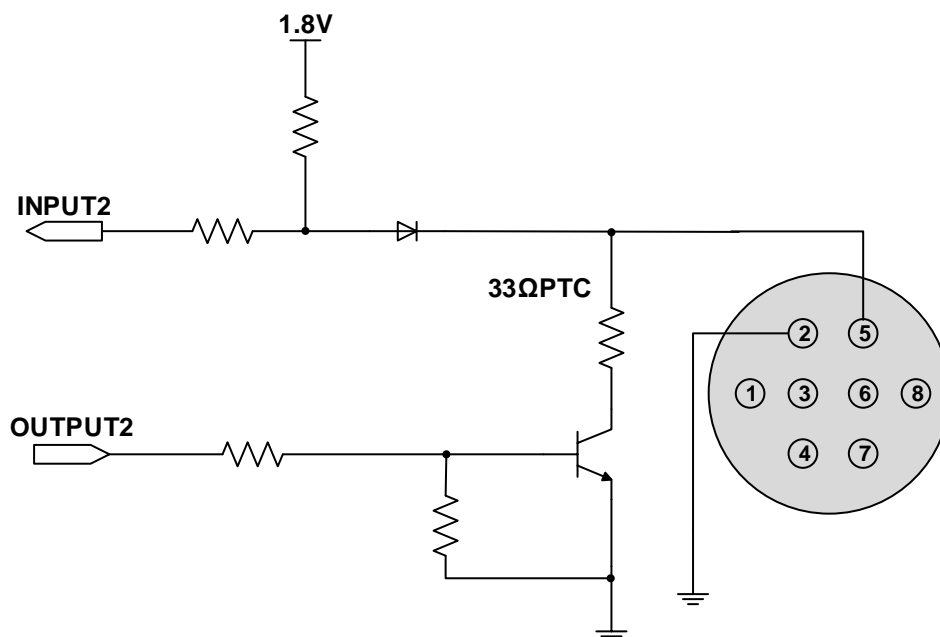


Figure 7-16 GPIO 1 (bidirectional) circuit

##### 7.3.2.2.1. Line2 is Configured as Input

- When Line2 is configured as input, the internal equivalent circuit of camera is shown in Figure 7-17

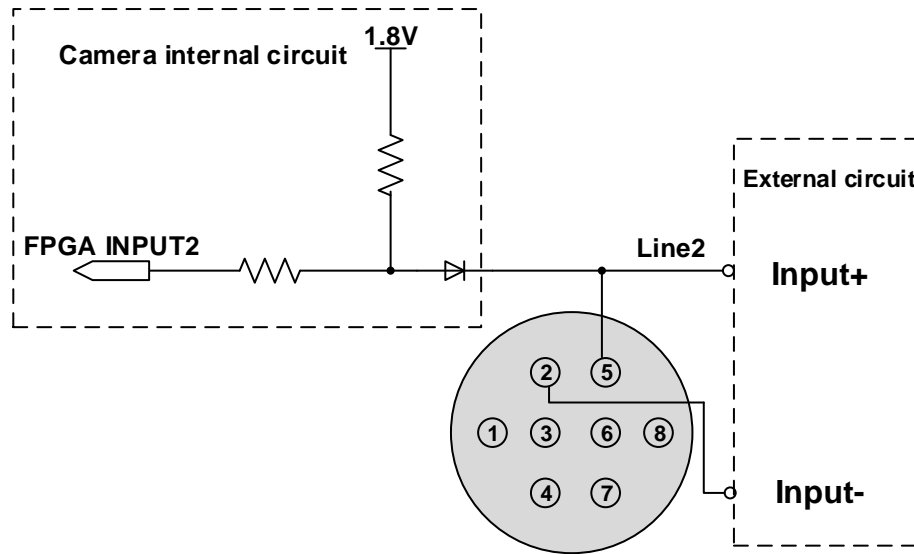


Figure 7-17 Internal equivalent circuit of camera when Line2 is configured as input



To avoid the damage of GPIO pins, please connect GND pin before supplying power to Line2.

- Logic 0 input voltage:  $0V \sim +0.6V$  (GPIO1 voltage)
- Logic 1 input voltage:  $+1.9V \sim +24V$  (GPIO1 voltage)
- The status is unstable when input voltage is between  $0.6V$  and  $1.9V$ , which should be avoided
- When input of Line2 is high, input current is lower than  $100\mu A$ . When input of Line2 is low, input current is lower than  $-1mA$ . When Line2 is configured as input. The connection method between them and NPN and PNP photoelectric sensors is shown in Figure 7-18 and Figure 7-19. The relationship between the pull-up resistor value and the external input voltage is shown in Table 7-3

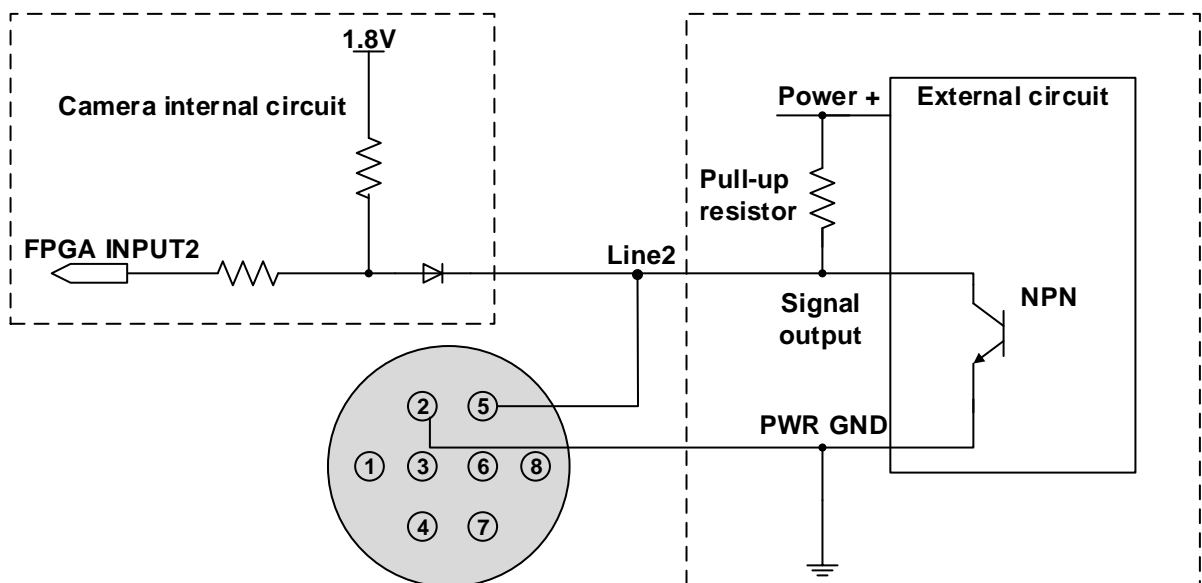


Figure 7-18 NPN photoelectric sensor connected to Line2 input circuit

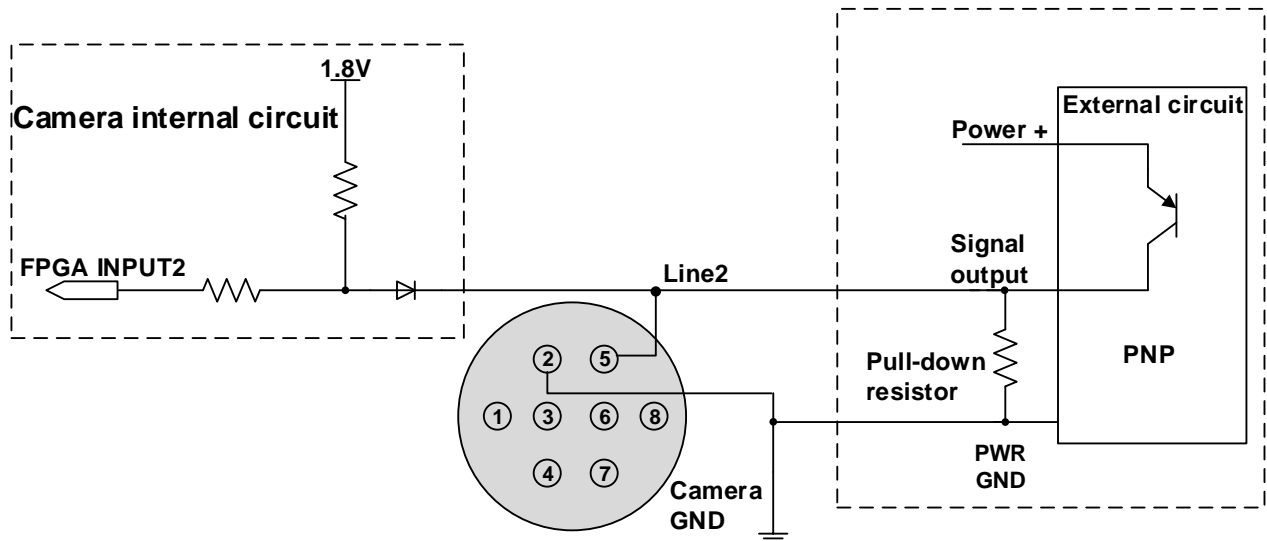


Figure 7-19 PNP photoelectric sensor connected to Line2 input circuit

- When Line2 is configured as input, pull-down resistor over 1K should not be used, otherwise the input voltage of GPIO will be over 0.6V and logic 0 cannot be recognized stably
- Input rising time delay:  $<2\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ), parameter description as shown in Figure 7-15
- Input falling time delay:  $<2\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ), parameter description as shown in Figure 7-15

#### 7.3.2.2.2. Line2 is Configured as Output

- Range of external voltage (EXVCC) is 5~24V
- Maximum output current of Line2 is 25mA, output impedance is  $40\Omega$
- Output voltage and output current in typical application conditions (temperature is  $25^{\circ}\text{C}$ ) are shown in Table 7-12

External voltage EXVCC	External resistance $R_{\text{external}}$	Line2 voltage (V)	Output current (mA)
5V	1k $\Omega$	0.19	4.8
12V		0.46	11.6
24V		0.92	23.1

Table 7-12 Voltage and output current of Line2 in typical conditions

- Rising time delay =  $t_r + t_d$ :  $<20\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ) (parameter description as shown in Figure 7-20)
- Falling time delay =  $t_s + t_f$ :  $<20\mu\text{s}$  ( $0^{\circ}\text{C}\sim 45^{\circ}\text{C}$ ) (parameter description as shown in Figure 7-20)

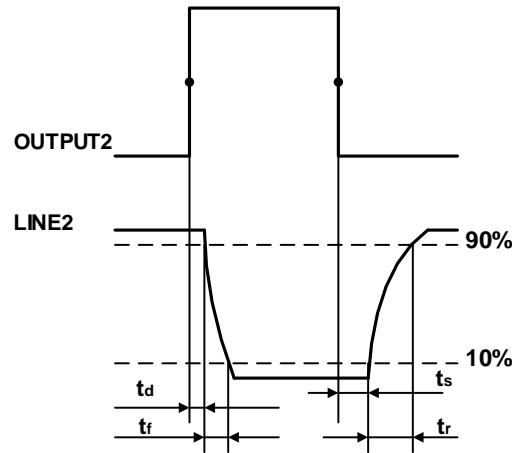


Figure 7-20 Parameter of Line2 output circuit

- Delay time ( $t_d$ ): the time required from 50% rising of OUTPUT2 to the decrease to 90% of the maximum value of LINE2
- Falling time ( $t_f$ ): the time taken for the amplitude of LINE2 to decrease from 90% to 10% of the maximum value
- Storage time ( $t_s$ ): the time required from 50% falling of OUTPUT2 to the rise to 10% of the maximum value of LINE2
- Rising time ( $t_r$ ): the time for the response of LINE2 to rise from 10% to 90% of its final value
- Delay parameters are affected greatly by external voltage and external pull-up resistor, but little by temperature. Output delay time in typical application conditions (temperature is 25°C) are shown in Table 7-13

Parameter	Test Conditions	Value (us)		
Storage time ( $t_s$ )	External power is 5V, pull-up resistor is 1k $\Omega$	0.17	~	0.18
Delay time ( $t_d$ )		0.08	~	0.09
Rising time ( $t_r$ )		0.11	~	0.16
Falling time ( $t_f$ )		1.82	~	1.94
Rising time delay = $t_r+t_d$		0.19	~	0.26
Falling time delay = $t_f+t_s$		1.97	~	2.09

Table 7-13 Delay time when GPIO is configured as output in typical conditions

- When Line2 is configured as output, the internal equivalent circuit of camera is shown in Figure 7-21

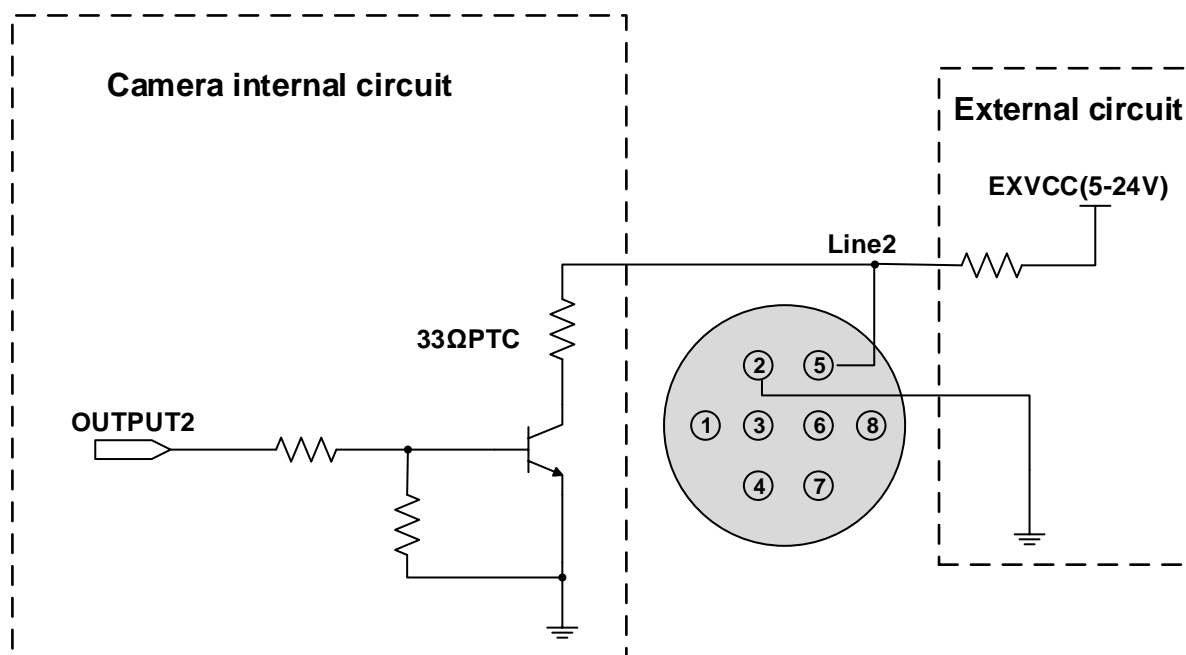


Figure 7-21 Internal equivalent circuit of camera when Line2 is configured as output



## 8. Features

### 8.1. I/O Control

#### 8.1.1. MER2/ME2P Series

##### 8.1.1.1. Input Mode Operation

###### 1) Configuring Line as input

The MER2-U3 series camera has three input signals: Line0, Line2, and Line3. In which the Line0 is uni-directional opto-isolated input, Line2 and Line3 are bi-directional lines which can be configured as input or output.

The camera's default input is Line0 when the camera is powered on. Line2 and Line3 are input by default, which can be configured to be input or output by LineMode.

###### 2) Input Debouncer

In order to suppress the interference signals from external trigger, the MER2-U3 series camera has the external trigger filtering feature, including rising edge filtering and falling edge filtering. The user can set the trigger filter feature by setting the "TriggerFilterRaisingEdge" and the "TriggerFilterFallingEdge". The range of the trigger filter feature is [0, 5000]  $\mu$ s, step: 1 $\mu$ s.

Example 1: Setting the rising edge filter width to 1ms, the pulse width less than 1ms in the rising edge will be filtered out, as shown in Figure 8-1:

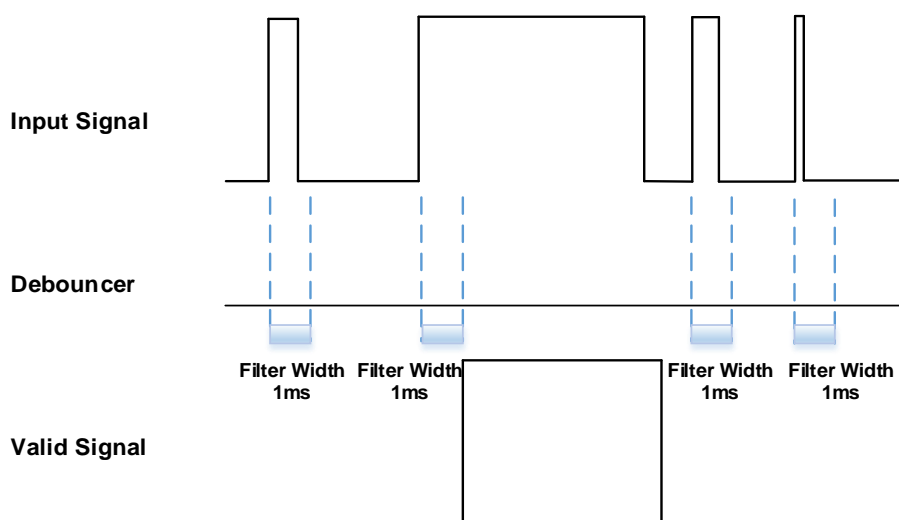


Figure 8-1 Input debouncer schematic diagram

###### 3) Trigger Delay

The MER2-U3 series camera has trigger delay feature. The user can set the trigger delay feature by setting "TriggerDelay". The range of the trigger delay feature is [0, 3000000]  $\mu$ s, step: 1 $\mu$ s.

Example 1: Setting the trigger delay value to 1000ms, and the trigger signal will be valid after 1000ms delay, as shown in Figure 8-2.

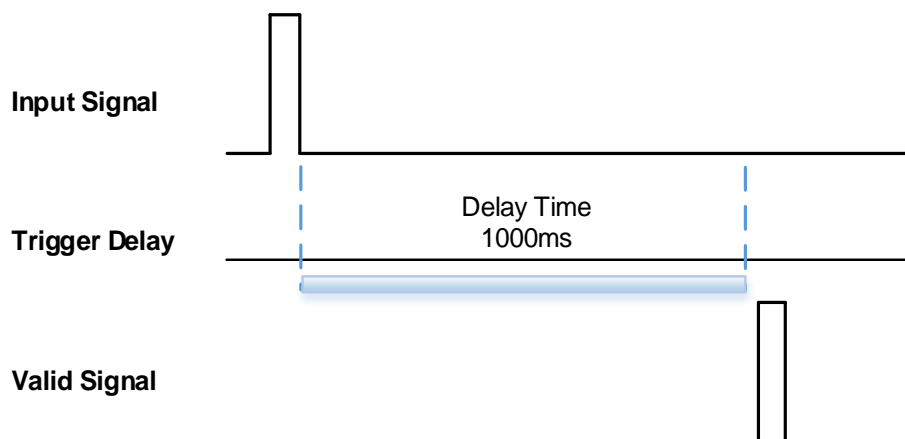


Figure 8-2 Trigger delay schematic diagram

#### 4) Input Inverter

The signal level of input lines is configurable for the MER2-U3 series camera. The user can select whether the input level is reverse or not by setting "LineInverter".

For the MER2-U3 series camera, the default input line level is false when the camera is powered on, indicating that the input line level is not reversed. If it is set as true, indicating that the input line level is reversed. As shown in the Figure 8-3:

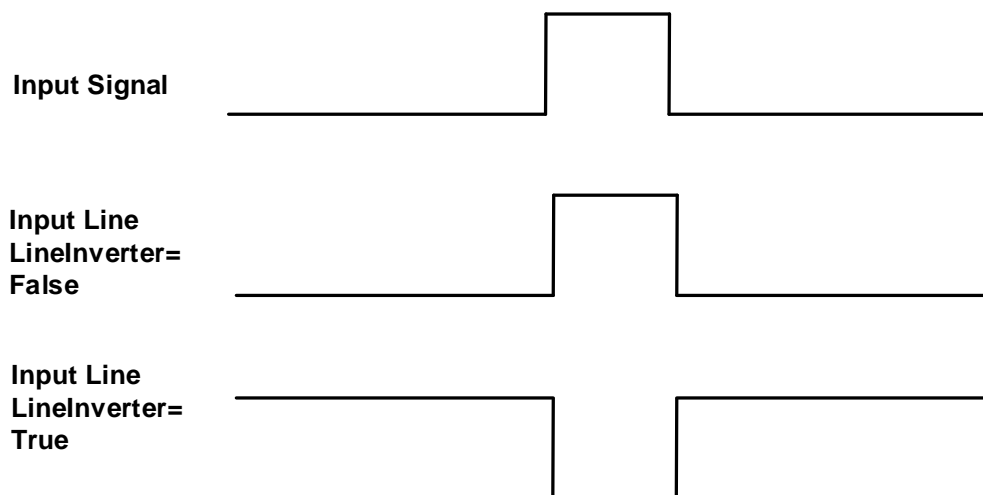


Figure 8-3 Setting input line to reverse

#### 8.1.1.2. Output Mode Operation

##### 1) Configuring Line as output

The MER2-U3 series camera has three output signals: Line1, Line2, and Line3. In which the Line1 is a uni-directional opto-isolated output I/O, Line2 and Line3 are bi-direction configurable I/Os.

The camera's default output is Line1 when the camera is powered on. Line2 and Line3 can be configured to be output by changing the "LineMode" of this line.

Each output source of the three output lines is configurable, and the output source includes: Strobe, UserOutput0, UserOutput1, UserOutput2, ExposureActive, FrameTriggerWait, AcquisitionTriggerWait.

The default output source of the camera is UserOutput0 when the camera is powered on.

What status (high or low level) of the output signal is valid depends on the specific external circuit. The following signal diagrams are described as examples of active low.

- Strobe

In this mode the camera sends a trigger signal to activate the strobe. The strobe signal is active low. After receiving the trigger signal, the strobe signal level is pulled low, and the pull-low time is the sum of the exposure delay time and the exposure time.

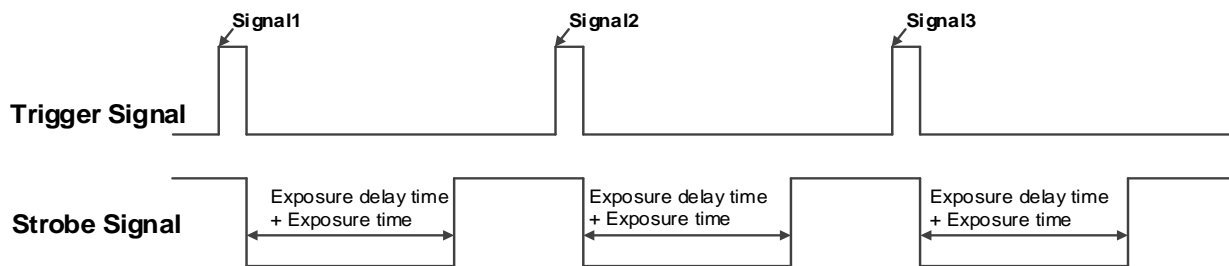


Figure 8-4 Strobe signal schematic diagram

- UserOutput

In this mode, the user can set the camera's constant output level for special processing, such as controlling the constant light source or the alarm light (two level types are available: high level or low level).

For example: select line2 as the output line, the output source is selected as UserOutput1, and the output value is defined as true.

"LineSelector" is selected as "line2", "LineMode" is set to "Output", "LineSource" is set to "UserOutput1", "UserOutputSelector" is selected as "UserOutput1", and "UserOutputValue" is set to "true".

- ExposureActive

You can use the "ExposureActive" signal to check whether the camera is currently exposing. The signal goes low at the beginning of the exposure and the signal goes high at the end of the exposure. For electronic rolling shutter cameras, the signal goes low when the exposure of the last line ends.

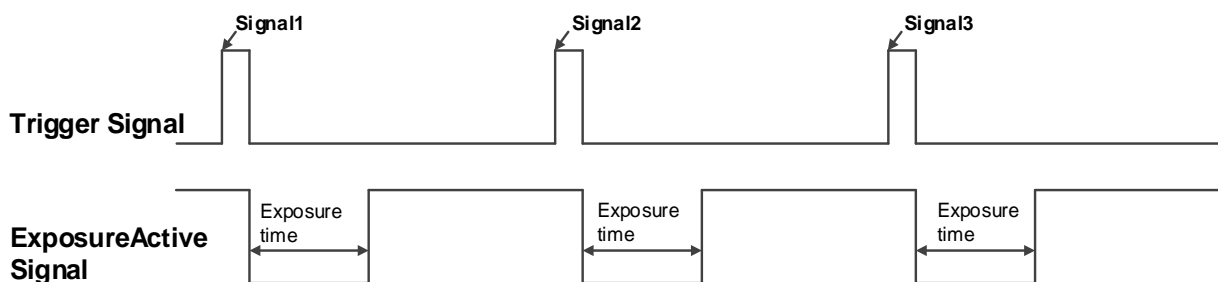


Figure 8-5 Global shutter "ExposureActive" signal schematic diagram

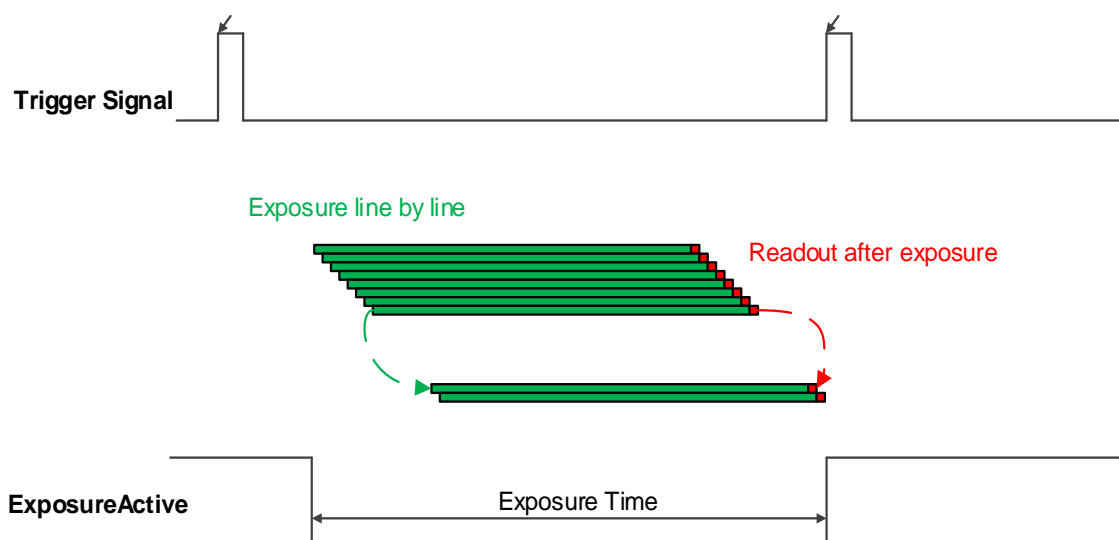


Figure 8-6 Electronic rolling shutter "ExposureActive" signal schematic diagram

This signal is useful when the camera or target object is moving. For example, suppose the camera is mounted on a robotic arm that can move the camera to different position. Generally, it is not desirable for the camera to move during the exposure. In this case, you can check the exposure activity signal to know the exposure time so you can avoid moving the camera during this time.

- TriggerWait

The "TriggerWait" signal can be used to optimize the acquisition of the trigger image and to avoid excessive triggering.

It is recommended to use the "TriggerWait" signal only when the camera is configured for external trigger. For software trigger, please use the "AcquisitionStatus". When the camera is ready to receive a trigger signal of the corresponding trigger mode, the "TriggerWait" signal goes low. When the corresponding trigger signal is used, the "TriggerWait" signal goes high. It remains high until the camera is ready to receive the next trigger.

When the trigger mode is "FrameStart", the camera acquires only one frame of image when it receives the trigger signal. After receiving the trigger signal, the "FrameTriggerWait" signal is pulled low and the camera starts exposure transmission. After the transfer is complete, the "FrameTriggerWait" signal is pulled high.

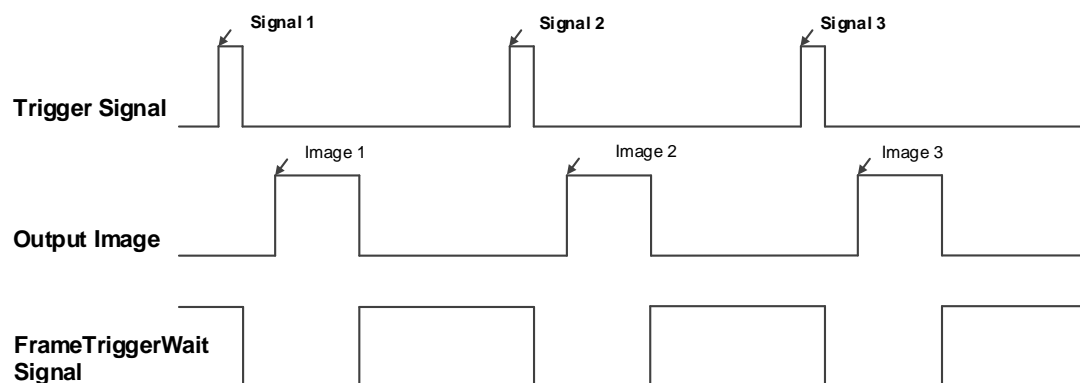


Figure 8-7 "FrameTriggerWait" signal schematic diagram

When the trigger mode is "FrameBurstStart", each time the camera receives a trigger signal, it will acquire the set AcquisitionFrameCount frames of image. After receiving the trigger signal, the "AcquisitionTriggerWait" signal is pulled low and the camera starts the exposure transmission. When the transmission is completed and images are transferred, the "AcquisitionTriggerWait" signal will be pulled high.

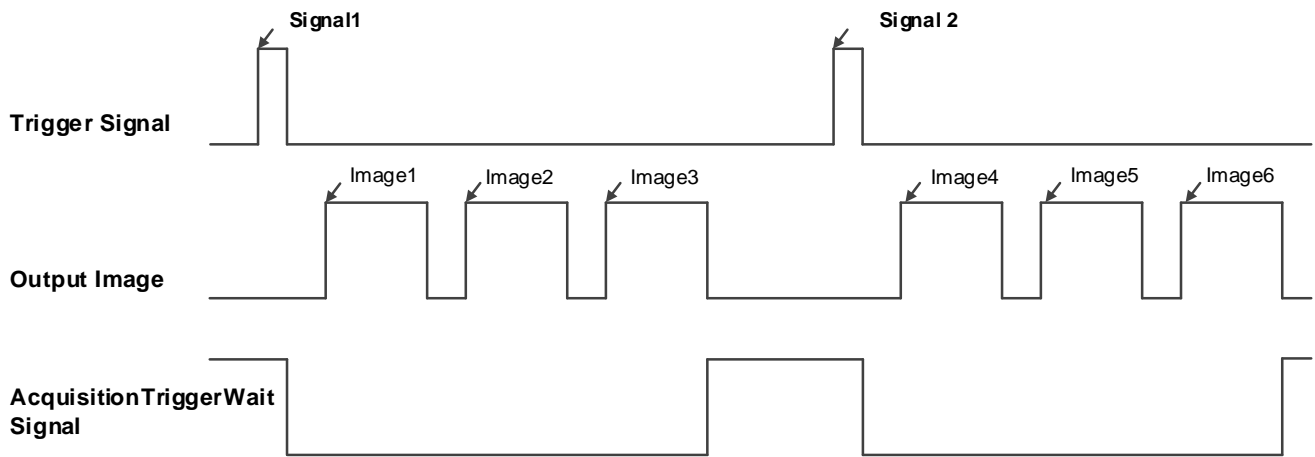


Figure 8-8 "AcquisitionTriggerWait" signal schematic diagram

## 2) Setting the user-defined status for the output lines

The MER2-U3 series camera can select the user-defined output by setting "LineSource", by setting "UserOutputValue" to configure the output signal.

By setting "UserOutputSelector" to select UserOutput0, UserOutput1 or UserOutput2.

By setting "UserOutputValue" to set the user-defined output value, and the default value is false when the camera is powered on.

## 3) Output Inverter

In order to facilitate the camera IO configuration and connection, the MER2-U3 series camera can configure output signal level. The user can select whether the output level is reverse or not by setting "LineInverter".

The default output signal level is false when the camera is powered on, indicating that the output line level is not reversed. If it is set as true, indicating that the output line level is reversed. As shown in the Figure 8-9.

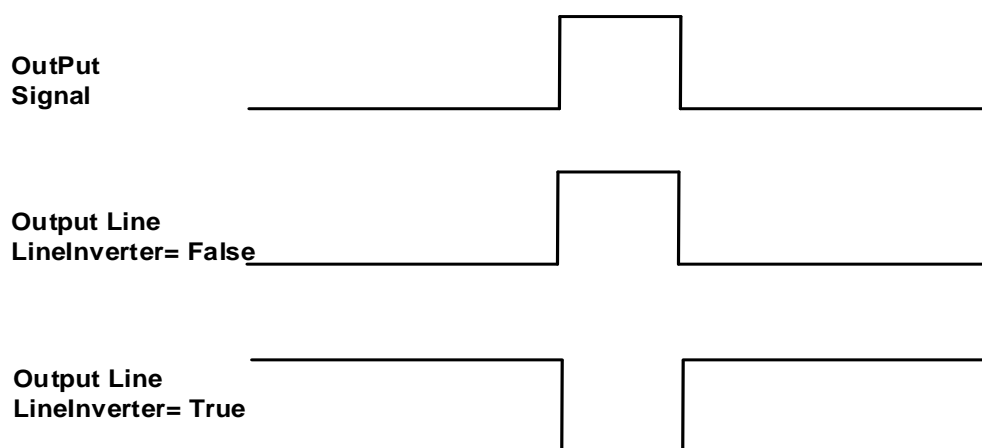


Figure 8-9 Set output line reversion

### 8.1.1.3. Read the LineStatus

#### 1) Read the level of single line

The MER2-U3 series camera can get the line's signal status. When the device is powered on, the default status of Line0 and Line1 is false, and the default status of Line2 and Line3 is true.

#### 2) Read all the lines level

The MER2-U3 series camera can get the current status of all lines. On the one hand, the signal status is the status of the external IO after the reversal of the polarity. On the other hand, signal status level can reflect the external IO level.

All the lines level status bit of the MER2-U3 series camera are shown in Table 8-1. The default polarity does not reverse, and the default value is 0xC.

Line3	Line2	Line1	Line0
1	1	0	0

Table 8-1 Camera line status bit

### 8.1.2. ME2L Series

#### 8.1.2.1. Input Mode Operation

##### 1) Configuring Line as input

The ME2L series camera has two input signals: Line0 and Line2. In which the Line0 is uni-directional opto-isolated input, Line2 is bi-directional line which can be configured as input or output.

The camera's default input is Line0 when the camera is powered on. Line2 is input by default, which can be configured to be input or output by LineMode.

##### 2) Input Debouncer

In order to suppress the interference signals from external trigger, the ME2L series camera has the external trigger filtering feature, including rising edge filtering and falling edge filtering. The user can set the trigger

filter feature by setting the "TriggerFilterRaisingEdge" and the "TriggerFilterFallingEdge". The range of the trigger filter feature is [0, 5000]  $\mu$ s, step: 1 $\mu$ s.

Example 1: Setting the rising edge filter width to 1ms, the pulse width less than 1ms in the rising edge will be filtered out, as shown in Figure 8-10:

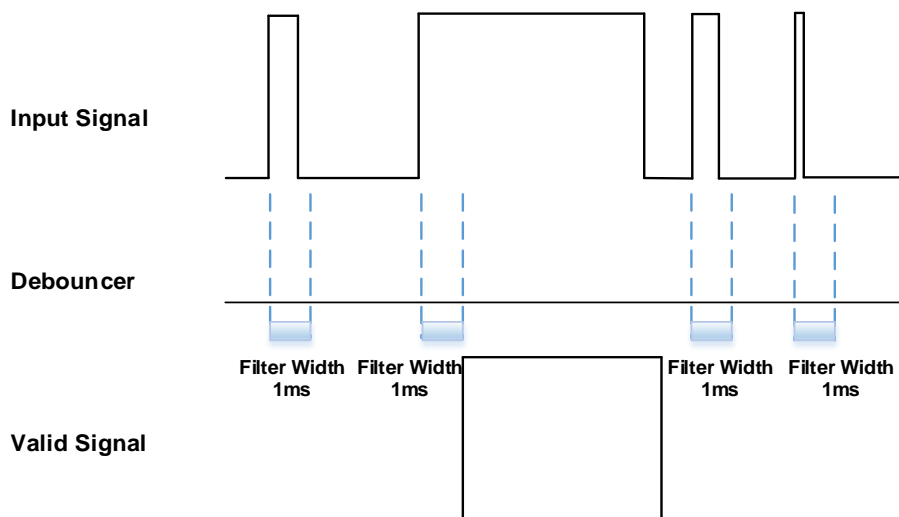


Figure 8-10 Input debouncer schematic diagram

### 3) Trigger Delay

The ME2L series camera has trigger delay feature. The user can set the trigger delay feature by setting "TriggerDelay". The range of the trigger delay feature is [0, 3000000]  $\mu$ s, step: 1 $\mu$ s.

Example 1: Setting the trigger delay value to 1000ms, and the trigger signal will be valid after 1000ms delay, as shown in Figure 8-11.

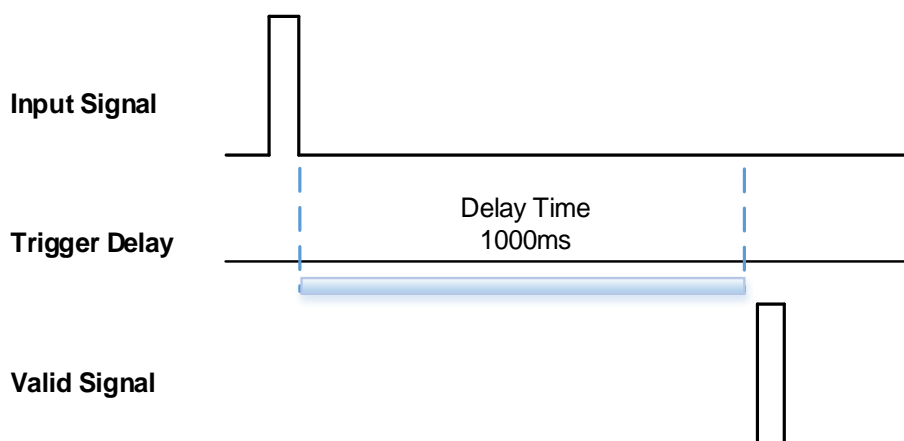


Figure 8-11 Trigger delay schematic diagram

### 4) Input Inverter

The signal level of input lines is configurable for the ME2L series camera. The user can select whether the input level is reverse or not by setting "LineInverter".

For the ME2L series camera, the default input line level is false when the camera is powered on, indicating that the input line level is not reversed. If it is set as true, indicating that the input line level is reversed. As shown in the Figure 8-12:

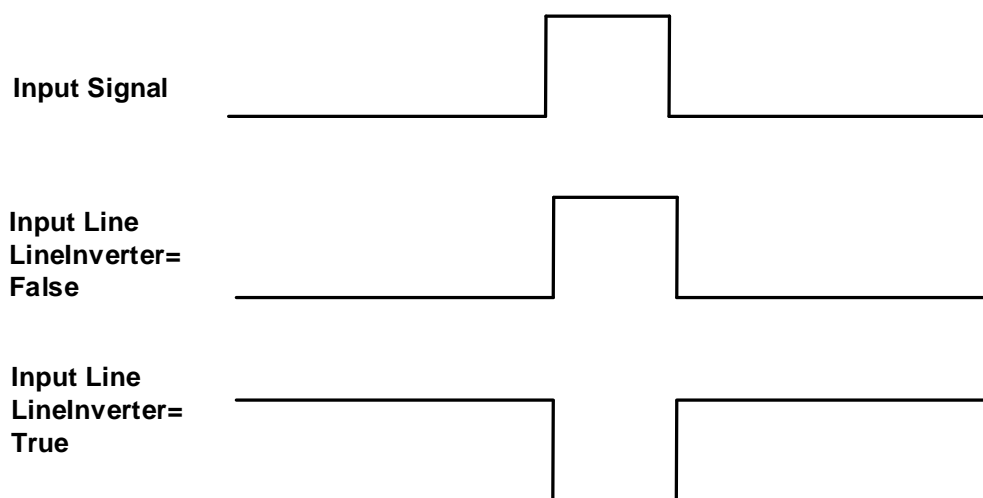


Figure 8-12 Setting input line to reverse

#### 8.1.2.2. Output Mode Operation

##### 1) Configuring Line as output

The ME2L series camera has one output signals—Line2. And Line2 is a uni-directional opto-isolated output I/O.

The camera's default input is Line2 when the camera is powered on. Which can be configured to be output by changing the "LineMode" of this line.

Each output source of the three output lines is configurable, and the output source includes: Strobe, UserOutput0, UserOutput1, UserOutput2.

The default output source of the camera is UserOutput0 when the camera is powered on.

What status (high or low level) of the output signal is valid depends on the specific external circuit. The following signal diagrams are described as examples of active low.

- Strobe

In this mode the camera sends a trigger signal to activate the strobe. The strobe signal is active low. After receiving the trigger signal, the strobe signal level is pulled low, and the pull-low time is the sum of the exposure delay time and the exposure time.



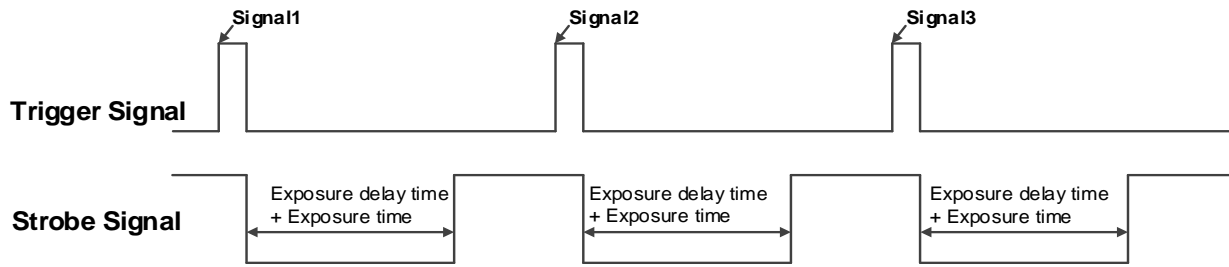


Figure 8-13 Strobe signal schematic diagram

### ● UserOutput

In this mode, the user can set the camera's constant output level for special processing, such as controlling the constant light source or the alarm light (two level types are available: high level or low level).

For example: select Line2 as the output line, the output source is selected as UserOutput1, and the output value is defined as true.

"LineSelector" is selected as "Line2", "LineMode" is set to "Output", "LineSource" is set to "UserOutput1", "UserOutputSelector" is selected as "UserOutput1", and "UserOutputValue" is set to "true".

#### 2) Setting the user-defined status for the output lines

The ME2L series camera can select the user-defined output by setting "LineSource", by setting "UserOutputValue" to configure the output signal.

By setting "UserOutputSelector" to select UserOutput0, UserOutput1 or UserOutput2.

By setting "UserOutputValue" to set the user-defined output value, and the default value is false when the camera is powered on.

#### 3) Output Inverter

In order to facilitate the camera IO configuration and connection, the ME2L series camera can configure output signal level. The user can select whether the output level is reverse or not by setting "LineInverter".

The default output signal level is false when the camera is powered on, indicating that the output line level is not reversed. If it is set as true, indicating that the output line level is reversed. As shown in the Figure 8-12 and Figure 8-14.

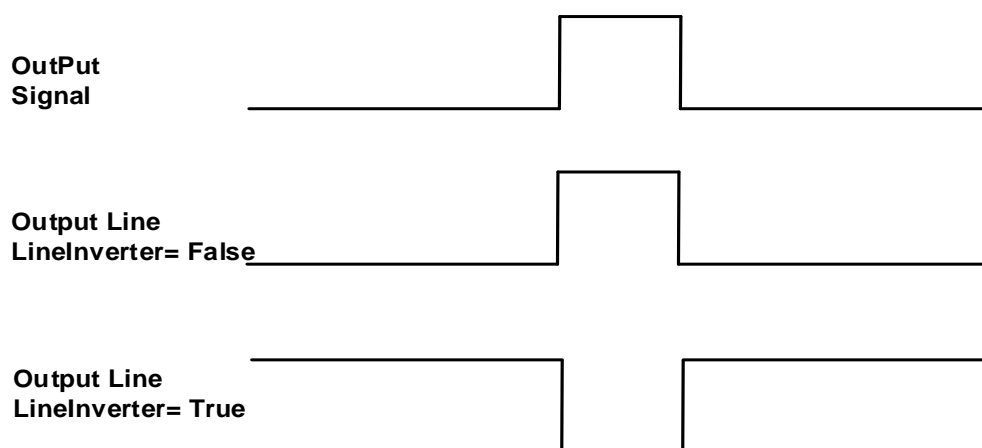


Figure 8-14 Set output line reversion

### 8.1.2.3. Read the LineStatus

#### 1) Read the level of single line

The ME2L series camera can get the line's signal status. When the device is powered on, the default status of Line0 is false, and the default status of Line2 is true.

#### 2) Read all the lines level

The ME2L series camera can get the current status of all lines. On the one hand, the signal status is the status of the external IO after the reversal of the polarity. On the other hand, signal status level can reflect the external IO level.

All the lines level status bit of the ME2L series camera are shown in Table 8-2. The default value is 0x2.

Line2	Line0
1	0

Table 8-2 Camera line status bit

## 8.2. Image Acquisition Control

### 8.2.1. Acquisition Start and Stop

#### 8.2.1.1. Acquisition Start

It can send **AcquisitionStart** command immediately after opening the camera. The acquisition process in continuous mode is illustrated in Figure 8-15, and the acquisition process in trigger mode is illustrated in Figure 8-16.

- **Continuous Acquisition**

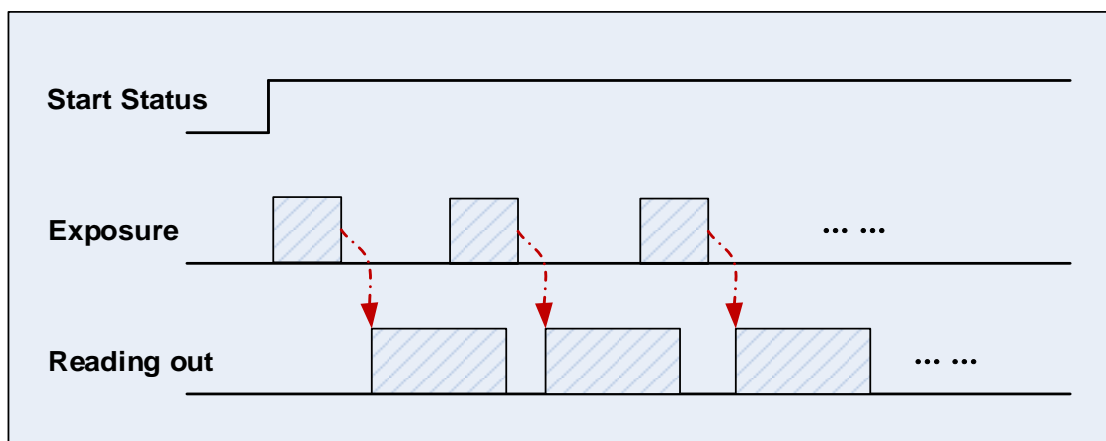


Figure 8-15 Continuous acquisition process

In continuous mode, a camera starts to expose and read out after receiving the **AcquisitionStart** command. The frame rate is determined by the exposure time, ROI and some other parameters.

- **Trigger Acquisition**

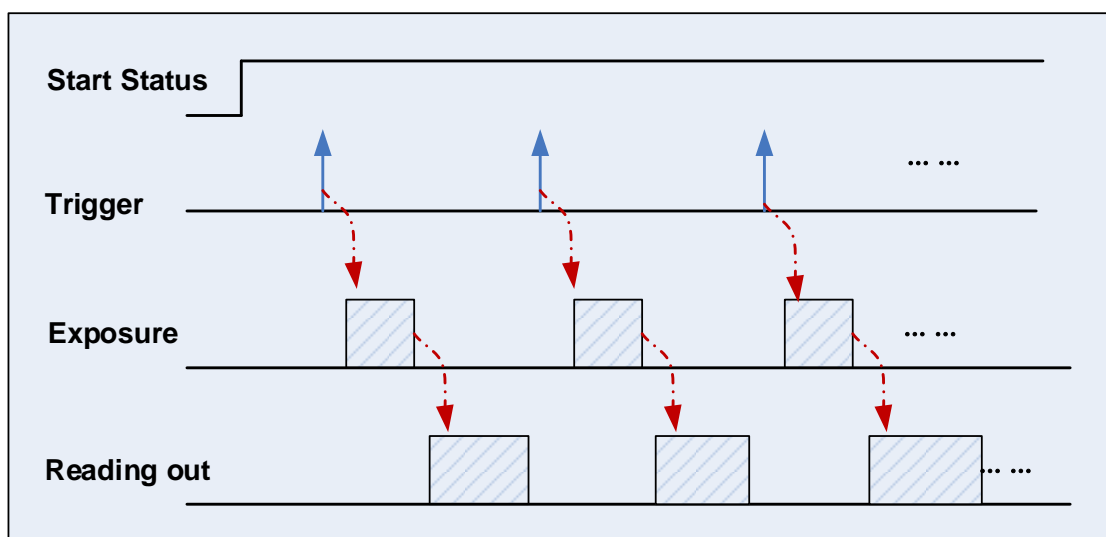


Figure 8-16 Trigger acquisition process

In trigger mode, sending **AcquisitionStart** command is not enough, a trigger signal is also needed. Each time a frame trigger is applied (including software trigger and external trigger), the camera will acquire and transmit a frame of image.

#### 8.2.1.2. Acquisition Stop

It can send **AcquisitionStop** command to camera at any time. The acquisition stop process is irrelevant to acquisition mode. But different stop time will result in different process, as shown in Figure 8-17 and Figure 8-18.

- Acquisition stop during reading out

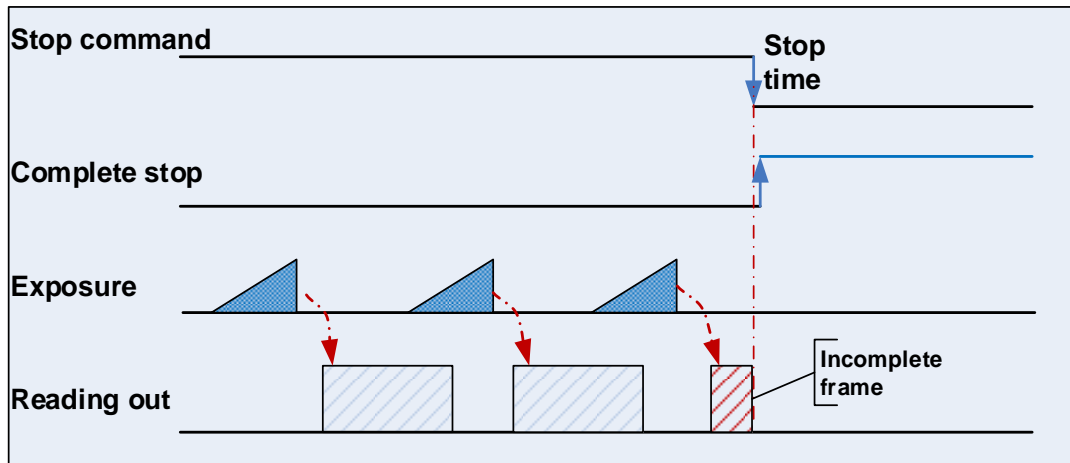


Figure 8-17 Acquisition stop during reading out

As shown in Figure 8-17, when the camera receives an **AcquisitionStop** command during reading out, it stops transferring frame data immediately. The currently transferred frame data is regarded as incomplete frame and will be discarded.

- **Acquisition stop during blanking**

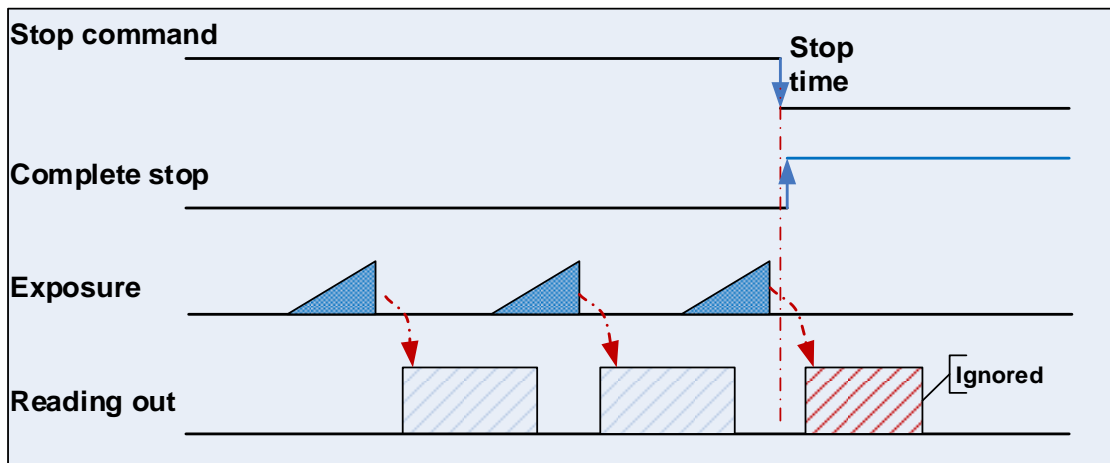


Figure 8-18 Acquisition stop during blanking

After the camera transferred a whole frame, the camera goes into wait state. When user sends an **AcquisitionStop** command in wait state, the camera will return to stop acquisition state. The camera will not send any frames even if it is just going to start the next exposing.

### 8.2.2. Acquisition Mode

Two camera acquisition modes are available: single frame acquisition mode and continuous acquisition mode.

- **Single frame acquisition mode:** In single frame acquisition mode, the camera will only acquire one frame of image at a time.

1) When the trigger mode is set to On, the trigger type is arbitrary

After executing the **AcquisitionStart** command, the camera waits for a trigger signal, which may be a software trigger or an external trigger of the camera. When the camera receives the trigger signal and acquires an image, the camera will automatically stop image acquisition. If you want to acquire another frame of image, you must execute the **AcquisitionStart** command again.

2) When the trigger mode is set to Off

After executing the **AcquisitionStart** command, the camera acquires one frame of image and then automatically stops image acquisition. If you want to acquire another frame of image, you must execute the **AcquisitionStart** command again.



In single frame acquisition mode, you must execute the **AcquisitionStop** command to set the functions that cannot be set in the acquisition status, such as ROI, packet size, etc.

- Continuous acquisition mode: In continuous acquisition mode, the camera continuously acquires and transmits images until the acquisition is stopped.

1) When the trigger mode is set to On, the trigger type is **FrameStart**

After executing the **AcquisitionStart** command, the camera waits for a trigger signal, which may be a software trigger or an external trigger of the camera. Each time the camera receives a trigger signal, it can acquire a frame of image until the **AcquisitionStop** command is executed. It is not necessary to execute the **AcquisitionStart** command every time.

2) When the trigger mode is set to On, the trigger type is **FrameBurstStart**

After executing the **AcquisitionStart** command, the camera waits for a trigger signal, which may be a software trigger or an external trigger of the camera. Each time the camera receives a trigger signal, it can continuously acquire the set **AcquisitionFrameCount** frames of image. If the **AcquisitionStop** command is received during the acquisition process, the image being transmitted may be interrupted, resulting in the number of images acquired this time not reaching the **AcquisitionFrameCount** frames of image(except for ME2L series).

3) When the trigger mode is set to Off

After executing the **AcquisitionStart** command, the camera will continuously acquire images until it receives the **AcquisitionStop** command.



You can check if the camera is in the waiting trigger status by the camera's trigger wait signal or by using the acquisition status function.

### 8.2.3. Trigger Type Selection

Two camera trigger types are available: **FrameStart** and **FrameBurstStart**. Different trigger types correspond to their respective set of trigger configurations, including trigger mode, trigger delay, trigger source, trigger polarity, and software trigger commands.

- FrameStart trigger mode

The **FrameStart** trigger is used to acquire one image. Each time the camera receives a **FrameStart** trigger signal, the camera begins to acquire an image.

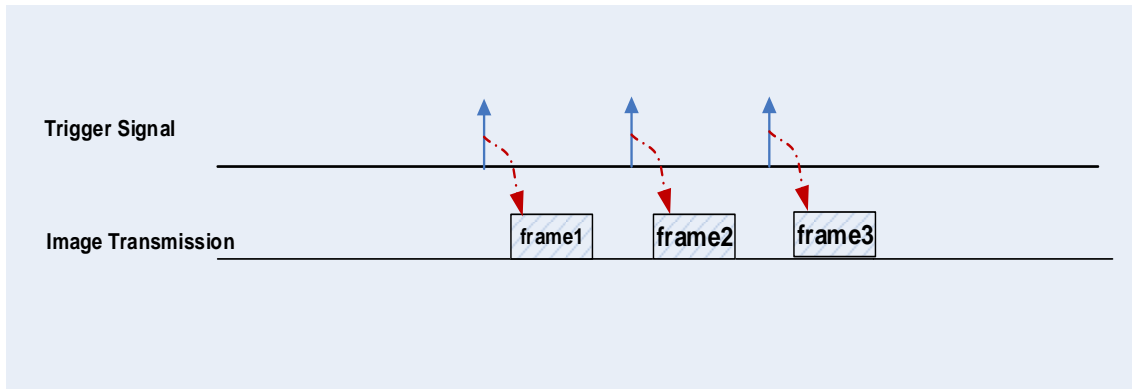


Figure 8-19 FrameStart trigger

- FrameBurstStart trigger mode

You can use the **FrameBurstStart** trigger signal to acquire a series of images ("continuous shooting" of the image). Each time the camera receives a **FrameBurstStart** trigger signal, the camera will start acquiring a series of images. The number of acquired image frames is specified by the "Acquisition burst frame count" parameter. The range of "Acquisition burst frame count" is 1~255, and the default value is 1.

For example, if the "Acquisition burst frame count" parameter is set to 3, the camera automatically acquires 3 images. Then, the camera waits for the next **FrameBurstStart** trigger signal. After receiving the next trigger signal, the camera will take another 3 images, and so on.

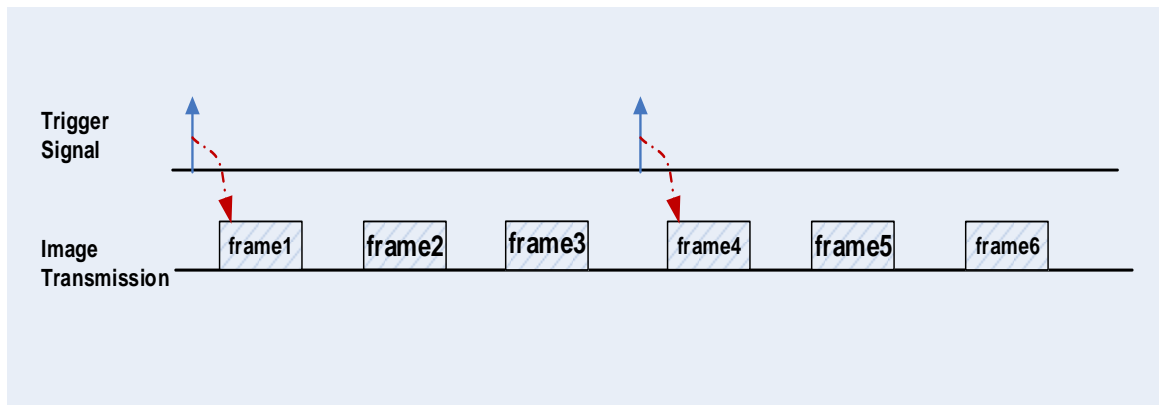


Figure 8-20 FrameBurstStart trigger

- FrameStart trigger mode and FrameBurstStart trigger mode are selected at the same time

If the **FrameStart** trigger mode and the **FrameBurstStart** trigger mode are selected at the same time, the trigger sequence is: first send the **FrameBurstStart** trigger signal, then send the **FrameStart** trigger signal. Each time a **FrameStart** trigger signal is sent, an image is acquired until the value of the "Acquisition burst frame count" parameter is reached.

For example, the **FrameStart** trigger mode and the **FrameBurstStart** trigger mode are selected at the same time. If the "Acquisition burst frame count" parameter is set to 3, when the camera receives a **FrameBurstStart** trigger signal, no image will be acquired. When the **FrameStart** trigger signal is received, the camera will acquire 1 image, each time a **FrameStart** trigger signal is received, the camera will acquire 1 image. When 3 images are acquired, the camera will wait for the next **FrameBurstStart** trigger signal, and so on.

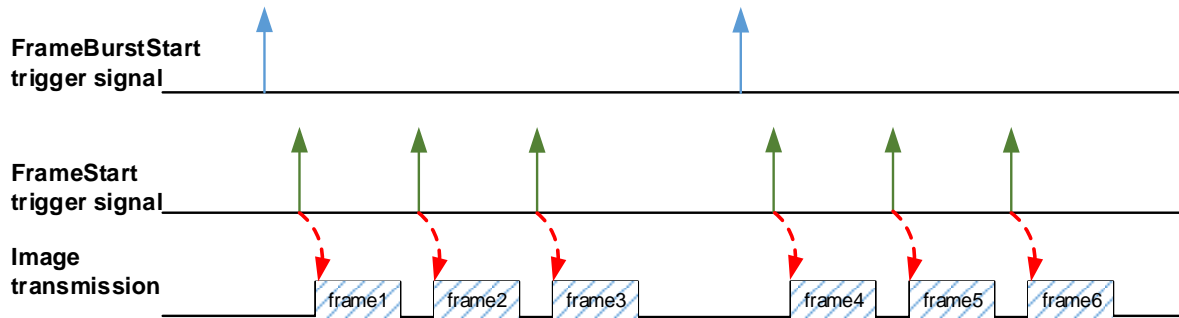


Figure 8-21 Two trigger modes are selected at the same time

#### 8.2.4. Switching Trigger Mode

During the stream acquisition process, the user can switch the trigger mode of the camera without the **AcquisitionStop** command.

As shown below, switching the trigger mode at different positions will have different results.

- Switch trigger mode during frame reading out

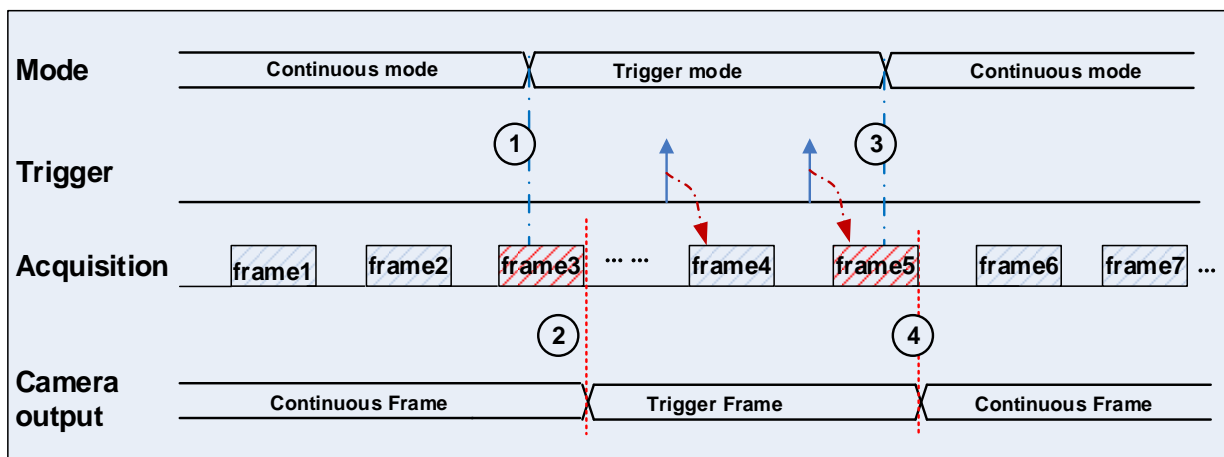


Figure 8-22 Switch trigger mode during frame reading out

As shown in Figure 8-22, the camera starts with trigger mode **OFF** after receiving acquisition start command.

At point 1, the camera gets a command of setting trigger mode **ON** while transferring the 3<sup>rd</sup> frame in trigger mode **OFF**. The trigger mode is not active until the 3<sup>rd</sup> frame is finished, at point 2, and then the trigger signal will be accepted. At point 3, the camera gets a command of switching back to **OFF**. It is also not active until the 5<sup>th</sup> frame is finished, it should wait a complete reading out. The camera switches from trigger mode to continuous mode at point 4, and then the camera works in continuous mode.

- Switch trigger mode during blanking

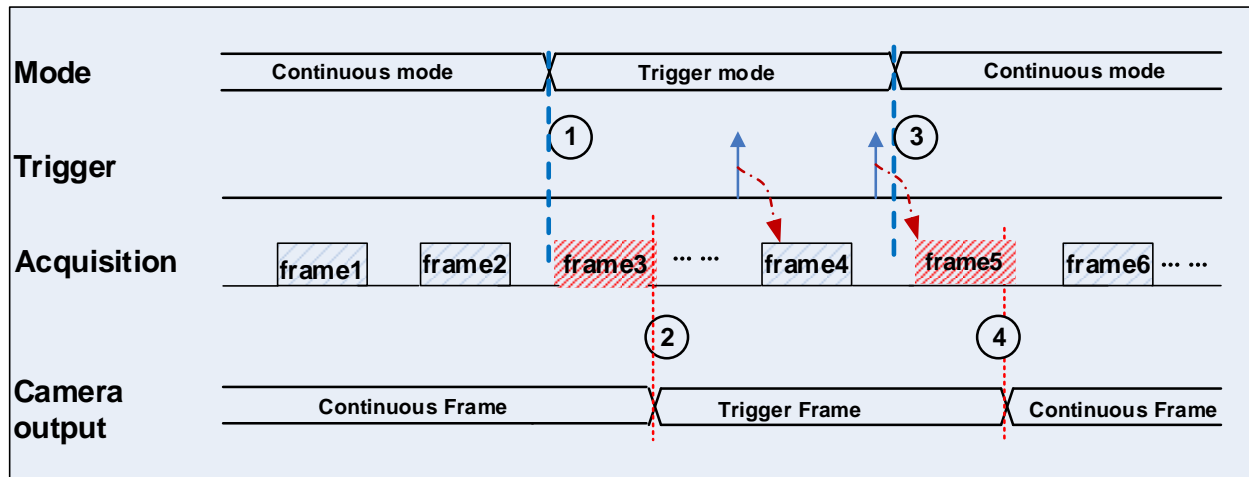


Figure 8-23 Switch trigger mode during blanking

As shown in Figure 8-23, the camera with trigger mode **OFF** begins after receiving an **AcquisitionStart** command.

At point 1, the camera gets a command of setting trigger mode **ON** while it is in wait state. The trigger mode is not active until the 3<sup>rd</sup> frame is finished, i.e., point 2. Please note that the 3<sup>rd</sup> frame does not belong to trigger mode. All trigger frames need trigger signals or software trigger commands. At point 3, the camera gets a command of switching back to continuous mode. It is also not active until the 5<sup>th</sup> frame is finished, it should wait a complete frame. The camera switches from trigger mode to continuous mode at point 4, and then the camera works in continuous mode.

### 8.2.5. Continuous Mode and Configuration

- Continuous mode configuration

The default value of **Trigger Mode** is **OFF** in default user set. If the camera is opened with default user set, the camera works in continuous mode directly. Otherwise, user can set **Trigger Mode** to **OFF** to work in continuous mode.

Other parameters also can be changed in **Trigger Mode OFF**.

- Continuous mode features

In continuous acquisition mode, the camera acquires and transmits images according to camera parameter set.



In continuous mode, ROI size may have effects on frame rate.

### 8.2.6. Software Trigger Acquisition and Configuration

- Software trigger acquisition configuration

The camera supports software trigger acquisition mode. Three steps followed should be ensured.

- 1) Set the Trigger Mode to ON.



- 2) Set the Trigger Source to Software.
- 3) Send Software Trigger command.

All the software trigger commands are sent by the host through the USB3.0 bus, to trigger the camera to acquire and transmit images.

#### ● Software trigger acquisition features

In software trigger acquisition mode, the camera begins to acquire one image after receiving software trigger commands. In general, the number of frames is equal to the number of software trigger commands. The relative features are illustrated below:

- 1) In software trigger acquisition mode, if the trigger frequency is lower than permissible maximal FPS (Frame per Second) of the camera, the current frame rate is trigger frequency. If the trigger frequency is higher than permissible maximal FPS (Frame per Second) of the camera, some software triggers are ignored and the current frame rate is lower than trigger frequency.
- 2) The trigger delay feature can control the camera delay interval between your triggers and the camera acquiring frames. The default value of trigger delay time is zero.

#### 8.2.7. External Trigger Acquisition and Configuration

##### ● External trigger acquisition configuration

The MER2-U3 camera supports external trigger acquisition mode. Three steps followed should be ensured:

- 1) Set the Trigger Mode to ON.
- 2) Set the Trigger Source to Line0, Line2 or Line3 (for ME2L cameras, set the Trigger Source to Line0, or Line2).
- 3) Connect external trigger signal to Line0.

If the Trigger Source is set by Line2 or Line3, it should be ensured that the corresponding Line is set as Input.

Please refer to [section 8.1.1](#) for more information of the MER2-U3 camera programmable GPIOs (for ME2L cameras, please refer to [section 8.1.2](#)).

##### ● External Trigger acquisition features

The relative features about the camera's trigger signal process are illustrated below:

- 1) The polarity of lines can be set to inverted or not inverted, and the default setting is not inverted.
- 2) Improper signal can be filtered by setting appropriate value to trigger filter. Raising edge filter and falling edge can be set separately. The range is from 0 to 5000 us. The default configuration is not use trigger filter.
- 3) The time interval between trigger and exposure can be set through the trigger delay feature. The range of time interval covers from 0 to 3000000μs. The default value of trigger delay time is zero.

The features, like trigger polarity, trigger delay and trigger filter, can be select in the GalaxyView.



The camera's trigger source Line0 uses opto-isolated circuit to isolate signal. Its internal circuit delay trigger signal and rising edge's delay time is less than falling edge's. There are a dozen clock cycles delay of rising edge and dozens clock cycles delay of falling edge. If you use Line0 to trigger the camera, the positive pulse signal's positive width will be wider (about 20-40 $\mu$ s) and the negative pulse signal's negative width will be narrower (about 20-40 $\mu$ s). You can adjust filter parameter to accurately filter trigger signal.

- Exposure delay

When an external trigger signal is received to the sensor to start exposure, there is a small delay, which is called the exposure delay and consists of four parts of time, as shown in Figure 8-24.

T1: The delay introduced by the hardware circuit when the external signal passes through the optocoupler or GPIO. The value is generally in the range of several to several tens of  $\mu$ s. The delay is mainly affected by the connection mode, driving intensity and temperature. When the external environment is constant, the delay is generally stable.

T2: Delay introduced by the trigger filter. For example, if the trigger filter time is set to 50 $\mu$ s, T2 is 50 $\mu$ s.

T3: Trigger delay (trigger\_delay), the camera supports trigger delay feature. If the trigger delay is set to 200 $\mu$ s, T3 is 200 $\mu$ s.

T4: The sensor timing sequence delay, the internal exposure of the sensor is aligned with the row timing sequence, so T4 has a maximum row cycle jitter. The value of each sensor is different. Some products with large delay time (several hundred  $\mu$ s or more) have additional configuration time counted in T4.

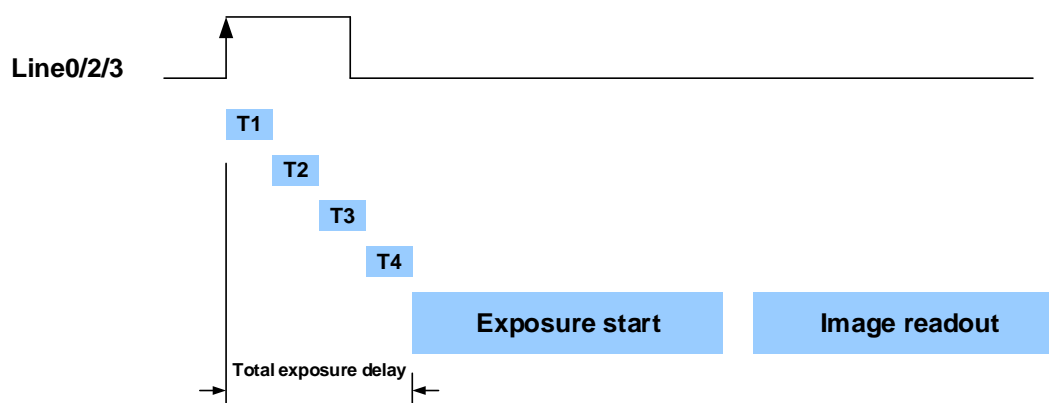


Figure 8-24 Exposure delay

The following table shows the total exposure delay time for each sensor.

T1 is calculated according to the typical delay (5 $\mu$ s) of line0. If it is line2/3, T1 can be ignored.

T2 is calculated as 0 $\mu$ s.

T3 is calculated as 0 $\mu$ s.

T4 is calculated according to the ROI settings and features of each sensor.

The exposure delay data for each model is as follows:

Model	Exposure delay (us)
MER2-041-436U3M/C	Mono8/BayerRG8: 13~17
MER2-160-227U3M/C	Mono8/BayerRG8: 13~17 Mono10/BayerRG10: 20.6~28.5
MER2-230-168U3M/C	Mono8/BayerRG8: 15~20 Mono10/BayerRG10: 24.2~33.8
MER2-231-41U3M/C	44.8~64.7
MER2-301-125U3M/C	Mono8/BayerRG8: 15~20 Mono10/BayerRG10: 29.2~36.3
MER2-302-56U3M/C	33.8~45.1
MER2-502-79U3M/C	Mono8/BayerRG8: 17~23 Mono10/BayerRG10: 29.2~36.3
MER2-503-36U3M/C	31.6~44.9
MER2-630-60U3M/C	BayerRG8/Mono8: 2357us BayerRG10/Mono10: 2707us
MER2-1220-32U3M/C	Mono8/BayerRG8: 650 Mono12/BayerRG12: 1260
MER2-2000-19U3M/C	Mono8/BayerRG8: 800 Mono12/BayerRG12: 1550
ME2P-1230-23U3M/C	33~89
ME2P-2621-15U3M/C	25~67
ME2L-161-61U3M	N/A

Table 8-3 Camera exposure delay range

## 8.2.8. Set Exposure

### 8.2.8.1. Set Exposure Mode

Two Exposure Mode are available: Timed exposure mode and TriggerWidth exposure mode. Among them, the TriggerWidth exposure mode determines the exposure time when the camera is configured for external triggering. And the exposure time depends on the width of the trigger signal, which is triggered by the rising edge (falling edge) set by the Trigger Activation.

#### 1) Available exposure mode

##### a) Timed exposure mode

Timed exposure mode is available on all camera models. In this mode, the exposure time is determined by the camera's Exposure Time setting. If the camera is configured for software triggering, exposure starts when the software trigger signal is received and continues until the exposure time has expired.

If the camera is configured for external trigger:

- If rising edge triggering is enabled, exposure starts when the trigger signal rises and continues until the exposure time has expired, as shown in Figure 8-25

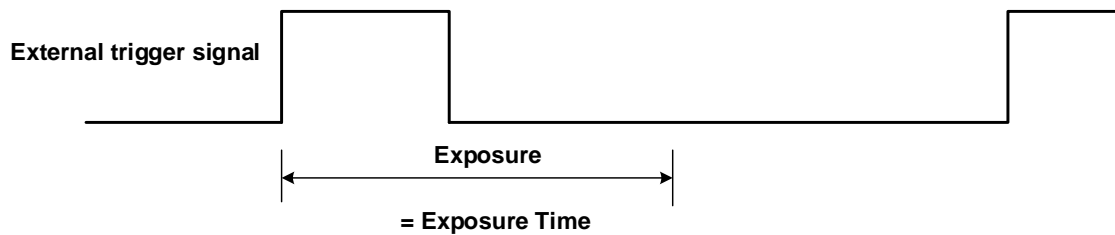


Figure 8-25 The sequence diagram in rising edge trigger of Timed exposure mode

- If falling edge triggering is enabled, exposure starts when the trigger signal falls and continues until the exposure time has expired, as shown in Figure 8-26

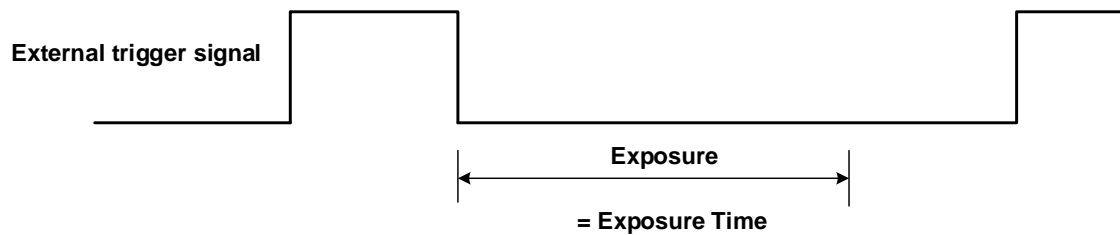


Figure 8-26 The sequence diagram in falling edge trigger of Timed exposure mode

Avoid overtriggering in Timed exposure mode. If the Timed exposure mode is enabled, do not attempt to send a new trigger signal while the previous exposure is still in progress. Otherwise, the trigger signal will be ignored, and a FrameStartOvertrigger event will be generated.

#### b) TriggerWidth exposure mode

In TriggerWidth exposure mode, the length of exposure is determined by the width of the external trigger signal. This function can meet the needs of users to change the exposure time of each frame of image.

- If rising edge triggering is enabled, exposure starts when the trigger signal rises and continues until the trigger signal falls, as shown in Figure 8-27

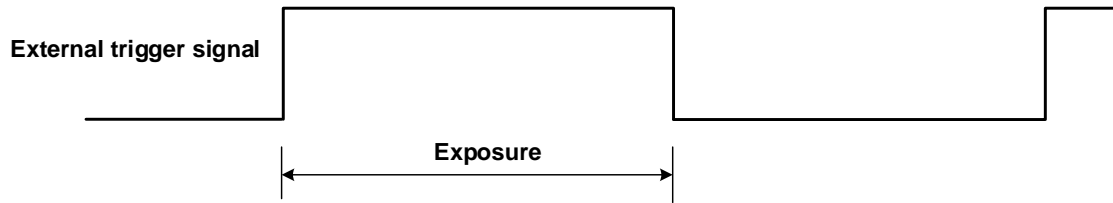


Figure 8-27 The sequence diagram in rising edge trigger of TriggerWidth exposure mode

- If falling edge triggering is enabled, exposure starts when the trigger signal falls and continues until the trigger signal rises, as shown in Figure 8-28



Figure 8-28 The sequence diagram in falling edge trigger of TriggerWidth exposure mode

Avoid overtriggering in TriggerWidth exposure mode. If the TriggerWidth exposure mode is enabled, do not send trigger signals at too high a rate. Otherwise, trigger signals will be ignored, and a FrameStartOvertrigger event will be generated.



The trigger signal width of the external triggering should not be shorter than the value of the entered ExposureOverlapTimeMax (for more details please see [section 8.3.20](#)) parameter.

If TriggerWidth exposure mode is enabled:

## 2) Prerequisites

- Set the TriggerMode parameter to On.
- Set the TriggerSource parameter to one of the available external trigger sources, e.g., Line0.
- Set the ExposureMode parameter to TriggerWidth (if available).

Camera models that support this feature:

Model
MER2-502-79U3M/C

### 8.2.8.2. Set Exposure Value

#### ● Global Shutter

The MERCURY2 camera (MER2-041-436U3M/C(-L), MER2-160-227U3M/C(-L), MER2-230-168U3M/C(-L), MER2-231-41U3M/C(-L), MER2-301-125U3M/C(-L), MER2-502-79U3M/C(-L), MER2-503-36U3M/C(-L), MER2-302-56U3M/C(-L), ME2P-1230-23U3M/C, ME2P-2621-15U3M/C, ME2L-161-61U3M(-L)) uses global shutter sensors. The implementation process of global shutter is as shown in Figure 8-29, all the

lines of the sensor are exposed at the same time, and then the sensor will read out the image data one by one.

The advantage of the global shutter is that all the lines are exposed at the same time, and the images do not appear offset and distortion when capturing moving objects.

The time width of the flash signal can be got by the following formula:

$$T_{strobe} = T_{exposure}$$

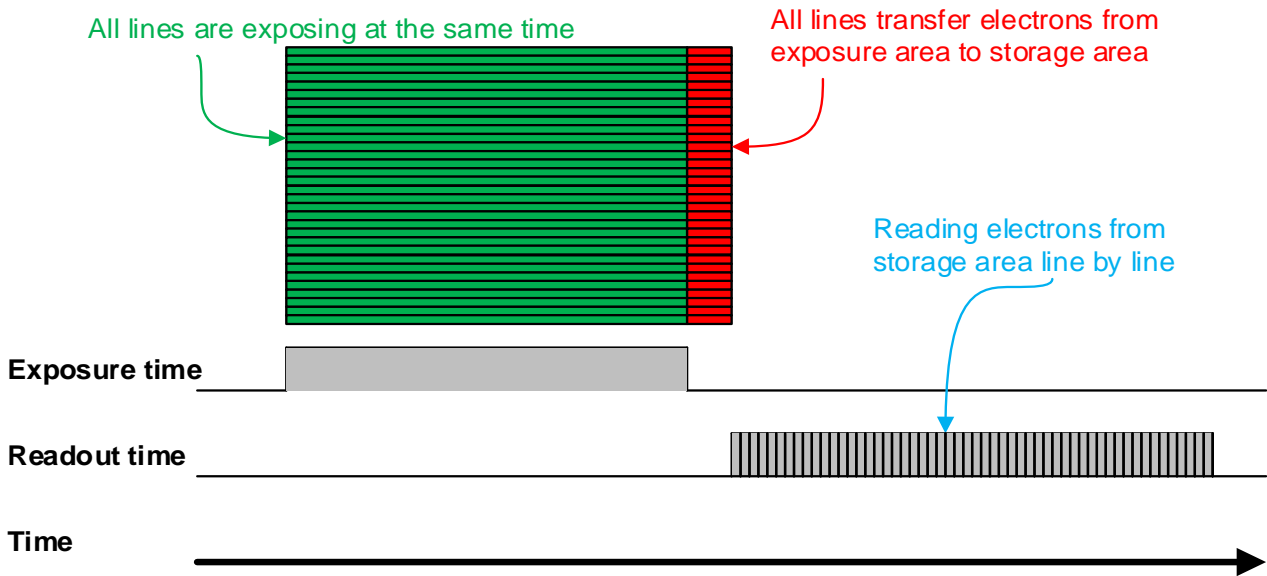


Figure 8-29 Global shutter

### ● Electronic Rolling Shutter

MER2-630-60U3M/C(-L), MER2-1220-32U3M/C(-L) and MER2-2000-19U3M/C(-L) cameras use electronic rolling shutter sensors. The implementation process of electronic rolling shutter is as shown in Figure 8-30, different from the global shutter, electronic rolling shutter exposures from the first line, and starts the second line exposure after a row period. And so on, after N-1 line, the N line starts exposing. When the first line exposure ends, it begins to read out the data, and it need a row period time to read out one line (including the line blanking time). When the first line reads out completely, the second line just begins to read out, and so on, when the N-1 line is read out, the N line begins to read out, until the whole image is read out completely.

The electronic rolling shutter has low price and high resolution, which is a good choice for some static image acquisition.

The time width of the flash signal can be got by the following formula:

$$T_{strobe} = T_{exposure} - (N - 1) * T_{row}$$

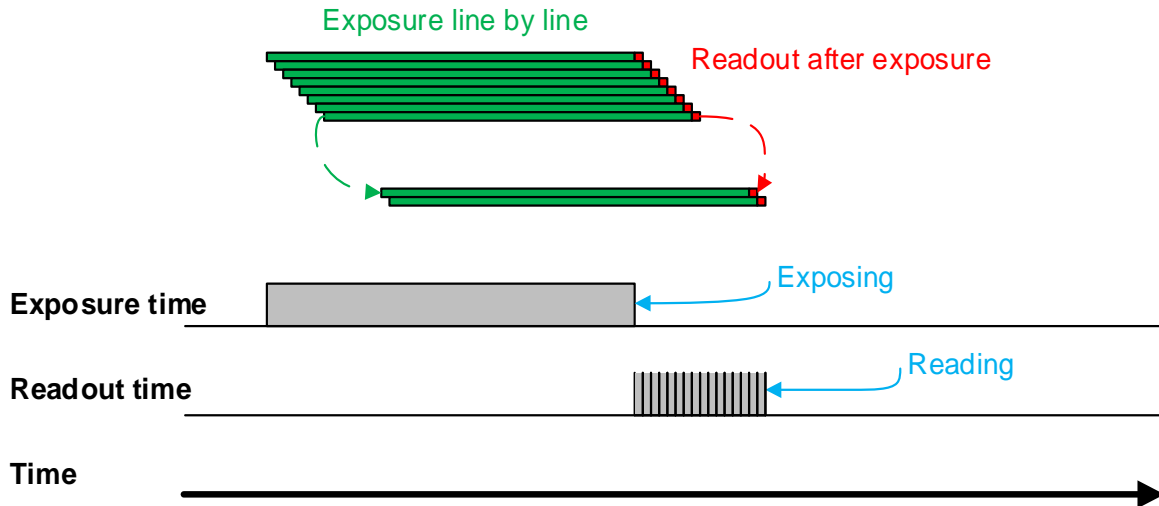


Figure 8-30 Electronic rolling shutter

### ● Global Reset Release Shutter

As the sensor starts exposure line by line, all of the pixels in the sensor start exposing at the same time. However, the end time of upper lines and lower lines of the same frame of image is different when capturing fast moving objects, so the distortion will occur. The Global Reset Release (GRR) shutter mode can effectively avoid the distortion. If the camera is operated in the GRR shutter mode, you must use flash lighting.

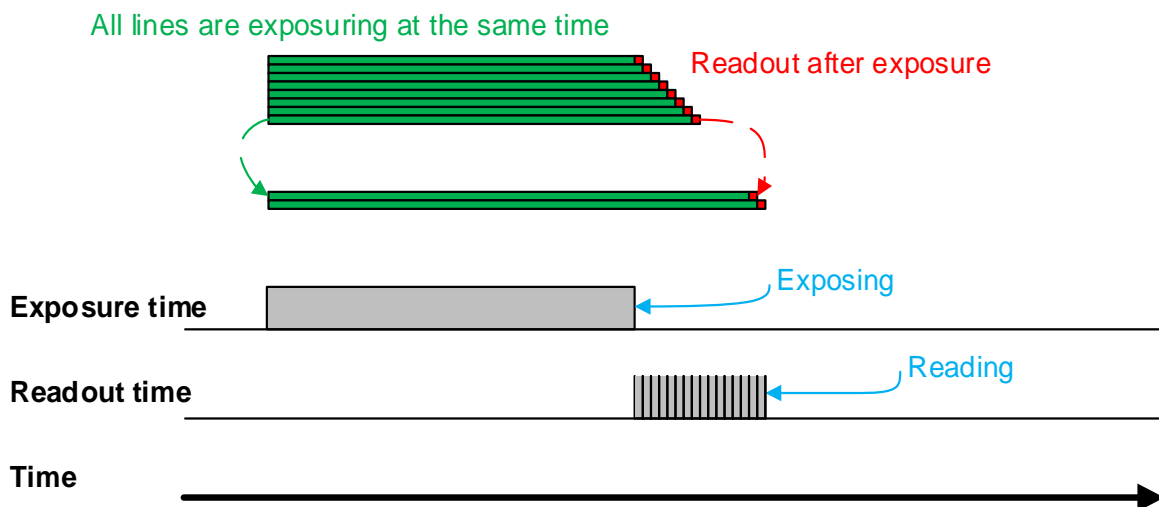


Figure 8-31 Global Reset Release shutter

Line-by-line exposure sensor starts exposure at the same time in GRR mode, and the exposure ends successively from top to bottom. As shown in the Figure 8-31, the exposure time is the common exposure interval, which is also the interval that the flash lighting needs to be opened. That is, the exposure time signal goes high when you can start the flash lighting, and the exposure time signal goes low when you should stop the flash lighting. Otherwise, the brightness in the acquired images will vary significantly from top to bottom due to the differences in the exposure time of the individual lines. In addition, the image will be distortional due to different exposure end time of the individual lines.

The exposure delay is supported in GRR mode. At the same time, there is a certain delay due to the flash lighting, and the actual duration of the flash is as follows:

$$T_{strobe} = T_{exposure} + T_{exp\_delay} + T_{row} * 18$$

Settings:

- 1) Set the SensorShutterMode to Global Reset.
- 2) Connect the camera to the flash lighting.

Camera models that support this feature:

Model
MER2-2000-19U3M/C(-L)

### ● Setting the exposure time

The MER2-U3 series camera supports setting the exposure time, step: 1μs. The exposure time is shown as follows:

Model	Exposure Mode	Adjustment Range (μs)	Steps (μs)	Actual Steps
MER2-041-436U3M/C(-L)	Global Shutter	20-1000000	1	1 row period*
MER2-160-227U3M/C(-L)	Global Shutter	20-1000000	1	1 row period*
MER2-230-168U3M/C(-L)	Global Shutter	20-1000000	1	1 row period*
MER2-231-41U3M/C(-L)	Global Shutter	20-1000000	1	1 row period*
MER2-301-125U3M/C(-L)	Global Shutter	20-1000000	1	1 row period*
MER2-302-56U3M/C(-L)	Global Shutter	20-1000000	1	1 row period*
MER2-502-79U3M/C(-L)	Global Shutter	24-1000000	1	1 row period*
MER2-503-36U3M/C(-L)	Global Shutter	20-1000000	1	1 row period*
MER2-630-60U3M/C(-L)	Rolling Shutter	8-1000000	1	1 row period*
MER2-1220-32U3M/C(-L)	Rolling Shutter	10-1000000	1	1 row period*
MER2-2000-19U3M/C(-L)	Rolling Shutter	12-1000000	1	1 row period*
ME2P-1230-23U3M/C	Global Shutter	28-1000000	1	1 row period*
ME2P-2621-15U3M/C	Global Shutter	10-1000000	1	1 us
ME2L-161-61U3M(-L)	Global Shutter	20-1000000	1	1 row period*

Table 8-4 MER2-U3 series camera exposure time setting range



\*The exposure precision of the camera is limited by the sensor, when the steps in the user's interface and the demo display as  $1\mu\text{s}$ , actually the steps are one row period. When the value of the ExposureTime cannot be divisible by the row period, round up to an integer should be taken, such as the row period is  $36\mu\text{s}$ , setting exposure time to  $80\mu\text{s}$ , and the actual exposure time is  $108\mu\text{s}$ .

When the external light source is sunlight or direct current (DC), the camera has no special requirements for the exposure time. When the external light source is alternating current (AC), the exposure time must synchronize with the external light source (under 50Hz light source, the exposure time must be a multiple of  $1/100\text{s}$ , under 60Hz light source, the exposure time must be a multiple of  $1/120\text{s}$ ), to ensure better image quality. You can set the exposure time that is synchronized with the external light source by using the demo or interface function.

The MER2-U3 series camera supports Auto Exposure feature. If the Auto Exposure feature is enabled, the camera can adjust the exposure time automatically according to the environment brightness. See [section 8.3.4](#) for more details.

### 8.2.9. Overlapping Exposure and Non-overlapping Exposure

There are two stages in image acquisition of the MER2-U3 series camera: exposure and readout. Once the camera is triggered, it begins to integrate and when the integration is over, the image data will be read out immediately.

The MER2-U3 series camera supports two exposure modes: overlapping exposure and non-overlapping exposure. The user cannot assign the overlapping exposure or non-overlapping exposure directly, it depends on the frequency of trigger signal and the exposure time. The two exposure mode are described as below.

- Non-overlapping exposure

In non-overlapping exposure mode, after the exposure and readout of the current frame are completed, then the next frame will expose and read out. As shown in the Figure 8-32, the  $N^{\text{th}}$  frame is read out, after a period of time, the  $N+1^{\text{th}}$  frame to be exposed.

The formula of non-overlapping exposure frame period:

$$\text{non-overlapping exposure frame period} > \text{exposure time} + \text{readout time}$$

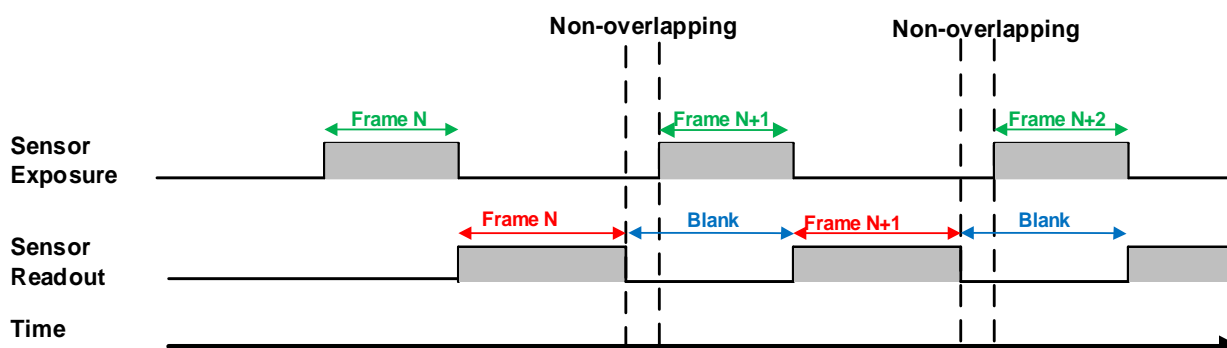


Figure 8-32 The exposure sequence diagram in non-overlapping exposure mode

- Trigger acquisition mode

If the interval between two triggers is greater than the sum of the exposure time and readout time, overlapping exposure will not occur, as shown in Figure 8-33.

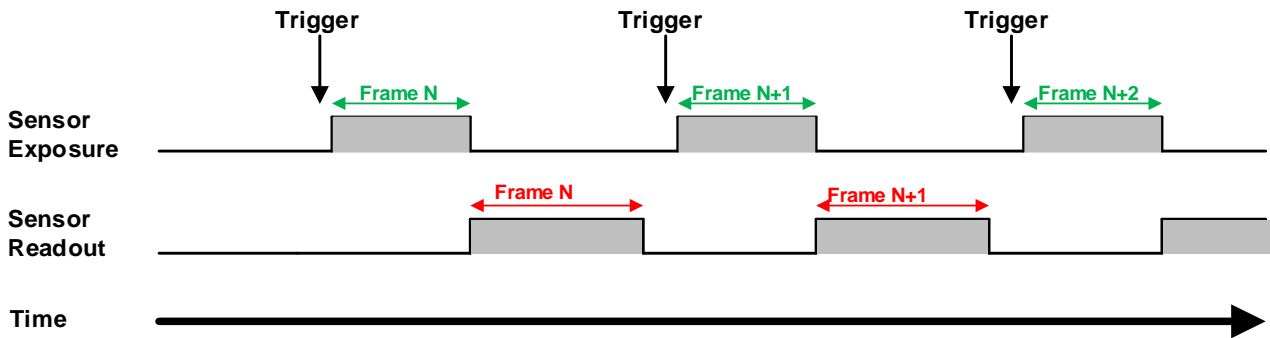


Figure 8-33 The trigger acquisition exposure sequence diagram in non-overlapping exposure mode

### ● Overlapping exposure

In overlapping exposure mode, the current frame image exposure process is overlap with the readout of the previous frame. That is, when the previous frame is reading out, the next frame image has been started exposure. As shown in the Figure 8-34, when the N<sup>th</sup> frame image is reading out, the N+1<sup>th</sup> frame image has been started exposure.

The formula of overlapping exposure frame period:

$$\text{overlapping exposure frame period} \leq \text{exposure time} + \text{readout time}$$

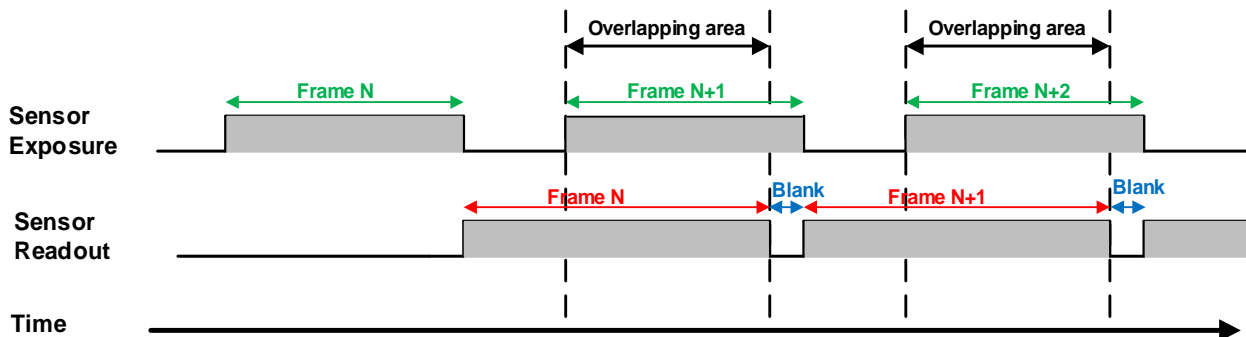


Figure 8-34 The exposure sequence diagram in overlapping exposure mode

### ● Continuous acquisition mode

If the exposure time is greater than the frame blanking time, the exposure time and the readout time will be overlapped. As shown in the Figure 8-34.

### ● Trigger acquisition mode

When the interval between two triggers is less than the sum of exposure time and the readout time, overlapping exposure will occur, as shown in Figure 8-35.

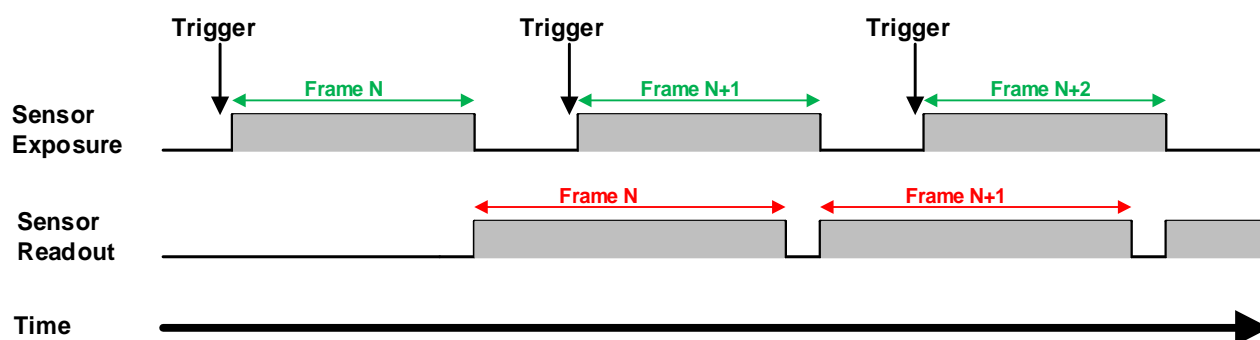


Figure 8-35 The trigger acquisition exposure sequence diagram in overlapping exposure mode

Compared with non-overlapping exposure mode, in overlapping exposure mode, the camera can obtain higher frame rate.

## 8.3. Basic Features

### 8.3.1. Gain

The MER2-U3 series camera can adjust the analog gain, and the range of analog gain is as follows:

Model	Adjustment Range	Default/Steps
MER2-041-436U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-160-227U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-230-168U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-231-41U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-301-125U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-302-56U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-502-79U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-503-36U3M/C(-L)	0-23.9dB	0dB, 0.1dB
MER2-630-60U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-1220-32U3M/C(-L)	0-24dB	0dB, 0.1dB
MER2-2000-19U3M/C(-L)	0-24dB	0dB, 0.1dB
ME2P-1230-23U3M/C	0-24dB	0dB, 0.1dB
ME2P-2631-15U3M/C	0-16dB	0dB, 0.1dB

ME2L-161-61U3M(-L)	0-24dB	0dB, 0.1dB
--------------------	--------	------------

Table 8-5 MER2-U3 series camera analog gain adjustment range

When the analog gain changes, the response curve of the camera changes, as shown in Figure 8-36. The horizontal axis represents the output signal of the sensor in the camera, and the vertical axis represents the gray value of the output image. When the amplitude of the sensor output signal remains constant, increasing the gain makes the response curve steeper, and that makes the image brighter. For every 6dB increases of the gain, the gray value of the image will double. For example, when the camera has a gain of 0dB, the image gray value is 126, and if the gain is increased to 6dB, the image gray will increase to 252. Thus, increasing gain can be used to increase image brightness. When the environment brightness and exposure time keep constant, another way to increase the image brightness is to change the camera's digital gain by modifying the lookup table, for more details please see [section 8.4.2](#).

Note that increasing the analog gain or digital gain will amplify the image noise.

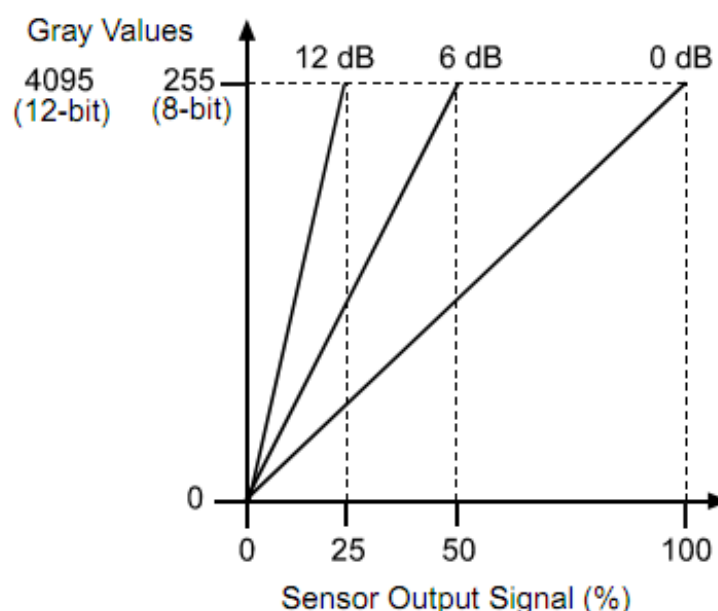


Figure 8-36 The cameras response curve

### 8.3.2. Pixel Format

By setting the pixel format, the user can select the format of output image. The available pixel formats depend on the camera model and whether the camera is monochrome or color. The following table shows the pixel format supported by the camera.

Model	Pixel Format
MER2-041-436U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10
MER2-160-227U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10
MER2-230-168U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10

MER2-231-41U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10
MER2-301-125U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10
MER2-302-56U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10
MER2-502-79U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10
MER2-503-36U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10
MER2-630-60U3M/C(-L)	Mono8, Mono10, BayerRG8, BayerRG10
MER2-1220-32U3M/C(-L)	Mono8, Mono12, BayerRG8, BayerRG12
MER2-2000-19U3M/C(-L)	Mono8, Mono12, BayerRG8, BayerRG12
ME2P-1230-23U3M/C	Mono8, Mono12, BayerRG8, BayerRG12
ME2P-2621-15U3M/C	Mono8, Mono12, BayerGB8, BayerGB12
ME2L-161-61U3M(-L)	Mono8, Mono10, BayerRG8, BayerRG10

Table 8-6 Pixel format that the MER2-U3 series camera supported

The image data starts from the upper left corner, and each pixel is output brightness value of each pixel line from left to right and from top to bottom.

- Mono8

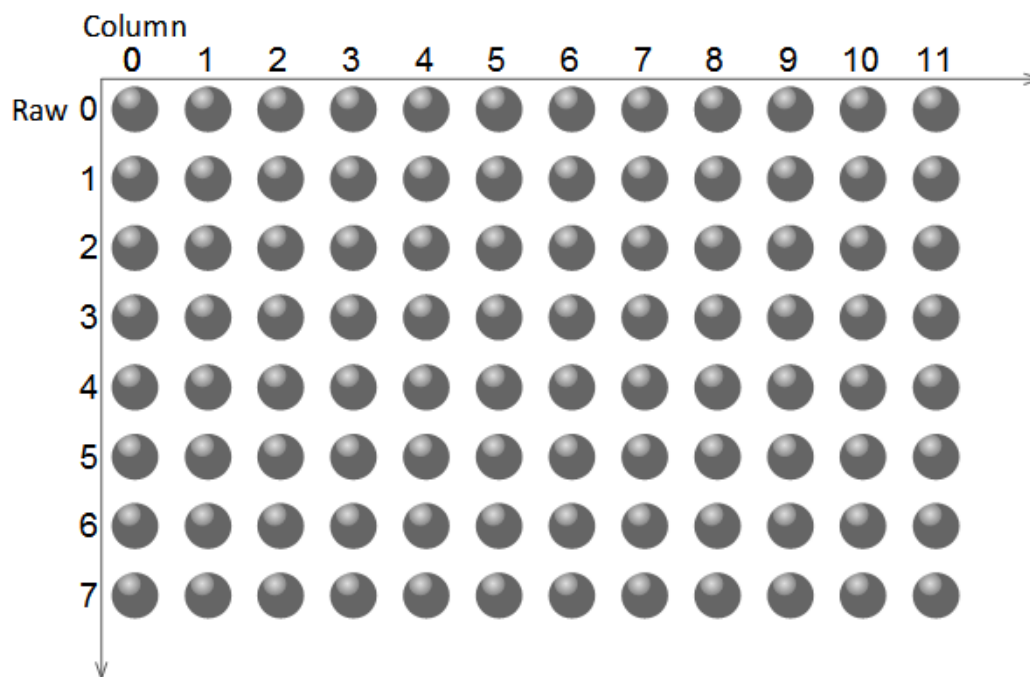


Figure 8-37 Mono8 pixel format

When the pixel format is set to Mono8, the brightness value of each pixel is 8 bits. The format in the memory is as follows:

Y00	Y01	Y02	Y03	Y04	.....
Y10	Y11	Y12	Y13	Y14	.....
.....					

Among them Y00, Y01, Y02 ... are the gray value of each pixel that starts from the first row of the image. Then the gray value of the second row pixels of the images is Y10, Y11, and Y12...

#### ● Mono10/Mono12

When the pixel format is set to mono10 or Mono12, each pixel is 16 bits. When Mono10 is selected, the effective data is only 10 bits, the six unused most significant bits are filled with zero. When Mono12 is selected, the effective data is only 12 bits, the 4 of the MSB 16 bits data are set to zero. Note that the brightness value of each pixel contains two bytes, arranged in little-endian mode. The format is as follows:

Y00	Y01	Y02	Y03	Y04	.....
Y10	Y11	Y12	Y13	Y14	.....
.....					

Among them Y00, Y01, Y02...are the gray value of each pixel that start with the first row of the image. The first byte of each pixel is low 8 bits of brightness, and the second byte of each pixel is high 8 bits of brightness.

#### ● BayerRG8

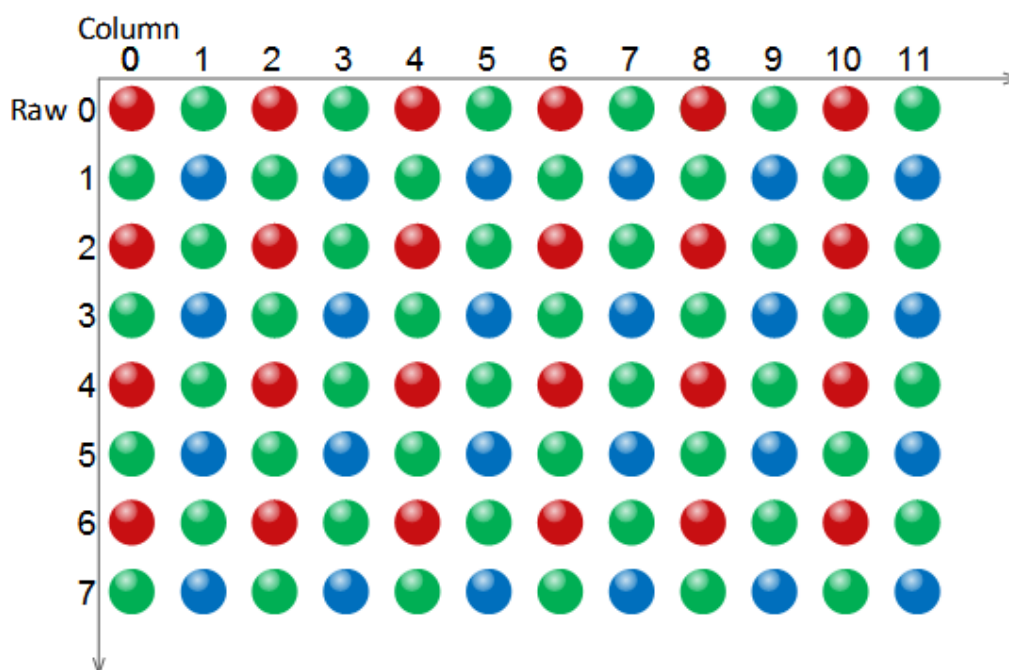


Figure 8-38 BayerRG8 pixel format

When the pixel format is set to BayerRG8, the value of each pixel in the output image of the camera is 8 bits. According to the location difference, the three components of red, green and blue are respectively represented. The format in the memory is as follows:

R00	G01	R02	G03	R04	.....
G10	B11	G12	B13	G14	.....
.....					

Where R00 is the first pixel value of the first row (for the red component), G01 represents the second pixel value (for the green component), and so on, so that the first row pixel values are arranged. G10 is the first pixel value of the second row (for the green component), the B11 is the second pixel value (for the blue component), and so on, and the second row of pixel values are arranged.

#### ● BayerRG10/BayerRG12

When the pixel format is set to BayerRG10 or BayerRG12, the value of each pixel in the output image of the camera is 16 bits. According to the location difference, the three components of red, green and blue are respectively represented. The format in the memory is as follows:

R00	G01	R02	G03	R04	.....
G10	B11	G12	B13	G14	.....
.....					

Each pixel is the same as BayerRG8, the difference is that each pixel is made up of two bytes, the first byte is the low 8 bits of the pixel value, and the second byte is the high 8 bits of the pixel value.

### 8.3.3. ROI

By setting the ROI of the image, the camera can transmit the specific region of the image, and the output region's parameters include OffsetX, OffsetY, width and height of the output image. The camera only reads the image data from the sensor's designated region to the memory, and transfer it to the host, and the other regions' image of the sensor will be discarded.

By default, the image ROI of the camera is the full resolution region of the sensor. By changing the OffsetX, OffsetY, width and height, the location and size of the image ROI can be changed. The OffsetX refers to the starting column of the ROI, and the OffsetY refers to the starting row of the ROI. Among them, the step of OffsetX and width is 4, and the step of OffsetY and height is 2.

The coordinates of the ROI of the image are defined the 0<sup>th</sup> row and 0<sup>th</sup> column as the origin of the upper left corner of the sensor. As shown in the figure, the OffsetX of the ROI is 4, the OffsetY is 4, the height is 8 and the width is 12.

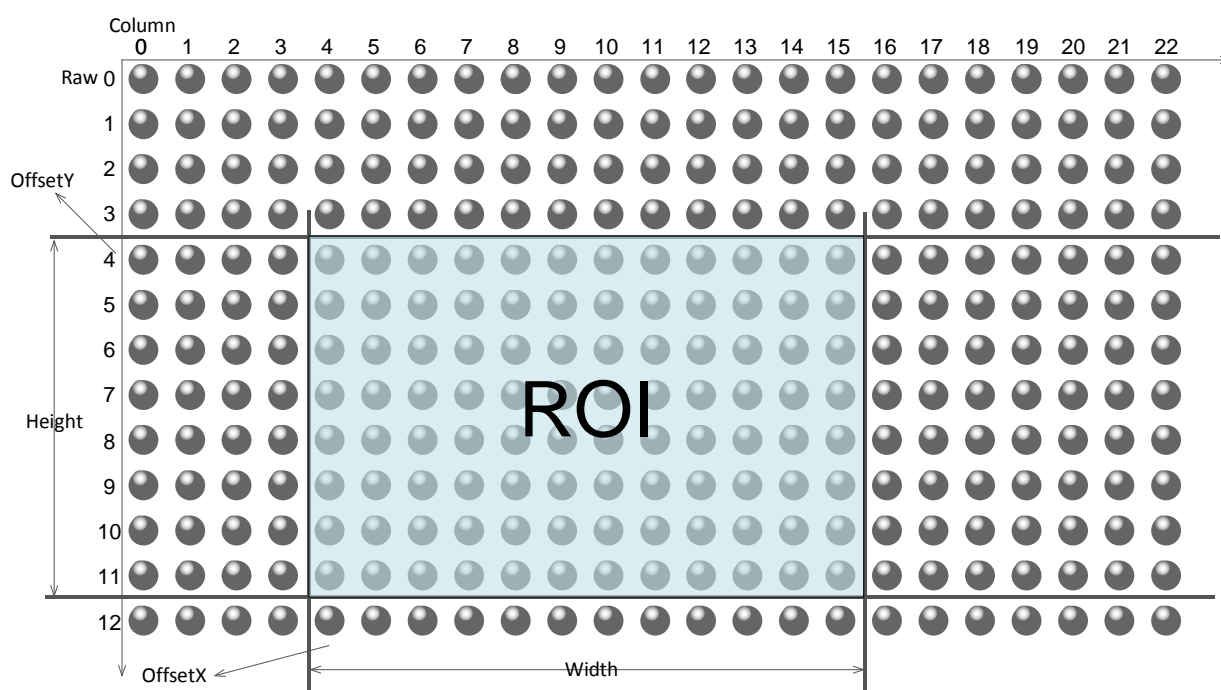


Figure 8-39 ROI

When reducing the height of the ROI, the maximum frame rate of the camera will be raised. Please refer to [section 8.5.1](#) for specific effects on the acquisition frame rate.

### 8.3.4. Auto Exposure/Auto Gain

#### 8.3.4.1. ROI Setting of Auto Exposure/ Auto Gain

For Auto Exposure and Auto Gain, you can specify a portion of the sensor array and only the pixel data from the specified portion will be used for auto function control.

AAROI is defined by the following way:

AAROIOffsetX: The offset of the X axis direction.

AAROIOffsetY: The offset of the Y axis direction.



AAROIWidth: The width of ROI.

AAROIHeight: The height of ROI.

Offset is the offset value that relative to the upper left corner of the image. The step of AAROIOffsetX and AAROIWidth is 4. The step of AAROIOffsetY and AAROIHeight is 2. The setting of the AAROI depends on the size of the current image and cannot exceed the range of the current image. That is to say, assuming the Width and Height are parameters for users captured image, then the AAROI setting need to meet the condition 1:

$$\text{AAROIWidth} + \text{AAROIOffsetX} \leq \text{Width}$$

$$\text{AAROIHeight} + \text{AAROIOffsetY} \leq \text{Height}$$

If condition 1 is not met, the user cannot set the ROI.

The default value of ROI is the entire image, you can set the ROI according to your need. Where the minimum value of AAROIWidth can be set to 16, and the maximum value is equal to the current image width. The minimum value of AAROIHeight can be set to 16, and the maximum value is equal to the current image height, they are all need to meet the condition1.

For example: the current image width is 1024, the height is 1000, and then the ROI setting is:

$$\text{AAROIOffsetX} = 100$$

$$\text{AAROIOffsetY} = 50$$

$$\text{AAROIWidth} = 640$$

$$\text{AAROIHeight} = 480$$

The relative position of the ROI and the image is shown in Figure 8-40.

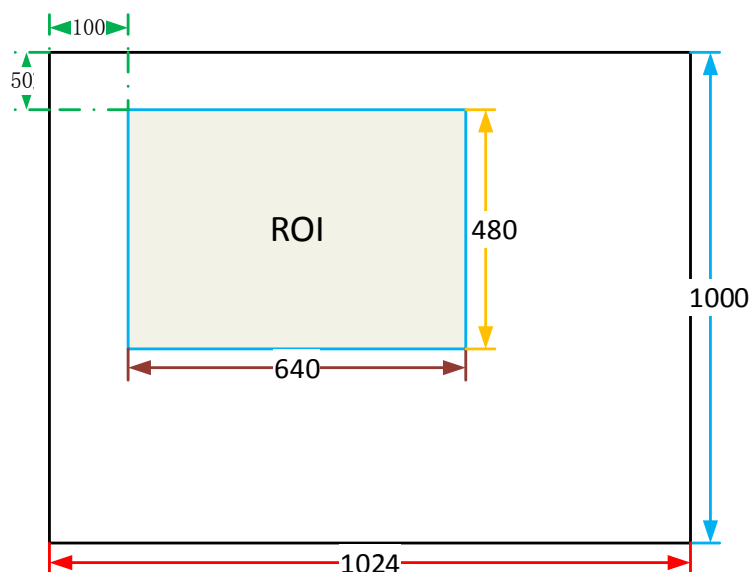


Figure 8-40 An example for the relative position between the ROI and the current image

#### 8.3.4.2. Auto Gain

The auto gain can adjust the camera's gain automatically, so that the average gray value in AAROI is achieved to the expected gray value. The auto gain can be controlled by "Once" and "Continuous" mode.

When using the "Once" mode, the camera adjusts the image data in the AAROI to the expected gray value once, then the camera will turn off the auto gain feature. When using the "Continuous" mode, the camera will continuous adjust the gain value according to the data of the AAROI, so that the data in the AAROI is kept near to the expected gray level.

The expected gray value is set by the user, and it is related to the data bit depth. For 8bit pixel data, the expected gray value range is 0-255, for 10bit pixel data, the expected gray value range is 0-1023, and for 12bit pixel data, the expected gray value range is 0-4095.

The camera adjusts the gain value within the range [minimum gain value, maximum gain value] which is set by the user.

The auto gain feature can be used with the auto exposure at the same time, when target grey is changed from dark to bright, the auto exposure adjust is prior to auto gain adjust. Vice versa, when target grey is changed from bright to dark, the auto gain adjust is prior to auto exposure adjust.

#### 8.3.4.3. Auto Exposure

The auto exposure can adjust the camera's exposure time automatically, so that the average gray value in AAROI can achieve to the expected gray value. The auto exposure can be controlled by "Once" and "Continuous" mode.

When using the "Once" mode, the camera adjusts the image data in the AAROI to the expected gray value once, then the camera will close the auto exposure feature. When using the "Continuous" mode, the camera will continuous adjusting the exposure time according to the data of the AAROI, so that the data in the AAROI is kept near to the expected gray level.

The expected gray value is set by the user and it is related to the data bit depth. For 8bit pixel data, the expected gray value range is 0-255, and for 12bit pixel data, the expected gray value range is 0-4095.

The camera adjusts the exposure time in the range [minimum exposure time, maximum exposure time] which is set by the user.

The auto exposure feature can be used with the auto gain at the same time, when target grey is changed from dark to bright, the auto exposure adjust is prior to auto gain adjust. Vice versa, when target grey is changed from bright to dark, the auto gain adjust is prior to auto exposure adjust.

### 8.3.5. Auto White Balance

#### 8.3.5.1. Auto White Balance ROI

Auto White Balance feature use the image data from AWBROI to calculate the white balance ratio, and then the white balance ratio is used to adjust the components of the image.

ROI is defined in the following way:

AWBROIOffsetX: The offset of the X axis direction.

AWBROIOffsetY: The offset of the Y axis direction.

AWBROIWidth: The width of ROI.

AWBROIHeight: The height of ROI.

Offset is the offset value that relative to the upper left corner of the image. Where the step of AWBROIOffsetX and AWBROIWidth is 4, the step of AWBROIOffsetY and AWBROIHeight is 2. The ROI setting depends on the current image and cannot exceed the current image range. Assuming the current image width is Width, the image height is Height, then the ROI setting need to meet the following condition 2:

$$\text{AWBROIWidth} + \text{AWBROIOffsetX} \leq \text{Width}$$

$$\text{AWBROIHeight} + \text{AWBROIOffsetY} \leq \text{Height}$$

If condition 2 is not met, the user cannot set the ROI.

The default value of ROI is the entire image, you can set the "white dot" area (ROI) according to your need. Where the minimum value of AWBROIWidth can be set is 16, the maximum value is equal to the current image width. The minimum value of AWBROIHeight can be set is 16, the maximum value is equal to the current image height, they are all need to meet the condition 2.

Assuming the current image width is 1024, the height is 1000, and then the "white dot" area ROI setting is:

$$\text{AWBROIOffsetX} = 100$$

$$\text{AWBROIOffsetY} = 50$$

$$\text{AWBROIWidth} = 640$$

$$\text{AWBROIHeight} = 480$$

The relative position of the ROI and the image is shown in Figure 8-41.

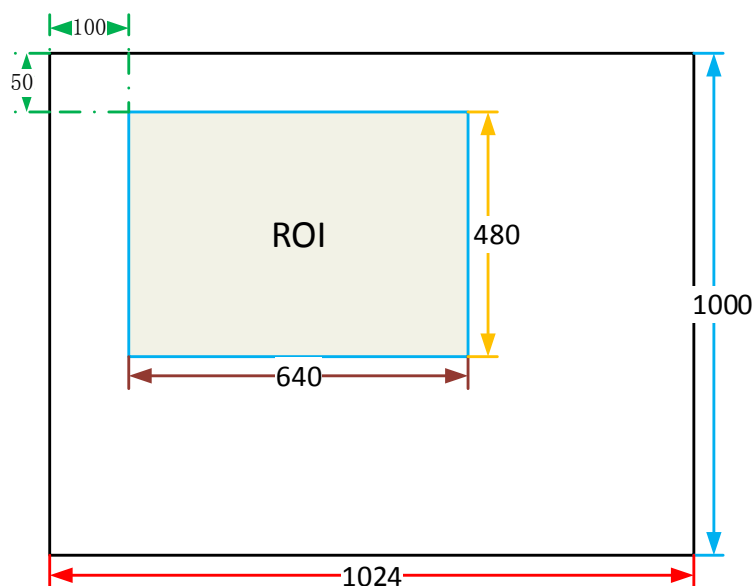


Figure 8-41 An example for the relative position between the ROI and the current image

### 8.3.5.2. Auto White Balance Adjustment

The auto white balance can be set to "Once" or "Continuous" mode. When using the "Once" mode, the camera just adjusts the white balance ratio once, when using the "Continuous" mode, the camera continuously adjusts the white balance ratio based on the data in AWBROI.

The auto white balance feature can also select the color temperature. When the color temperature of the selection is "Adaptive", the data in ROI always adjusting the red, green and blue to the same. When selecting the specific color temperature, the camera adjusts the factor according to the light source, so that the hue of the ROI is the same as the hue of the light source. That is: high temperature is cold, low color temperature is warm.

The auto white balance feature is only available on color sensors.

### 8.3.6. Test Pattern

The MER2-U3 series camera supports three test images: gray gradient test image, static diagonal gray gradient test image, and moving diagonal gray gradient test image (ME2L cameras only support gray gradient test image). When the camera captures in RAW10 mode, the gray value of test image is: the pixel gray value in RAW8 mode multiplies by 4, as the output of pixel gray value in RAW10 mode.

The following three test images are illustrated in the RAW8 mode.

- GrayFrameRampMoving

In the gray gradient test image, all the pixels' gray values are the same in the frame. In the adjacent frame, the gray value of the next frame increases by 1 compared to the previous frame, until to 255, and then the next frame gray value returns to 0, and so on. A printscreen of a single frame is shown in Figure 8-42.



Figure 8-42 Gray gradient test image

- SlantLineMoving

In the moving diagonal gray gradient test image, the first pixel value of adjacent row in each frame increases by 1, until the last row. When the pixel gray value increases to 255, the next pixel gray value returns to 0. The first pixel gray value of adjacent column increases by 1, until the last column. When the pixel gray value increases to 255, the next pixel gray value returns to 0.

In the moving diagonal gray gradient test image, in the adjacent frame, the first pixel gray value of the next frame increases by 1 compared to the previous frame. So, in the dynamic image, the image is scrolling to the left. A printscreen of the moving diagonal gray gradient test image is shown in Figure 8-43:

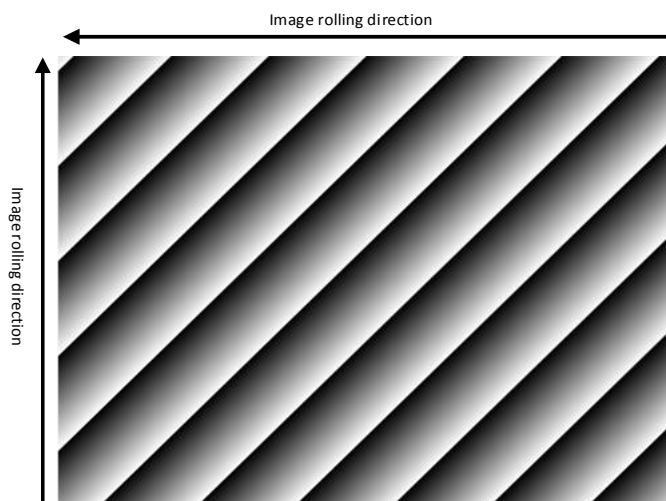


Figure 8-43 Moving diagonal gray gradient test image

- SlantLine

In the static diagonal gray gradient test image, the first pixel gray value is 0, the first pixel gray value of adjacent row increases by 1, until the last row. When the pixel gray value increases to 255, the next pixel gray value returns to 0. The first pixel gray value of adjacent column increases by 1, until the last column. When the pixel gray value increases to 255, the next pixel gray value returns to 0.

Compared to the moving diagonal gray gradient test image, in the adjacent image of the static diagonal gray gradient test image, the gray value in the same position remains unchanged. A printscreen of the static diagonal gray gradient test image is shown in Figure 8-44.



Figure 8-44 Static diagonal gray gradient test image

### 8.3.7. User Set Control

By setting various parameters of the camera, the camera can perform the best performance in different environments. There are two ways to set parameters: one is to modify the parameters manually, and the other is to load parameter set. In order to save the specific parameters of the users, avoiding to set the parameters every time when you open the camera, the MER2-U3 series camera provides a function to save the parameter set, which can easily save the parameters that the user use, including the control parameters that the camera needed. There three types of configuration parameters: the currently effective configuration parameters, the vendor default configuration parameters (Default), and the user configuration parameters (UserSet).

Three operations can be performed on the configuration parameters, including save parameters (UserSetSave), load parameters (UserSetLoad), and set the startup parameter set (UserSetDefault). The UserSetSave is to save the effective configuration parameters to the user configuration parameter set which is set by the user. The UserSetLoad is to load the vendor default configuration parameters (Default) or the user configuration parameters (UserSet) to the current effective configuration parameters. The UserSetDefault is refer to the user can specify a set of parameters which to be loaded into the effective configuration parameters automatically when the camera is reset or powered on. And the camera can work under this set of parameters. This set of parameters can be vendor default configuration parameters or user configuration parameters.

#### 1) The type of configuration parameters

The type of configuration parameters includes: the current effective configuration parameters, vendor default configuration parameters, user configuration parameters.

The current effective configuration parameters: Refers to the current control parameters used by the camera. Using API function or Demo program to modify the current control parameters of the camera is to modify the effective configuration parameters. The effective parameters are stored in volatile memory of the camera, so when the camera is reset or powered on again, the effective configuration parameters will be lost.

The vendor default configuration parameters (Default): Before the camera leaves the factory, the camera manufacturer will test the camera to assess the camera's performance and optimize the configuration parameters of the camera. The vendor default configuration parameters are the camera configuration parameters optimized by the vendor in a particular environment, these parameters are stored in the non-

volatile memory of the camera, so when the camera is reset or powered on again, the effective configuration parameters will not be lost, and these parameters cannot be modified.

The user configuration parameters (UserSet): The effective parameters are stored in volatile memory of the camera, so when the camera is reset or powered on again, the effective configuration parameters will be lost. You can store the effective configuration parameters to the user configuration parameters, the user configuration parameters are stored in the non-volatile memory of the camera, so when the camera is reset or powered on again, the user configuration parameters will not be lost. The MER2-U3 series camera can store a set of user configuration parameters.

## 2) The operation of configuration parameters

The operations for configuration parameters include the following three types: save parameters, load parameters and set the UserSetDefault.

**Save parameters (UserSetSave):** Save the current effective configuration parameters to the user configuration parameters. The storage steps are as follows:

- 1) Modify the camera's configuration parameters, until the camera runs to the user's requirements.
- 2) Use UserSetSelector to select UserSet0. Execute UserSetSave command.

The camera's configuration parameters which are saved in the user parameter set include:

- Gain
- ExposureTime
- PixelFormat
- OffsetX, OffsetY, ImageWidth, ImageHeight
- EventNotification
- TriggerMode, TriggerSource, TriggerPolarity, TriggerDelay
- TriggerFilterRaisingEdge, TriggerFilterFallingEdge
- LineMode, LineInverter, LineSource, UserOutputValue
- ChunkModeActive
- TestPattern
- ExpectedGrayValue
- ExposureAuto, AutoExposureTimeMax, AutoExposureTimeMin
- GainAuto, AutoGainMax, AutoGainMin
- AAROIOffsetX, AAROIOffsetY, AAROIWidth, AAROIHeight
- BalanceWhiteAuto, AWBLampHouse

- AWBROIOffsetX, AWBROIOffsetY, AWBROIWidth, AWBROIHeight
- BalanceRatio(R/G/B)
- LUT

**Load parameters (UserSetLoad):** Load the vendor default configuration parameters or the user configuration parameters into the effective configuration parameters. After this operation is performed, the effective configuration parameters will be covered by the loaded parameters which are selected by the user, and the new effective configuration parameters are generated. The operation steps are as follows:

- 1) Use UserSetSelector to select Default or UserSet0.
- 2) Execute UserSetLoad command to load the UserSet specified by UserSetSelector to the device and makes it active.

**Change startup parameter set (UserSetDefault):** The user can use UserSetDefault to select Default or UserSet0 as the UserSetDefault. When the camera is reset or powered on again, the parameters in the UserSetDefault will be loaded into the effective configuration parameters.

### 8.3.8. Device User ID

The MER2-U3 series camera provides programmable device user ID function, the user can set a unique identification for the camera, and can open and control the camera by the unique identification.

The user-defined name is a string which maximum length is 16 bytes, the user can set it by the following ways:

- 1) Set by the GalxyView, as shown in the Figure 8-45.

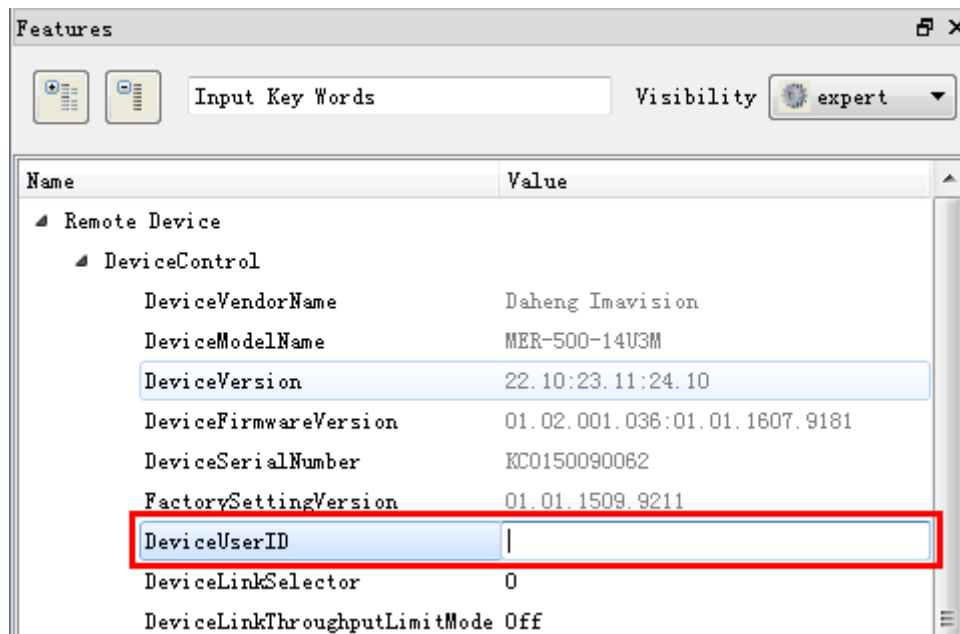


Figure 8-45 GalxyView software

- 2) Set by calling the software interface, for details please see the Programmer's Guide.





When using multi-cameras at the same time, it is necessary to ensure the uniqueness of the user-defined name of each camera, otherwise, an exception will occur when the camera is opened.

### 8.3.9. Timestamp

The timestamp feature counts the number of ticks generated by the camera's internal device clock. As soon as the camera is powered on, it starts generating and counting clock ticks. The counter is reset to 0 whenever the camera is powered off and on again. Some of the camera's features use timestamp values, such as event, frame information, and timestamps can be used to test the time spent on some of the camera's operations.

The unit of timestamp is ns.

### 8.3.10. Binning

The feature of Binning is to combine multiple pixels adjacent to each other in the sensor into a single value, and process the average value of multiple pixels or sum the multiple pixel values, which may increase the signal-to-noise ratio or the camera's response to light.

#### ● How Binning Works

On color cameras, the camera combines (sums or averages) the pixel values of adjacent pixels of the same color:

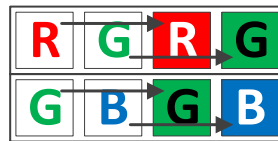


Figure 8-46 Horizontal color Binning by 2



Figure 8-47 Vertical color Binning by 2

When the horizontal Binning factor and the vertical Binning factor are both set to 2, the camera combines the adjacent 4 sub-pixels of the same color according to the corresponding positions, and outputs the combined pixel values as one sub-pixel.



Figure 8-48 Horizontal and vertical color Binning by 2×2

On monochrome cameras, the camera combines (sums or averages) the pixel values of directly adjacent pixels:

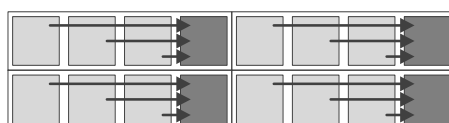


Figure 8-49 Horizontal mono Binning by 4

## ● Binning Factors

Two types of Binning are available: horizontal Binning and vertical Binning. You can set the Binning factor in one or two directions.

Horizontal Binning is the processing of pixels in adjacent rows.

Vertical Binning is the processing of pixels in adjacent columns.

Binning factor 1: Disable Binning.

Binning factor 2, 4: Indicate the number of rows or columns to be processed.

For example, the horizontal Binning factor 2 indicates that the Binning is enabled in the horizontal direction, and the pixels of two adjacent rows are processed.

## ● Binning Modes

The Binning mode defines how pixels are combined when Binning is enabled. Two types of the Binning mode are available: Sum and Average.

**Sum:** The values of the affected pixels are summed and then output as one pixel. This improves the signal-to-noise ratio, but also increases the camera's response to light.

**Average:** The values of the affected pixels are averaged. This greatly improves the signal-to-noise ratio without affecting the camera's response to light.

## ● Considerations when Using Binning

1) Effect on ROI settings

When Binning is used, the value of the current ROI of the image, the maximum ROI of the image, the auto function ROI, and the auto white balance ROI will change. The changed value is the original value (the value before the setting) divided by the Binning factor.

For example, assume that you are using a camera with a 1200 x 960 sensor. Horizontal Binning by 2 and vertical Binning by 2 are enabled. In this case, the maximum ROI width is 600 and the maximum ROI height is 480.

#### 2) Increased response to light

Using Binning with the Binning mode set to **Sum** can significantly increase the camera's response to light. When pixel values are summed, the acquired images may look overexposed. If this is the case, you can reduce the lens aperture, the intensity of your illumination, the camera's exposure time setting, or the camera's gain setting.

#### 3) Possible image distortion

Objects will only appear undistorted in the image if the numbers of binned rows and columns are equal. With all other combinations, objects will appear distorted. For example, if you combine vertical Binning by 2 with horizontal Binning by 4, the target objects will appear squashed.

#### 4) Mutually exclusive with Decimation

Binning and Decimation cannot be used simultaneously in the same direction. When the horizontal Binning value is set to a value other than 1, the horizontal Decimation feature cannot be used. When the vertical Binning value is set to a value other than 1, the vertical Decimation feature cannot be used.

Camera models that support this feature:

Model
MER2-301-125U3M/C(-L)
MER2-302-56U3M/C(-L)
MER2-502-79U3M/C(-L)
ME2P-1230-23U3M/C

### 8.3.11. Decimation

The Decimation can reduce the number of sensor pixel columns or rows that are transmitted by the camera, reducing the amount of data that needs to be transmitted and reducing bandwidth usage.

#### ● How Vertical Decimation Works

On mono cameras, if you specify a vertical Decimation factor of  $n$ , the camera transmits only every  $n^{\text{th}}$  row. For example, when you specify a vertical Decimation factor of 2, the camera skips row 1, transmits row 2, skips row 3, and so on.

On color cameras, if you specify a vertical Decimation factor of  $n$ , the camera transmits only every  $n^{\text{th}}$  pair of rows. For example, when you specify a vertical Decimation factor of 2, the camera skips rows 1 and 2, transmits rows 3 and 4, skips rows 5 and 6, and so on.

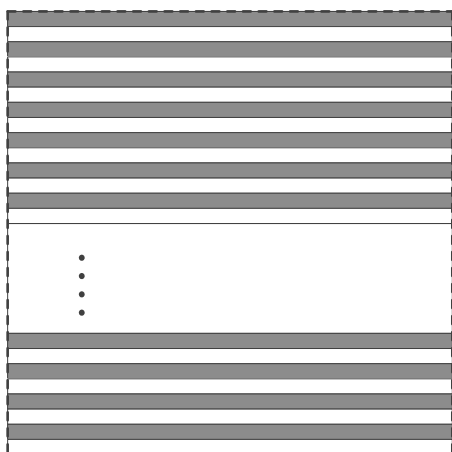


Figure 8-50 Mono camera vertical Decimation

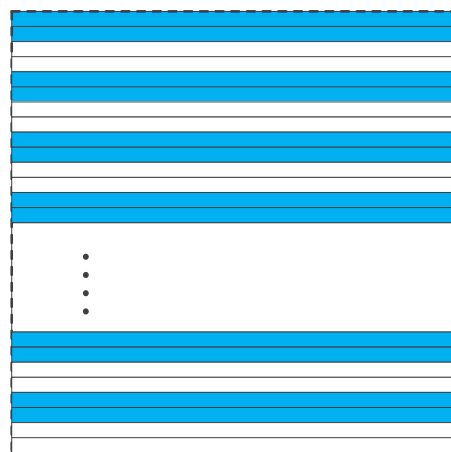


Figure 8-51 Color camera vertical Decimation

As a result, the image height is reduced. For example, enabling vertical Decimation by 2 halves the image height. The camera automatically adjusts the image ROI settings.

Vertical Decimation significantly increases the camera's frame rate. For details, please refer to the [MER2-U3 Frame Rate Calculation Tool](#).

#### ● How Horizontal Decimation Works

On mono cameras, if you specify a horizontal Decimation factor of  $n$ , the camera transmits only every  $n^{\text{th}}$  column. For example, if specify set a horizontal Decimation factor of 2, the camera skips column 1, transmits column 2, skips column 3, and so on.

On color cameras, if you specify a horizontal Decimation factor of  $n$ , the camera transmits only every  $n^{\text{th}}$  pair of columns. For example, if you specify a horizontal Decimation factor of 2, the camera skips columns 1 and 2, transmits columns 3 and 4, skips columns 5 and 6, and so on.

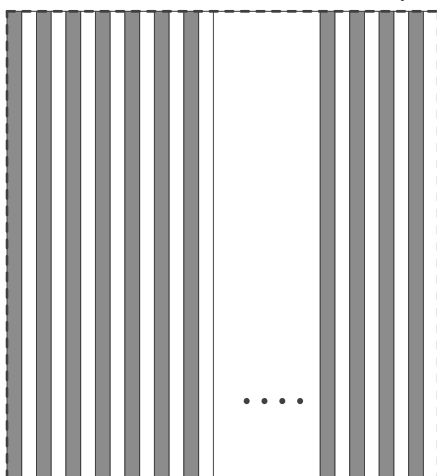


Figure 8-52 Mono camera horizontal Decimation

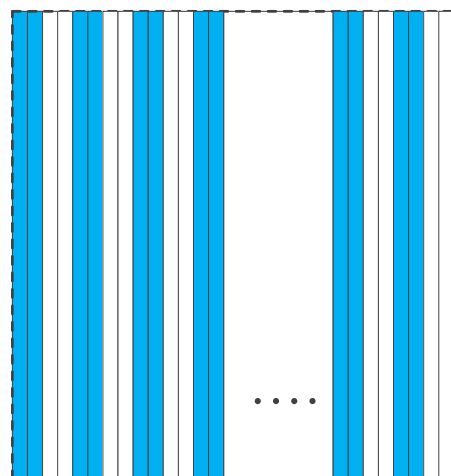


Figure 8-53 Color camera horizontal Decimation

As a result, the image width is reduced. For example, enabling horizontal Decimation by 2 halves the image width. The camera automatically adjusts the image ROI settings.

Horizontal Decimation does not (or only to a very small extent) increase the camera's frame rate.

## ● Configuring Decimation

To configure vertical Decimation, enter a value for the DecimationVertical parameter. To configure horizontal Decimation, enter a value for the DecimationHorizontal parameter.

The value of the parameters defines the Decimation factor. Depending on your camera model, the following values are available:

- 1: Disable Decimation.
- 2: Enable Decimation.

## ● Considerations When Using Decimation

### 1) Effect on ROI settings

When you are using Decimation, the settings for your image ROI refer to the resulting number of rows and columns. Taking MER2-502-79U3M/C(-L) as an example, the camera's default resolution is 2448×2048. When horizontal Decimation by 4 and vertical Decimation by 4 are enabled, the maximum ROI width would be 612 and the maximum ROI height would be 512.

### 2) Reduced resolution

Using Decimation effectively reduces the resolution of the camera's imaging sensor. Taking MER2-502-79U3M/C(-L) as an example, the camera's default resolution is 2448×2048. When horizontal Decimation by 4 and vertical Decimation by 4 are enabled, the effective resolution of the sensor is reduced to 612×512.

### 3) Possible image distortion

The displayed image will not be distorted if the vertical and horizontal Decimation factors are equal. When only horizontal Decimation or vertical Decimation is used, the displayed image will be reduced in width or height.

### 4) Mutually exclusive with Binning

Decimation and Binning cannot be used simultaneously in the same direction. When the horizontal Decimation value is set to a value other than 1, the horizontal Binning feature cannot be used. When the vertical Decimation value is set to a value other than 1, the vertical Binning feature cannot be used.

Camera models that support this feature:

Model
MER2-502-79U3M/C(-L)
ME2P-1230-23U3M/C

## 8.3.12. Reverse X and Reverse Y

The Reverse X and Reverse Y features can mirror acquired images horizontally, vertically, or both.

## ● Enabling Reverse X

To enable Reverse X, set the **ReverseX** parameter to **true**. The camera mirrors the image horizontally.



Figure 8-54 The original image



Figure 8-55 Reverse X enabled

### ● Enabling Reverse Y

To enable Reverse Y, set the **ReverseY** parameter to **true**. The camera mirrors the image vertically.



Figure 8-56 The original image

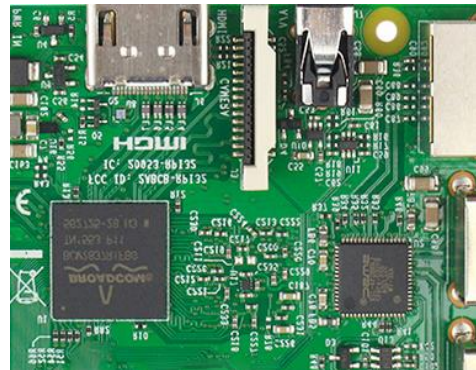


Figure 8-57 Reverse Y enabled

### ● Enabling Reverse X and Y

To enable Reverse X and Y, set the **ReverseX** and **ReverseY** parameters to **true**. The camera mirrors the image horizontally and vertically.



Figure 8-58 The original image

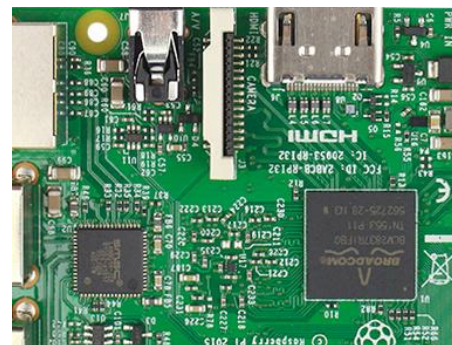


Figure 8-59 Reverse X and Y enabled

### ● Using Image ROI with Reverse X or Reverse Y

If you have specified an image ROI while using Reverse X or Reverse Y, you must bear in mind that the position of the ROI relative to the sensor remains the same. Therefore, the camera acquires different portions of the image depending on whether the Reverse X or the Reverse Y feature are enabled:





Figure 8-60 The original image



Figure 8-61 Reverse X enabled

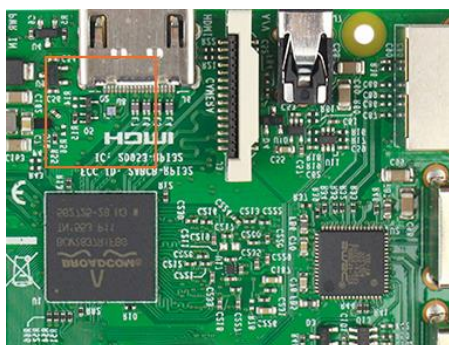


Figure 8-62 Reverse Y enabled



Figure 8-63 Reverse X and Y enabled

### ● Pixel Format Alignment

The alignment of the Bayer format does not change when the camera is using the reverse feature.

Camera models that support this feature:

Model
MER2-230-168U3M/C(-L)
MER2-502-79U3M/C(-L)
ME2P-1230-23U3M/C
ME2P-2621-15U3M/C
ME2L-161-61U3M(-L)

### 8.3.13. Digital Shift

The Digital Shift can multiply the pixel values by  $2^n$  of the images.

This increases the brightness of the image. If your camera doesn't support the digital shift feature, you can use the Gain feature to achieve a similar effect.

### ● How Digital Shift Works

Configuring a digital shift factor of  $n$  results in a logical left shift by  $n$  on all pixel values. This has the effect of multiplying all pixel values by  $2^n$ .

If the resulting pixel value is greater than the maximum value possible for the current pixel format (e.g., 255 for an 8-bit pixel format, 1023 for a 10-bit pixel format, and 4095 for a 12-bit pixel format), the value is set to the maximum value.


### ● Configuring Digital Shift

To configure the digital shift factor, enter the expected value for the **DigitalShift** parameter.

By default, the parameter is set to 0, i.e., digital shift is disabled. When the **DigitalShift** parameter is set to 1, the camera will shift the pixel value to the left by 1 bit. When the **DigitalShift** parameter is set to 2, the camera will shift the pixel value to the left by 2 bits.

### ● Considerations When Using Digital Shift


Example 1: Digital Shift by 1, 12-Bit Image Data

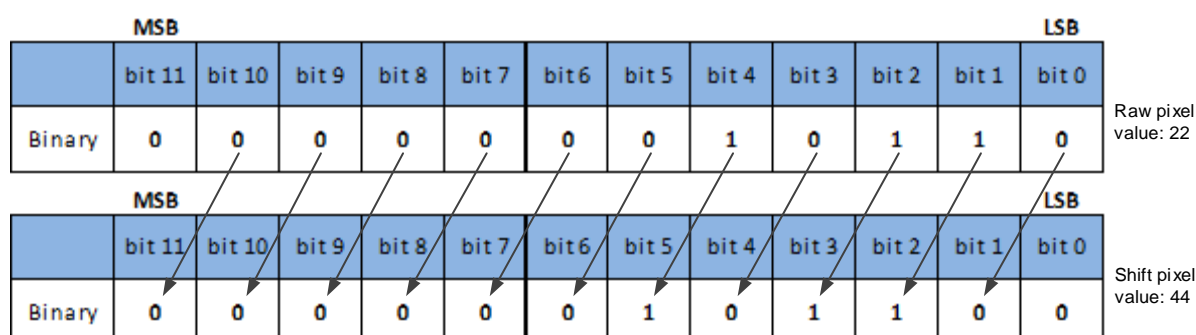

The least significant bit in each 12-bit image data is set to 0.

Example 2: Digital Shift by 2, 8-bit Image Data

Assume that your camera has a maximum pixel bit depth of 12-bit, but is currently using an 8-bit pixel format. In this case, the camera first performs the digital shift calculation on the 12-bit image data. Then, the camera transmits the 8 most significant bits.

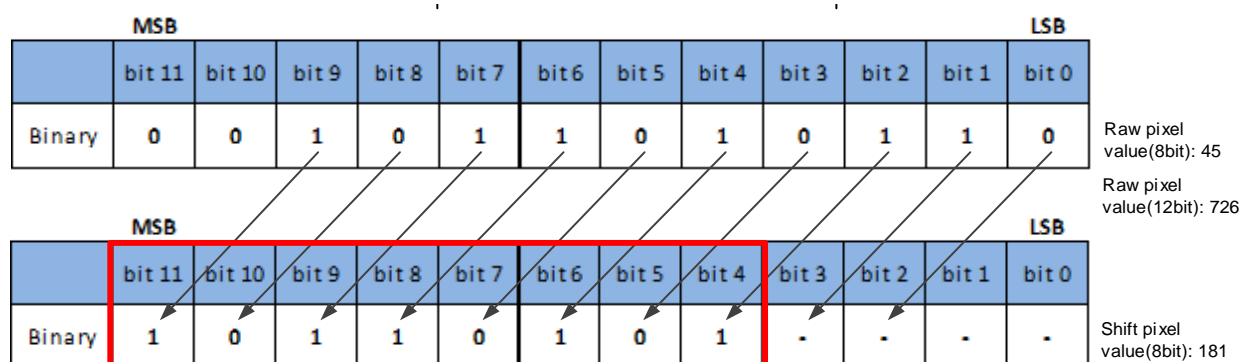

Example 3: Digital Shift by 1, 12-bit Image Data, High Value

Assume that your camera is using a 12-bit pixel format. Also assume that one of your original pixel values is 2839.



MSB						LSB						
	bit 11	bit 10	bit 9	bit 8	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
Binary	1	0	1	1	0	0	0	1	0	1	1	1

Raw pixel value: 2839

MSB						LSB						
	bit 11	bit 10	bit 9	bit 8	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
Binary	1	1	1	1	1	1	1	1	1	1	1	1

Shift pixel value: 4095

If you apply digital shift by 1 to this pixel value, the resulting value is greater than the maximum possible value for 12-bit pixel formats. In this case, the value is set to the maximum value, i.e., all bits are set to 1.

Camera models that support this feature:

Model
MER2-041-436U3M/C(-L)
MER2-160-227U3M/C(-L)
MER2-231-41U3M/C(-L)
MER2-502-79U3M/C(-L)
MER2-503-36U3M/C(-L)
ME2P-1230-23U3M/C

### 8.3.14. Acquisition Status

The Acquisition Status feature can determine whether the camera is waiting for trigger signals. This is useful if you want to optimize triggered image acquisition and avoid over triggering.

**To determine if the camera is currently waiting for trigger signals.**

- Set the **AcquisitionStatusSelector** parameter to the expected trigger type. Two trigger types are available: **FrameTriggerWait** and **AcquisitionTriggerWait**. For example, if you want to determine if the camera is waiting for **FrameStartTrigger** signals, set the **AcquisitionStatusSelector** to **FrameTriggerWait**. If you want to determine if the camera is waiting for **FrameBurstStartTrigger** signals, set the **AcquisitionStatusSelector** to **AcquisitionTriggerWait**.
- If the **AcquisitionStatus** parameter is **true**, the camera is waiting for a trigger signal of the trigger type selected. If the **AcquisitionStatus** parameter is **false**, the camera is busy.

Camera models that support this feature:

Model
MER2-502-79U3M/C(-L)
ME2P-1230-23U3M/C

### 8.3.15. Black Level

The Black Level can change the overall brightness of an image by changing the gray values of the pixels by a specified amount. Currently, the application range of the black level value can only be selected as all pixels, and pixel selection is not supported.

The lower the black level, the darker the corresponding image, the higher the black level, the brighter the corresponding image.

Model	Adjustment range	Default value/Step
MER2-502-79U3M/C(-L)	0-511	4, 1
ME2P-1230-23U3M/C	0-4084	3, 1
ME2P-2621-15U3M/C	0-1023	4, 1

Table 8-7 MERCURY2 USB3 Vision series camera black level adjustment range

### 8.3.16. Remove Parameter Limits

The range of camera parameters is usually limited, and these factory limits are designed to ensure the best camera performance and high image quality. However, for certain use cases, you may want to specify parameter values outside of the factory limits. You can use the remove parameter limits feature to expand the parameter range. The features of the extended range supported by different cameras may be different and the range may be different, as shown in Table 8-8.

Model	Features	Set the switch to off	Set the switch to on
MER2-502-79U3M/C(-L)	Exposure	20~1000000	20~15000000
	Auto Exposure	20~1000000	20~15000000
	Gain	0~24	0~48
	Auto Gain	0~24	0~48
	Black Level	0~511	0~1021
	White Balance component	0~15.996	0~63.996
	Auto White Balance	1~15.996	1~63.996
ME2P-1230-23U3M/C	Exposure	28~1000000	28~15000000
	Auto Exposure	28~1000000	28~15000000

	Gain	0~24	0~48
	Auto Gain	0~24	0~48
	Black Level	0~511	0~4084
	Sharpness	0~3	0~63
	White Balance component	0~15.996	0~31.996
	Auto White Balance	1~15.996	1~31.996
ME2P-2621-15U3M/C	Exposure	10~1000000	10~15000000
	Auto Exposure	10~1000000	10~15000000
	Gain	0~16	0~24
	Auto Gain	0~16	0~24
	Black Level	0~1023	0~1023
	Sharpness	0~3	0~15
	White Balance component	0~15.996	0~31.996
	Auto White Balance	1~15.996	1~31.996

Table 8-8 Parameter range of features supported before and after Remove Parameter Limits

### 8.3.17. User Data Area

The user data area is a FLASH data area reserved for the user, and the user can use the area to save algorithm factors, parameter configurations, etc.

The user data area is 16K bytes and is divided into 4 data segments, each of which is 4K bytes. The user can access the user data area through the API interface. The data is saved to the camera flash area immediately after being written, and the data will not disappear after the camera is powered off.

Camera models that support this feature:

Model
MER2-502-79U3M/C(-L)
ME2P-1230-23U3M/C
ME2P-2621-15U3M/C

ME2L-161-61U3M(-L)

### 8.3.18. Timer

The camera only supports one timer (Timer1), which can be started by a specified event or signal (only ExposureStart signal is supported). The Timer can configure a timer output signal that goes high on a specific event or signal and goes low after a specific duration. And the timer is cleared when the output signal goes low. A schematic diagram of the timer working process is as follows:

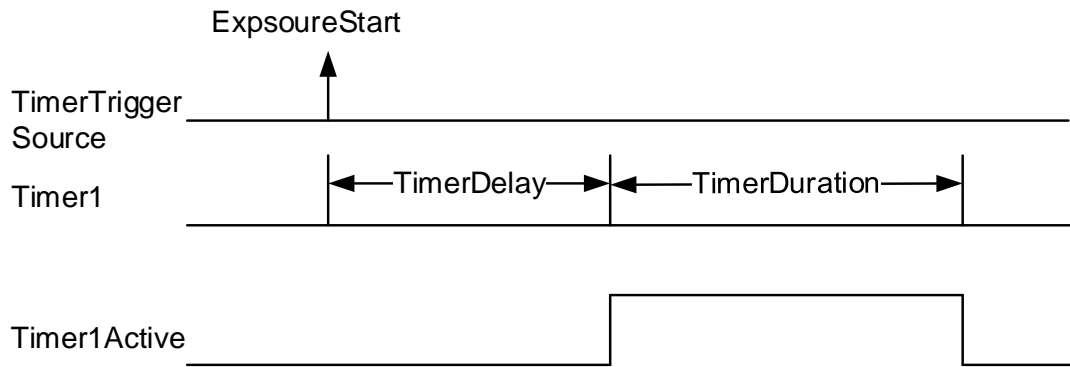


Figure 8-64 Timer1Active schematic diagram

The timer configuration process is as follows:

1. Set TimerSelector, currently only Timer1 supported.
  2. Set LineSelector.
  3. Set the LineSource to Timer1Active.
  4. Set TimerTriggerSource, currently only ExposureStart supported.
  5. Set TimerDelay, the range of TimerDelay is [0, 16777215], the unit is  $\mu\text{s}$ .
  6. Set TimerDuration, the range of TimerDuration is [0, 16777215], the unit is  $\mu\text{s}$ .
- 1) From the start of the timer to the full output of Timer1Active, this process will not be interrupted by the ExposureStart signal, and Timer1Active must be completely output to start timing according to the next ExposureStart signal. As shown in the figure below, the red ExposureStart signals are ignored.

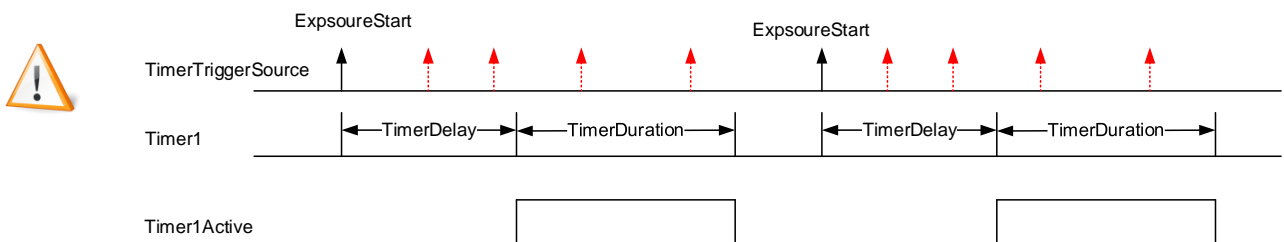


Figure 8-65 The relationship of Timer1Active and ExposureStart signal

- 2) After the acquisition is stopped, the timer is immediately cleared and the Timer1Active signal goes low immediately.

Camera models that support this feature:

Model
MER2-502-79U3M/C(-L)
MER2-302-56U3M/C(-L)
ME2P-1230-23U3M/C

### 8.3.19. Counter

The camera only supports one counter (Counter1), which can count the number of FrameTrigger, AcquisitionTrigger and FrameStart signals received by the camera. The counter starts counting from 0. You can select one of the above three signals to count by CounterEventSource. The FrameTrigger and AcquisitionTrigger signals of the counter statistics refer to the signals that have been triggered for filtering without a trigger delay.

If CounterValue is enabled, the statistical data can be inserted into the frame information and output with the image.

The counter can be reset by an external signal. The reset source is selected by CounterResetSource. Currently, the CounterResetSource option supports Off, SoftWare, Line0, Line2, and Line3. Among them, Off means no reset, SoftWare means software reset, Line0, Line2 or Line3 means reset through IO port input signal. The polarity of the reset signal only supports RisingEdge, which means reset the Counter on the rising edge of the reset signal.

Counter configuration:

1. Set CounterSelector, currently only Counter1 supported.
2. Set CounterEventSource, the values that can be set are FrameStart, FrameTrigger, AcquisitionTrigger.
3. Set CounterResetSource, the values that can be set are Off, SoftWare, Line0, Line2, Line3.
4. Set CounterResetActivation, currently only RisingEdge supported.



- 1) After the acquisition is stopped, the Counter continues to work, will not be cleared, and it will be cleared when the camera is powered off.
- 2) CounterReset is used to software reset the counter.

Camera models that support this feature:

Model
MER2-302-56U3M/C(-L)
MER2-502-79U3M/C(-L)

## ME2P-1230-23U3M/C

### 8.3.20. Exposure Overlap Time Max

The Exposure Overlap Time Max feature can optimize the acquisition of overlapping images. This parameter is especially useful if the user wants to maximize the camera's frame rate, i.e., if the user wants to trigger at the highest rate possible.

#### 1) Prerequisites

- Set the TriggerMode parameter to On.
- Set the TriggerSource parameter to one of the available external trigger source, e.g., Line0.
- Set the ExposureMode parameter to TriggerWidth exposure mode.

#### 2) How it works

The user can use overlapping image acquisition to increase the frame rate of the camera. With overlapping image acquisition, the exposure of a new image begins while the camera is still reading out the sensor data of the previous image.

In TriggerWidth exposure mode, the camera does not "know" how long the image will be exposed before the trigger period is complete. Therefore, the camera cannot fully optimize overlapping image acquisition. To avoid this problem, the user can enter a value for the ExposureOverlapTimeMax parameter, which represents the shortest exposure time the user intends to use (in  $\mu\text{s}$ ). This helps the camera optimize the overlapping image acquisition.



The trigger signal width of the external triggering should not be shorter than the value of the entered ExposureOverlapTimeMax parameter.

#### 3) Set ExposureOverlapTimeMax

To optimize the frame rate of the camera, the exposure mode should be set to TriggerWidth:

- Set the ExposureMode parameter to TriggerWidth.
- Enter a value for the ExposureOverlapTimeMax parameter, which represents the shortest exposure time the user intends to use (in  $\mu\text{s}$ ).

Example: Assume that the user wants to trigger the camera to apply exposure times in the range of 3000  $\mu\text{s}$  to 5500  $\mu\text{s}$ , the user needs to set the ExposureOverlapTimeMax parameter of the camera to 3000.

Camera models that support this feature:

Model
MER2-502-79U3M/C(-L)

## 8.4. Image Processing

### 8.4.1. Color Transformation Control

The Color Transformation is used to correct the color information delivered by the sensor, improve the color reproduction of the camera, and make the image closer to the human visual perception.



Figure 8-66 Color template

The user can use a color template containing 24 colors and shoot this color template with a camera, the RGB value of each color may be different from the standard RGB value of the standard color template, the vendor can use the software or hardware to convert the RGB value that is read to the standard RGB value. Because the color space is continuous, all the other RGB values that are read can be converted to the standard RGB values by using the mapping table created by the 24 colors.

#### 4) Prerequisites

For the color transformation to work properly, the white balance must first be configured appropriately.

#### 5) Configuring color transformation

There are two modes for configuring color transformation: default mode (RGBtoRGB), user-defined mode (User).

**RGBtoRGB:** Default color transformation parameters provided to the camera when it leaves the factory.

**User:**

- Set the **ColorTransformationValueSelector** parameter to the expected position in the matrix, e.g., Gain00.
- Enter the expected value for the **ColorTransformationValue** parameter to adjust the value at the selected position. The parameter's value range is -4.0 to +4.0.

In user mode, the user can input the color transformation value according to the actual situation to achieve the color transformation effect.

## 6) How it works

The color transformation feature uses a transformation matrix to deliver modified red, green, and blue pixel data for each pixel.

The transformation is performed by premultiplying a 3 x 1 matrix containing R, G, and B pixel values by a 3 x 3 matrix containing the color transformation values:

$$\begin{bmatrix} \text{Gain00} & \text{Gain01} & \text{Gain02} \\ \text{Gain10} & \text{Gain11} & \text{Gain12} \\ \text{Gain20} & \text{Gain21} & \text{Gain22} \end{bmatrix} \begin{bmatrix} R \\ G \\ B \end{bmatrix} = \begin{bmatrix} R' \\ G' \\ B' \end{bmatrix}$$

## 7) Effect images



Figure 8-67 Before color transformation





Figure 8-68 After color transformation

### 8.4.2. Gamma

The Gamma can optimize the brightness of acquired images for display on a monitor.

#### 1) Prerequisites

If the **GammaEnable** parameter is available, it must be set to **true**.

#### 2) How it works

The camera applies a Gamma correction value ( $\gamma$ ) to the brightness value of each pixel according to the following formula (red pixel value ( $R$ ) of a color camera shown as an example):

$$R_{\text{corrected}} = \left( \frac{R_{\text{uncorrected}}}{R_{\text{max}}} \right)^{\gamma} \times R_{\text{max}}$$

The maximum pixel value ( $R_{\text{max}}$ ) equals, e.g., 255 for 8-bit pixel formats, 1023 for 10-bit pixel formats or 4095 for 12-bit pixel formats.

#### 3) Enabling Gamma correction

After enabling Gamma correction, set **GammaValue** to change the image brightness. The range of **GammaValue** is 0 to 4.00.

- a) Gamma = 1.0: the overall brightness remains unchanged.
- b) Gamma < 1.0: the overall brightness increases.

- c) Gamma > 1.0: the overall brightness decreases.

In all cases, black pixels (gray value = 0) and white pixels (gray value = maximum) will not be adjusted.



If you enable Gamma correction and the pixel format is set to a 10-bit or 12-bit, some image information will be lost. Pixel data output will still be 10-bit or 12-bit, but the pixel values will be interpolated during the Gamma correction process, resulting in loss of accuracy and loss of image information. If the Gamma feature is required and no image information is lost, avoid using the Gamma feature in 10-bit or 12-bit pixel format.

#### 4) Additional parameters

Depending on your camera model, the following additional parameters are available:

- a) GammaEnable: Enable or disable Gamma correction.
- b) GammaMode: You can select one of the following Gamma correction modes:

User: The Gamma correction value can be set as expected.

sRGB: The camera's internal default Gamma correction value. This feature is used with the color transformation feature to convert images from RGB to sRGB. It is recommended to adjust Gamma to sRGB mode after enabling the color transformation feature.

Camera models that support this feature:

Model
MER2-502-79U3M/C(-L)
ME2P-1230-23U3M/C
ME2P-2621-15U3C

#### 8.4.3. Lookup Table

When the analog signal that is read out by the sensor has been converted via ADC, generally, the raw data bit depth is larger than 8 bits, there are 12 bits, 10 bits, etc. The feature of lookup table is to replace some pixel values in the 8 bits, 10 bits, and 12 bits images by values defined by the user.

The lookup table can be a linear lookup table or a non-linear lookup table, created entirely by the user.

You can also use the **LutValueAll** function to create an entire lookup table.

##### 1) How it works

- a) LUT is short for "lookup table", which is basically an indexed list of numbers.
- b) In the lookup table you can define replacement values for individual pixel values. For example, you can replace a gray value of 0 (= minimum gray value) by a gray value of 1023 (= maximum gray value for 10-bit pixel formats). This changes all black pixels in your images to white pixels.

- c) Setting a user-defined LUT can optimize the luminance of images. By defining the replacement values in advance and storing them in the camera to avoid time-consuming calculations. The camera itself has a factory default lookup table, and the default lookup table does not affect image luminance.

## 2) Creating the user-defined LUT

To create a lookup table, you need to determine the range of **LUTIndex** and **LUTValue** parameters by the maximum pixel format supported by the currently used camera.

- a) On cameras with a maximum pixel bit depth of 12 bits

The **LUTIndex** selectable item is 0-4095, each **LUTIndex** corresponds to a **LUTValue**, and the **LUTValue** range is [0,4095].

- b) On cameras with a maximum pixel bit depth of 10 bits

The **LUTIndex** selectable item is 0-1023, each **LUTIndex** corresponds to a **LUTValue**, and the **LUTValue** range is [0,1023].

Create a user-defined lookup table with the following steps:

- 1) Select the lookup table to use. Since there is only one user-defined lookup table in the camera, there is no need to select it by default.
- 2) Set the **LUTIndex** parameter to the pixel value that you want to replace with a new value.
- 3) Set the **LUTValue** parameter to the new pixel value.
- 4) Repeat steps 1 and 2 for all pixel values that need to be changed to set the parameters to the target pixel values in turn.
- 5) Set the **LutEnable** parameter to **true** means that the lookup table feature is enabled. The default is disabled.



If you want to replace all pixel values, it is recommended to use the **LUTValueAll** function. See the **LutValueAll** sample code in the Development User Manual for details.

Camera models that support this feature:

Model
MER2-502-79U3M/C(-L)
ME2P-1230-23U3M/C
ME2P-2621-15U3M/C

### 8.4.4. Sharpness

The sharpness algorithm integrated in the camera can significantly improve the definition of the edges of the image. The higher the definition, the clearer the contour corresponding to the image. This feature can improve the accuracy of image analysis, thus improving the recognition rate of edge detection and OCR.

- Enable sharpness

ON means that the sharpness feature is enabled.

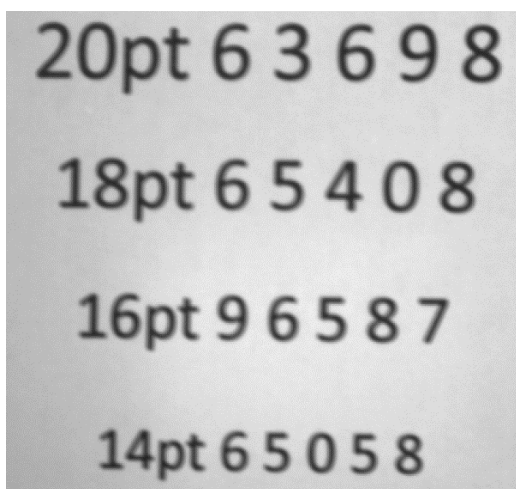


Figure 8-69 Before sharpness adjustment

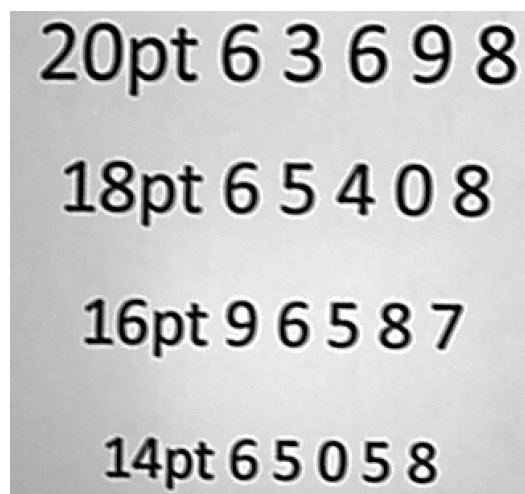


Figure 8-70 After sharpness adjustment

- Sharpness adjustment

Adjust the sharpness value can adjust the camera's sharpness to the image. The adjustment range is 0-3.0. The larger the value, the higher the sharpness.

Camera models that support this feature:

Model
ME2P-1230-23U3M/C
ME2P-2621-15U3M

#### 8.4.5. Flat Field Correction

During the use of the camera, there may be various inconsistencies in the image, which are mainly reflected in the following aspects:

- 1) Inconsistent response of individual pixels.
- 2) The difference in gray value between the image center and the edge.
- 3) Non-uniform illumination.

The Flat Field Correction (FFC) feature can correct the inconsistency of the image. As shown below, the FFC can adjust the pixel values of different positions to the same gray value.

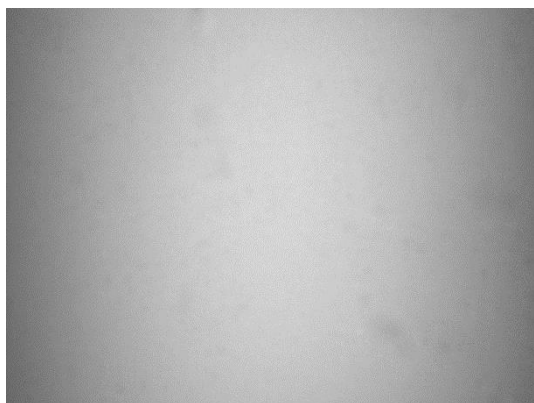


Figure 8-71 Before FFC

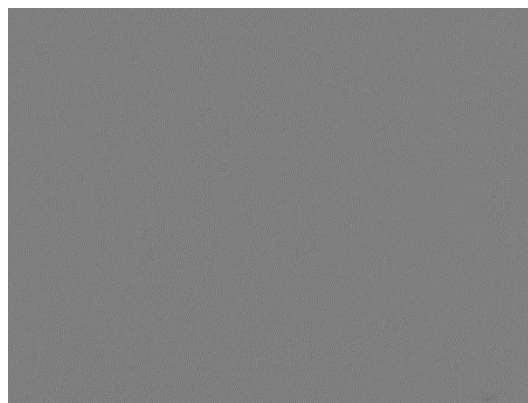


Figure 8-72 After FFC

The FFC Plugin can be used to obtain, save and preview the FFC factor. The plugin interface is shown in Figure 8-73:

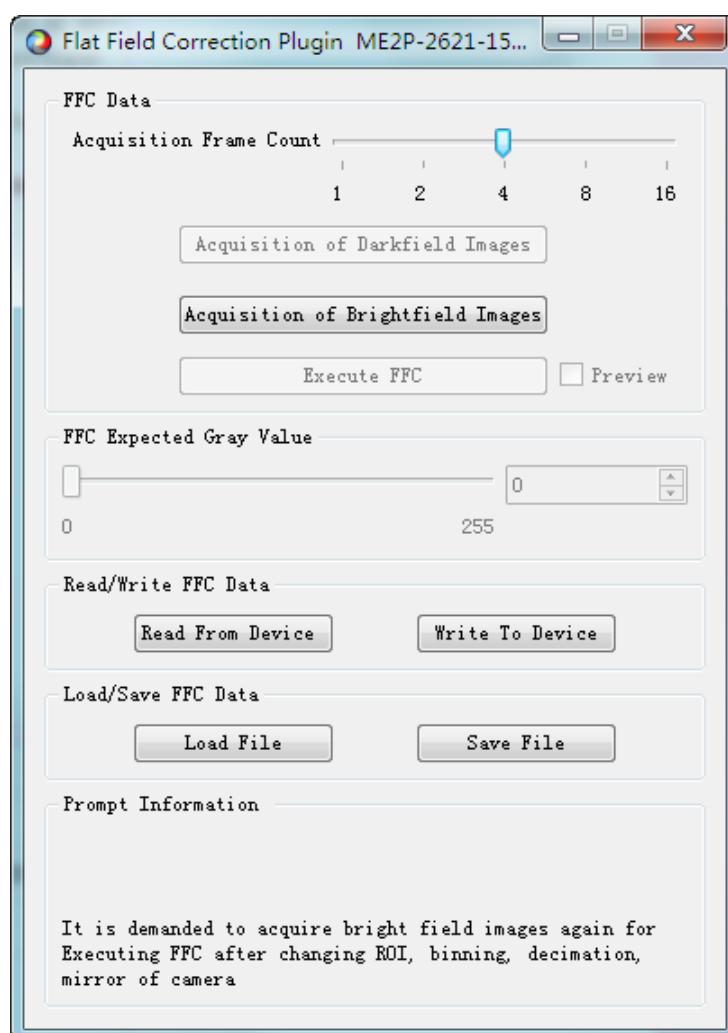


Figure 8-73 FFC Plugin interface



It is demanded to acquire bright field images again for executing FFC after changing ROI, Binning, Decimation, Mirror of the ME2P-2621-15U3M/C camera. The previous factor will no longer apply.

There are three ways to obtain the FFC factor:

- According to the current environment
- Read from device (available for part of the camera)
- Load file

There are two ways to save the FFC factor:

- Write to device (available for part of the camera)
- Save file



For cameras that support FFC, In addition to the plugin, FFC can be set to on/off in the camera feature. When set to on, FFC factors stored in the camera can be used to correct the image.

Camera models that support this feature:

Model
ME2P-2621-15U3M/C

The following will describe: FFC factor calculation and preview, FFC factor reading and saving, file loading and saving.

#### 8.4.5.1. FFC Factor Calculation and Preview

Before the FFC factor is obtained, it is recommended to determine the aperture of the lens and the gain of the camera. In the following cases, the factor needs to be re-calculated.

- Lens is replaced
- If the requirement for FFC accuracy is high (if the purpose is to correct the inconsistency of the pixels), it is recommended to recalculate the FFC factor after modifying the gain of the camera

According to the FFC plugin, the process of obtaining FFC factor is shown in the figure below, and the yellow part are optional steps. For details of the FFC plugin, please see [section 9.2](#).

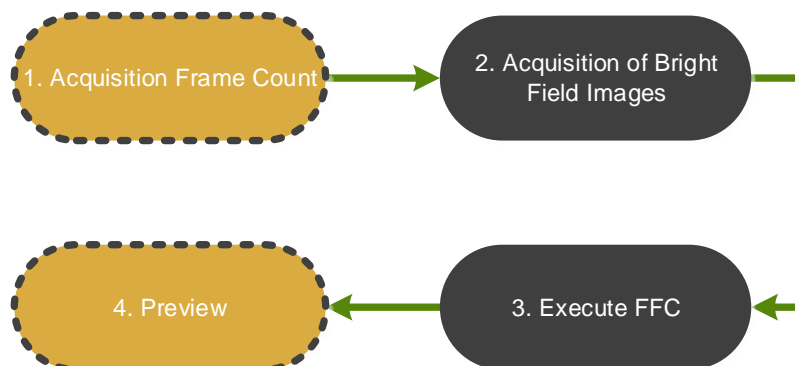


Figure 8-74 The process of obtaining FFC factor

- 1. Acquisition frame count: acquisition frame count for the bright field image to obtain the average image.**



- It is not a necessary step, generally the default value is used
- If the image noise is high, it is recommended to increase the acquisition frame count

## 2. Acquisition of bright field images: perform this function to complete the bright field image acquisition.



- It is recommended to align the white paper or the flat fluorescent lamp (to ensure the same amount of light in different areas of the sensor), and adjust the distance between the camera and the white paper/flat fluorescent lamp to fill the entire field of view
- Do not overexpose the image. The gray value of the brightest area of the brightfield is recommended to be less than 250
- The image should not be too dark. The gray value of the darkest area of the brightfield is recommended to be greater than 20
- It is recommended to control the bright field gray value by adjusting the exposure time or light source, and do not adjust the aperture

## 3. Execute FFC: Calculate the FFC factor using the acquired image. After execution, the subsequent image automatically use the calculated factors for FFC.

## 4. Preview: Preview the effect of the current FFC.

### 8.4.5.2. Read/Save Factor

- Read factor: The saved correction factor can be read from the device
- Save factor: Save the current FFC factor to the device. The factor can still be saved after the camera is powered down



Available for part of the camera models: models that implement FFC in the camera. Other models are grayed out.

### 8.4.5.3. Load/Save File

- Load from file: Load the saved FFC factor file (format: .ffc) from the file
- Save to file: Save the current factor to the FFC factor file (format: .ffc)

## 8.4.6. Noise Reduction

During the digitization and transmission of an image, it is often disturbed by the noise of the imaging device and the external environment, which will cause the image with noise. The process of reducing or suppressing the noise in the image is called image noise reduction.

Adjust the noise reduction value can adjust the noise reduction intensity of the camera on the image. The adjustment range is 0-4.0. The larger the value, the higher the degree of noise reduction.

Noise reduction feature: determine whether to enable noise reduction. ON means that the noise reduction feature is enabled. And OFF means that the noise reduction feature is disabled.



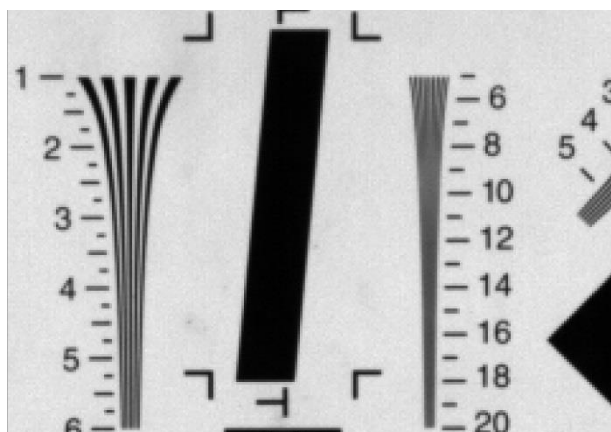


Figure 8-75 Before noise reduction

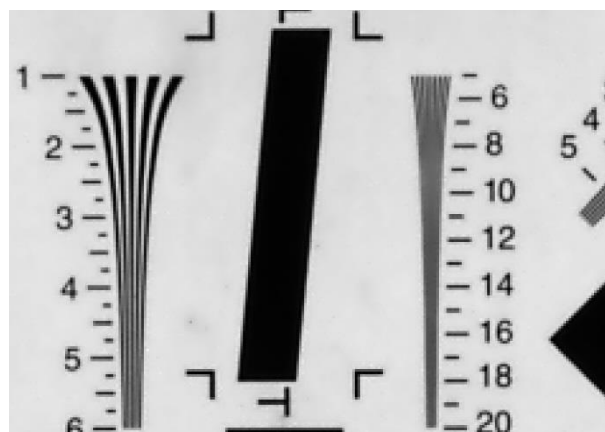


Figure 8-76 After noise reduction

Camera models that support this feature:

Model
ME2P-2621-15U3M

## 8.5. Image Transmission

### 8.5.1. Calculate Frame Rate

#### 1) Frame Period

You can calculate the frame period of the MER2-U3(-L) series camera by the following formula:

$$T_f = \text{Max} \left( \frac{\text{ImageSize} * 10^6}{\text{BandWidth}_{\text{USB}}}, \frac{\text{ImageSize} * 10^6}{\text{DeviceLinkThroughputLimit}}, T_{\text{acq}}, T_{\text{exp}} \right)$$

Among them:

$$\text{ImageSize} = \text{Width} * \text{Height} * \text{PixelSize} + 84$$

$T_f$ : The camera's frame period, unit:  $\mu\text{s}$ .

Width: The current image width.

Height: The current image height.

PixelSize: The size of the pixel, in 8bit mode, the value is 1, and in 10bit/12bit mode, the value is 2.

$\text{BandWidth}_{\text{USB}}$ : The bandwidth of the USB interface, unit: Bps.

$\text{DeviceLinkThroughputLimit}$ : The limit of the device link throughput bandwidth, unit: Bps.

$T_{\text{acq}}$ : The acquisition time of the camera, unit:  $\mu\text{s}$ .

$T_{\text{exp}}$ : The exposure time of the camera, unit:  $\mu\text{s}$ .

#### 2) Frame rate (Unit: fps)



$$F = \frac{10^6}{T_f}$$



It is recommended to use the frame rate calculation tool, the frame rate will be calculated automatically after the configuration parameters are filled.

### 8.5.2. USB Interface Bandwidth

The theoretical bandwidth of the USB interface of MER2-U3(-L) series camera is 400MBps, but actually the value will decrease with the type of the USB3.0 host controller, the version of the host controller driver, the wastage of the HUB and the host performance. The user can refer the test result of the interface bandwidth in <TN-USB3.0 host controller bandwidth and CPU utilization> document.

### 8.5.3. DeviceLinkThroughputLimit

The MER2-U3(-L) series camera provides bandwidth limit function, in order to control the upper limit bandwidth of single device. When the DeviceLinkThroughputLimit is greater than the current device acquisition bandwidth, the current device acquisition bandwidth will not change, when the DeviceLinkThroughputLimit is less than the current device acquisition bandwidth, the current device acquisition bandwidth will be reduced to the limit of the DeviceLinkThroughputLimit, the current device acquisition bandwidth can be read from the camera.

When the camera is working in trigger mode, the bandwidth limit will restrict the maximum trigger frequency.

#### Example 1:

The MER2-502-79U3M/C(-L) is working in continuous mode, the DeviceLinkCurrentThroughput is 35000000Bps, the DeviceLinkThroughputLimit is 40000000Bps, and then the DeviceLinkCurrentThroughput is still 35000000Bps. If the DeviceLinkCurrentThroughput is 70000000Bps, the DeviceLinkThroughputLimit is 40000000Bps, and then the DeviceLinkCurrentThroughput will be 40000000Bps.

#### Example 2:

The MER2-502-79U3M/C(-L) is working in trigger mode, the DeviceLinkCurrentThroughput is 300000000Bps, the maximum trigger frequency is 59.8Hz @ full resolution (8bit), when the DeviceLinkCurrentThroughput is 35000000Bps, the maximum trigger frequency is 6.9Hz @ full resolution (8bit).

Model	Min. of DeviceLinkThroughputLimit	Max. of DeviceLinkThroughputLimit	Step of DeviceLinkThroughputLimit
MER2-041-436U3M/C(-L)	35000000Bps ( 8bit )	400000000 Bps	1000000Bps
	70000000Bps ( 10bit )		
MER2-160-227U3M/C(-L)	35000000Bps ( 8bit )	400000000 Bps	1000000Bps
	70000000Bps ( 10bit )		

MER2-230-168U3M/C(-L)	35000000Bps ( 8bit )	400000000 Bps	1000000Bps
	70000000Bps ( 10bit )		
MER2-231-41U3M/C(-L)	35000000Bps (8bit)	400000000 Bps	1000000Bps
	70000000Bps (10bit)		
MER2-301-125U3M/C(-L)	35000000Bps (8bit)	400000000 Bps	1000000Bps
	70000000Bps (10bit)		
MER2-302-56U3M/C(-L)	35000000Bps ( 8bit )	400000000 Bps	1000000Bps
	70000000Bps ( 10bit )		
MER2-502-79U3M/C(-L)	35000000Bps (8bit)	400000000 Bps	1000000Bps
	70000000Bps (10bit)		
MER2-503-36U3M/C(-L)	35000000Bps (8bit)	400000000 Bps	1000000Bps
	70000000Bps (10bit)		
MER2-630-60U3M/C(-L)	35000000Bps ( 8bit )	400000000 Bps	1000000Bps
	70000000Bps ( 10bit )		
MER2-1220-32U3M/C(-L)	35000000Bps (8bit)	400000000 Bps	1000000Bps
	70000000Bps (12bit)		
MER2-2000-19U3M/C(-L)	35000000Bps (8bit)	400000000 Bps	1000000Bps
	70000000Bps (12bit)		
ME2P-1230-23U3M/C	35000000Bps ( 8bit )	400000000 Bps	1000000Bps
	70000000Bps ( 12bit )		
ME2P-2621-15U3M/C	35000000Bps ( 8bit )	400000000 Bps	1000000Bps
	70000000Bps ( 12bit )		
	70000000Bps ( 12bit )		

ME2L-161-61U3M(-L)	35000000Bps ( 8bit )	200000000 Bps	1000000Bps
	700000000Bps ( 10bit )		

Table 8-9 MER2-U3(-L) camera bandwidth control

### 8.5.4. Camera Acquisition Time

The acquisition time of the camera is related to the OffsetY and height of the image ROI. When the OffsetY and height change in the ROI setting, it will affect the frame period captured by the camera front end, which will affect the acquisition frame rate.

The formulas are as follows:

- MER2-041-436U3M/C(-L)

The row period (unit: us):

$$T_{\text{row}} = \frac{147}{37.5} \approx 3.92$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 32) * T_{\text{row}}$$

- MER2-160-227U3M/C(-L)

When the pixel format is Mono8 or BayerRG8, the row period (unit: us):

$$T_{\text{row}} = \frac{147}{37.5} = 3.92$$

When the pixel format is Mono10 or BayerRG10, the row period (unit: us):

$$T_{\text{row}} = \frac{147 \times 2}{37.5} = 7.84$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 32) * T_{\text{row}}$$

- MER2-230-168U3M/C(-L)

When the pixel format is Mono8 or BayerRG8, the row period (unit: us):

$$T_{\text{row}} = \frac{180}{37.5} = 4.8$$

When the pixel format is Mono10 or BayerRG10, the row period (unit: us):

$$T_{\text{row}} = \frac{360}{37.5} = 9.6$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 38) * T_{\text{row}}$$

- MER2-231-41U3M/C(-L)

The row period (unit: us):

$$T_{\text{row}} = \frac{746}{37.5} \approx 19.89$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 38) * T_{\text{row}}$$

- MER2-301-125U3M/C(-L)

When the pixel format is Mono8 or BayerRG8, the row period (unit: us):

$$T_{\text{row}} = \frac{190}{37.5} = 5.07$$

When the pixel format is Mono10 or BayerRG10, the row period (unit: us):

$$T_{\text{row}} = \frac{380}{37.5} = 10.13$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 38) * T_{\text{row}}$$

- MER2-302-56U3M/C(-L)

The row period (unit: us):

$$T_{\text{row}} = \frac{423}{37.5} = 11.28$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 32) * T_{\text{row}}$$

- MER2-502-79U3M/C(-L)

When the pixel format is Mono8 or BayerRG8, the row period (unit: us):

$$T_{\text{row}} = \frac{227}{37.5} = 6.053$$

When the pixel format is Mono10 or BayerRG10, the row period (unit: us):

$$T_{\text{row}} = \frac{454}{37.5} = 12.107$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 38) * T_{\text{row}}$$

- MER2-503-36U3M/C(-L)

The row period (unit: us):

$$T_{\text{row}} = \frac{498}{37.5} = 13.28$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 32) * T_{\text{row}}$$

- MER2-630-60U3M/C(-L)

When the pixel format is Mono8 or BayerRG8, the row period (unit: us):

$$T_{\text{row}} = \frac{420}{54} = 7.78$$

When the pixel format is Mono10 or BayerRG10, the row period (unit: us):

$$T_{\text{row}} = \frac{420 \times 2}{54} = 15.56$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 78) * T_{\text{row}}$$

- MER2-1220-32U3M/C(-L)

When the pixel format is BayerRG8, the row period (unit: us):

$$T_{\text{row}} = \frac{720}{72} = 10$$

When the pixel format is BayerRG12, the row period (unit: us):

$$T_{\text{row}} = \frac{720 * 2}{72} = 20$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 38) * T_{\text{row}}$$

- MER2-2000-19U3M/C(-L)

When the pixel format is BayerRG8, the row period (unit: us):

$$T_{\text{row}} = \frac{900}{72} = 12.5$$

When the pixel format is BayerRG12, the row period (unit: us):

$$T_{\text{row}} = \frac{900 * 2}{72} = 25$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{Height} + 38) * T_{\text{row}}$$

- ME2P-1230-23U3M/C

When the pixel format is BayerRG8, the row period (unit: us):

$$T_{\text{row}} = \frac{522}{37.5} = 13.92$$

When the pixel format is BayerRG12, the row period (unit: us):

$$T_{\text{row}} = \frac{1044}{37.5} = 27.84$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{height} + 34) * T_{\text{row}}$$

- ME2P-2621-15U3M/C

When the pixel format is Mono8 or BayerGB8, the row period (unit: us):

$$T_{\text{row}} = \frac{48 * 124}{72 * 8} = 10.33$$

When the pixel format is Mono12 or BayerGB12, the row period (unit: us):

$$T_{\text{row}} = \frac{48 * 248}{72 * 8} = 20.66$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{height} + 14) * T_{\text{row}}$$

- ME2L-161-61U3M(-L)

Row period (unit: us):

$$T_{\text{row}} = \frac{552}{37.5} = 14.72$$

The camera acquisition time (unit: μs):

$$T_{\text{acq}} = (\text{height} + 30) * T_{\text{row}}$$

## 8.6. Events

When event notification is set to "on", the camera can generate an "event" and transmit a related event message to the host whenever a specific situation has occurred. For MER2-U3 series camera, the camera can generate and transmit events for the following situations:

- The camera has ended exposure (ExposureEnd)
- An image block is discarded (BlockDiscard)
- The trigger signal overflow (FrameStartOvertrigger)
- The image frame block is not empty (BlockNotEmpty)
- The burst trigger signal overflow (FrameBurstStartOvertrigger)
- The trigger signal wait (FrameStartWait)
- The burst trigger signal wait (FrameBurstStartWait)

Every event has a corresponding enable status, and in default all the events' enable status are disable.

When using the event feature, you need to enable the corresponding event. The effective information contained in each event is shown in Table 8-10:

No.	Event Type	Information
1	ExposureEnd Event	Event ID
		Frame ID
		Timestamp

2	BlockDiscard Event	Event ID
		Frame ID
		Timestamp
3	FrameStartOvertrigger Event	Event ID
		Frame ID
		Timestamp
4	BlockNotEmpty Event	Event ID
		Frame ID
		Timestamp
5	FrameBurstStartOvertrigger Event	Event ID
		Frame ID
		Timestamp
6	FrameStartWait Event	Event ID
		Frame ID
		Timestamp
7	FrameBurstStartWait Event	Event ID
		Frame ID
		Timestamp

Table 8-10 The effective information of each event

Among them: the timestamp is the time when the event occurs, and the timer starts when the camera is powered on or reset. The bit width of the timestamp is 64 bits, and the unit is ns.

### 8.6.1. ExposureEnd Event

If the ExposureEnd Event is enabled, when the camera's sensor has been exposed, the camera sends out an ExposureEnd Event to the host, indicating that the exposure has been completed.

### 8.6.2. BlockDiscard Event

When the average bandwidth of the write-in data is greater than the average bandwidth of the read-out data, the frame buffer may overflow. If the frame buffer is full and the camera continue to write image data

to it, then the new data will overwrite the previous image data which has been in the frame buffer. At this moment, the camera sends a BlockDiscard event to the host, indicating that image discard event has occurred. So, when you read the next frame of image, the image is not continuous.

### 8.6.3. BlockNotEmpty Event

When the average bandwidth of the write-in data is greater than the average bandwidth of the readout data, if the frame buffer is not full, and there has image frame data in the frame buffer which has not been send out completely, then before the new image frame is written to the frame buffer, the camera will send a BlockNotEmpty event to the host, indicating that the previous image has not been send out completely when the new image is written in the frame buffer.

### 8.6.4. FrameStartOvertrigger Event

When the camera receives the FrameTrigger external trigger signal or software trigger signal, if the front-end sensor is exposing, it will not be able to respond to the new FrameTrigger signal, then the camera will send a FrameStartOvertrigger event to the host. Note that if multiple FrameTrigger signals are received within one frame acquisition period, the camera will send the corresponding number of FrameStartOvertrigger events.

### 8.6.5. FrameBurstStartOvertrigger Event

When the camera is in FrameBurstStart trigger mode, when it receives an AcquisitionTrigger external trigger or software trigger signal, if the front-end sensor is exposing, it will not be able to respond to the new AcquisitionTrigger signal, and the camera will send a FrameBurstStartOvertrigger event to the host. Note that the camera will send the corresponding number of FrameBurstStartOvertrigger events if it receives multiple AcquisitionTrigger signals during the acquisition period of one frame of image.

### 8.6.6. FrameStartWait Event

When the camera is in FrameTrigger mode, the camera starts acquiring images, and if it does not receive the FrameTrigger signal, the camera will send a FrameStartWait event to the host.

### 8.6.7. FrameBurstStartWait Event

When the camera is in the AcquisitionTrigger mode, the camera starts acquiring images. If the camera does not receive the AcquisitionTrigger signal, the camera sends a FrameBurstStartWait event to the host. Note that if the FrameTrigger mode is set to on simultaneously with the AcquisitionTrigger mode, the FrameBurstStartWait event will be sent first. When the camera receives an AcquisitionTrigger signal, it will send a FrameBurstStartWait event.

Camera models that support this feature:

Model
MER2-502-79U3M/C(-L)
ME2P-1230-23U3M/C



## 9. Software Tool

### 9.1. LUT Create Tool

#### 9.1.1. GUI

LUT Create Tool, which supports all series of DAHENG IMAGING cameras. This plugin is integrated into GalaxyView.exe. After opening the device that you want to operate through this software, you can open LUT Create Tool from the menu bar plugin list. With the plugin you can achieve the following functions:

- 1) Adjust the image Gamma, brightness, and contrast.
- 2) Read the saved Lut from device.
- 3) Write the adjusted Lut to device.
- 4) Read the saved Lut from Lut/CSV file.
- 5) Save the adjusted Lut to file.

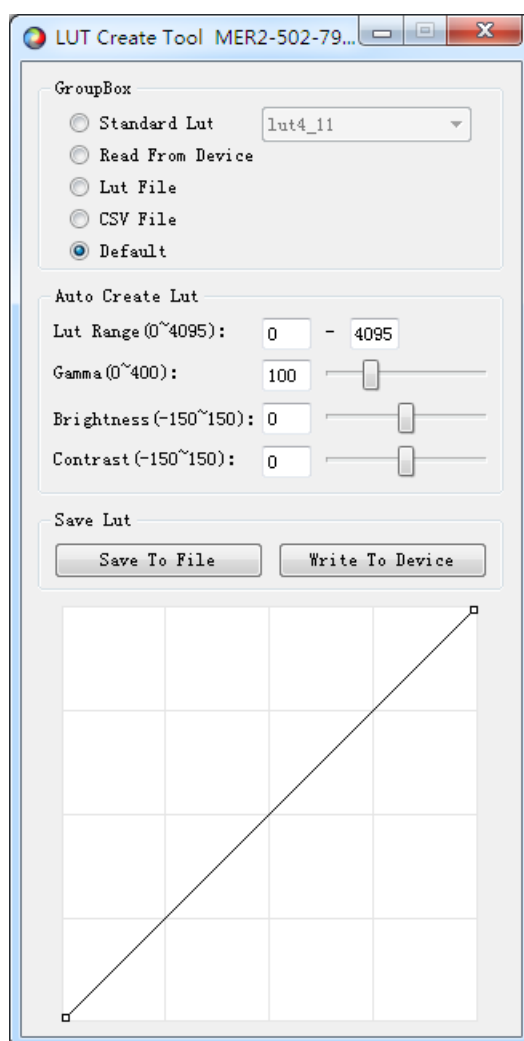


Figure 9-1 The GUI of LUT Create Tool

After opening the device and LUT Create Tool through GalaxyView.exe, the initial GUI is shown in Figure 9-1. The layout and function description of widgets are as follows:

[GroupBox] Select Lut from standard Lut, read from device, Lut file, CSV file and default. Among them, standard Lut is eight groups of factory standard Luts. Read from file is the Lut that can be read from device. Lut/CSV file can read the saved values. The default mode is the camera default value.

[Auto Create Lut] Adjust the Lut range, Gamma, brightness, and contrast to add effects on base Lut.

[Save Lut] Write the currently generated Lut to device or save to Lut/CSV file.

[Polyline Drawing Area] Represent the currently generated Lut in a curve form.

## 9.1.2. User Guide

### 9.1.2.1. User Case

After you select GroupBox and adjust the Lut parameter to a satisfactory effect, if you want to save the currently set parameters and you want to restore the parameters after the camera is powered on again, you need to select "Write To Device". The Lut parameter will be written to the UserSet0. After the device is powered on again, select the "Read From Device" in the GroupBox to load the UserSet0 and restore the parameter value. This usage case only supports MERCURY2 GigE cameras and MERCURY2 cameras.

If the device does not support reading/writing Lut, or does not support Lut to be used on other terminal devices after adjusting Lut effect through this terminal, then you can use the "Save To File" function. After adjusting Lut, select "Save To File" and choose the save format as lut. Then select the "Lut File" in GroupBox again and select the saved Lut file to restore the parameters. If you copy the file to another terminal and read it, you can still restore the parameters.

### 9.1.2.2. GroupBox

#### 1. Standard Lut

When selecting standard Lut in GroupBox, the drop-down list box is enabled, which contains eight sets of optional standard Lut, as shown in Figure 9-13. These eight sets of values are factory set, which can achieve the optimal image effect. When you choose different standard Lut, the polyline and image effects change. You can modify the Lut range, Gamma, brightness, contrast values to add image effects until you are most satisfied.

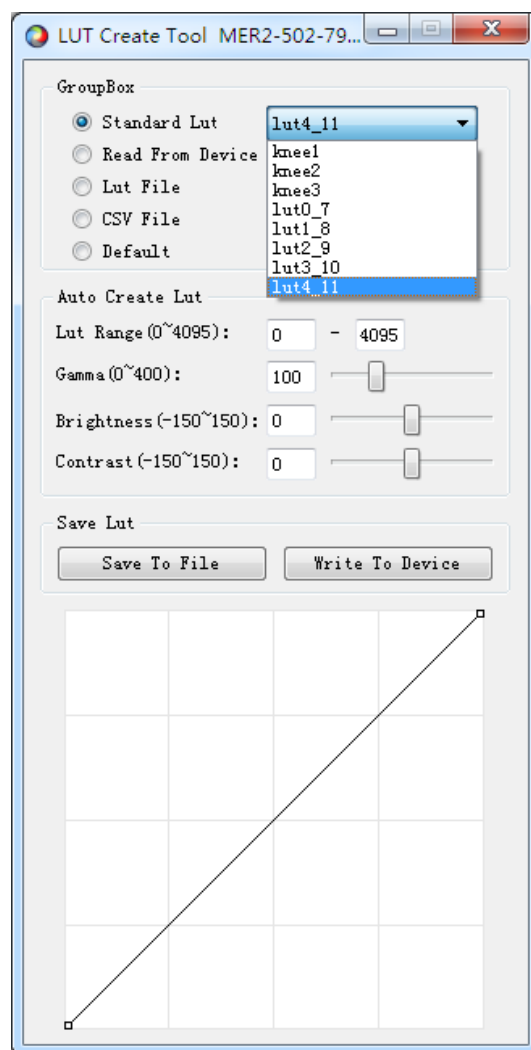


Figure 9-2 Standard Lut

## 2. Read From device

When you select read from device, the tool will automatically load UserSet0, and then load the Lut saved by the device. If the device supports LUTenable, it will automatically set LUTenable to true to display the image effect in real time, the GUI is as shown in Figure 9-3.

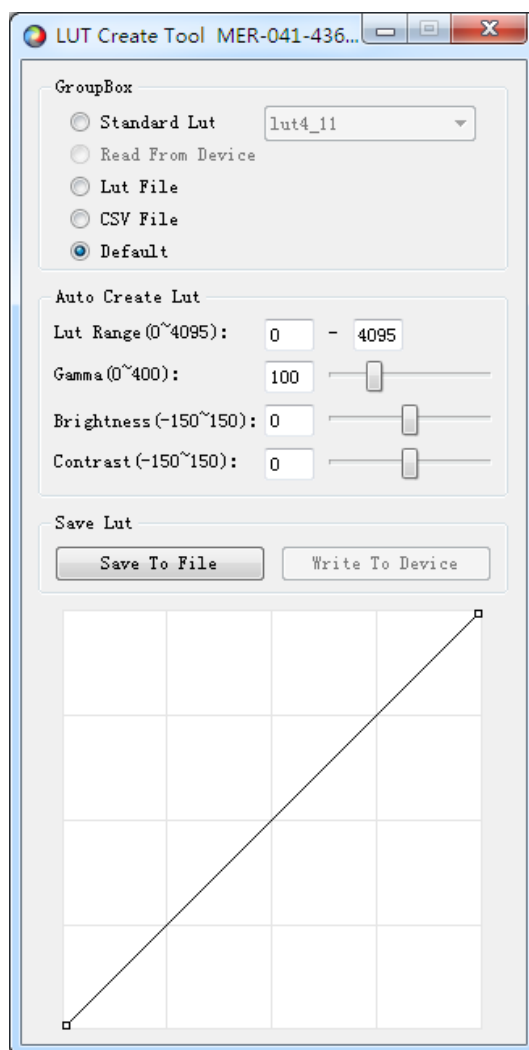


Figure 9-3 Do not support "Read From Device"

When selecting "Read From Device", the polyline graph and image effects are updated to the lookup table in the device.

When selecting the standard Lut or default Lut and selecting "Write To Device", then when reading, the written parameters will be updated to the GUI.

For example, standard Lut selects knee2, Lut range input 0-1023, Gamma input 110, brightness input 100, contrast input 100, and the GUI after selecting "Write To Device" is shown in Figure 9-4.

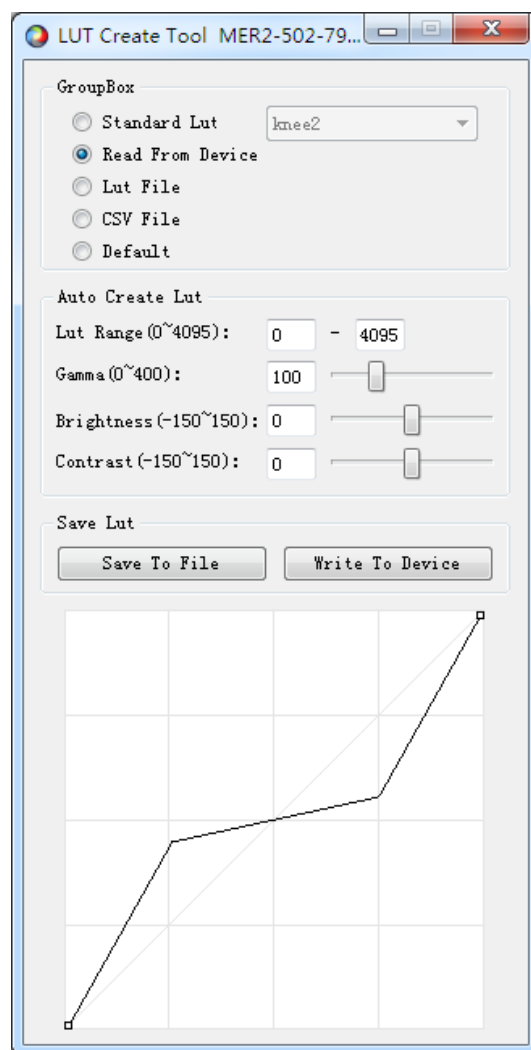


Figure 9-4 Select "Read From Device"

### 3. Lut file

After selecting the Lut file, a dialog box for selecting the file will pop up. You can select the file in the format of .lut, and update the polyline diagram and image acquisition effect of the device. If you select standard Lut or default Lut, and auto create Lut, the widget interface will update the parameters stored when saving Lut (the updated parameter values include Lut range, Gamma, brightness, contrast, and the values selected by the standard Lut drop-down box).

### 4. CSV file

After selecting CSV file, a dialog box for selecting the file will pop up. You can select the file in the format of .csv, and update the polyline diagram and image acquisition effect of the device. After selecting CSV file, all widgets of Auto Create Lut are disabled and unadjustable, as shown in Figure 9-5.

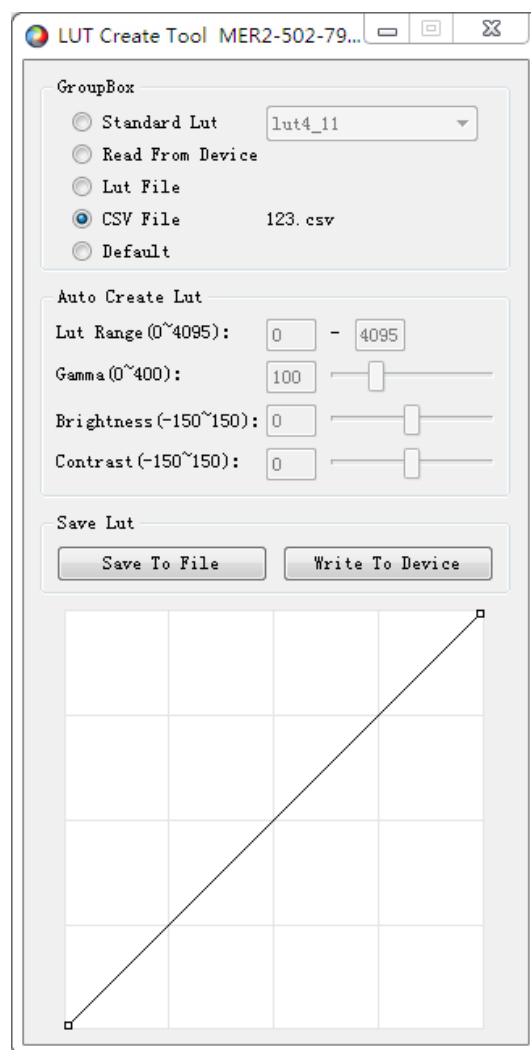


Figure 9-5 Select CSV file

CSV file can be manually modified by users. Currently, csv storage format saves decimal number of every four bytes to the first cell of each line in the file, and the maximum value of the number in each cell is 4095, a total of 4096 lines. The polyline graph of the GUI updates the curve according to the number of the first line of every 16 lines. Failure to follow the format when manually modifying will result in failure to read the file.

## 5. Default

The default option is the Lut data when the device is shipped from the factory, and is the initial value in each situation. If there is an error in other situation, it will automatically switch to the default. The default polyline graph is diagonal.

### 9.1.2.3. Auto Create Lut

There are five sets of parameters in Auto Create Lut, the maximum Lut range (default value 4095, range 0~4095), minimum value (default value 0, range 0~4032), Gamma (default value 100, range 0~400), brightness (default value 0, range -150~150), contrast (default value 0, range -150~150), where the difference between the maximum and minimum values of the Lut range needs to be greater than or equal to 63.

After selecting the GroupBox, when the above parameters are modified, the generated Lut will be written to the device Flash in real time. At this time, the "Write To Device" is not selected. After the device is powered off and restarted, the modified parameters will be lost. The generated Lut cannot be restored by "Read From Device".

If the GroupBox is selected as default or standard Lut, then adjusting the parameter values in the Lut group to generate Lut and saving the lut file will save the parameter values together in the file. Reading the file again will restore the saved case. If written to the device, the MER2-U3 cameras will save and restore the parameter.

#### 9.1.2.4. Save Lut

The group contains two widgets: Save To File and Write To Device.

1. When selecting " Save To File ", the current Lut data can be saved to the file. The saved file contains two formats: Lut and csv, as shown in Figure 9-6:

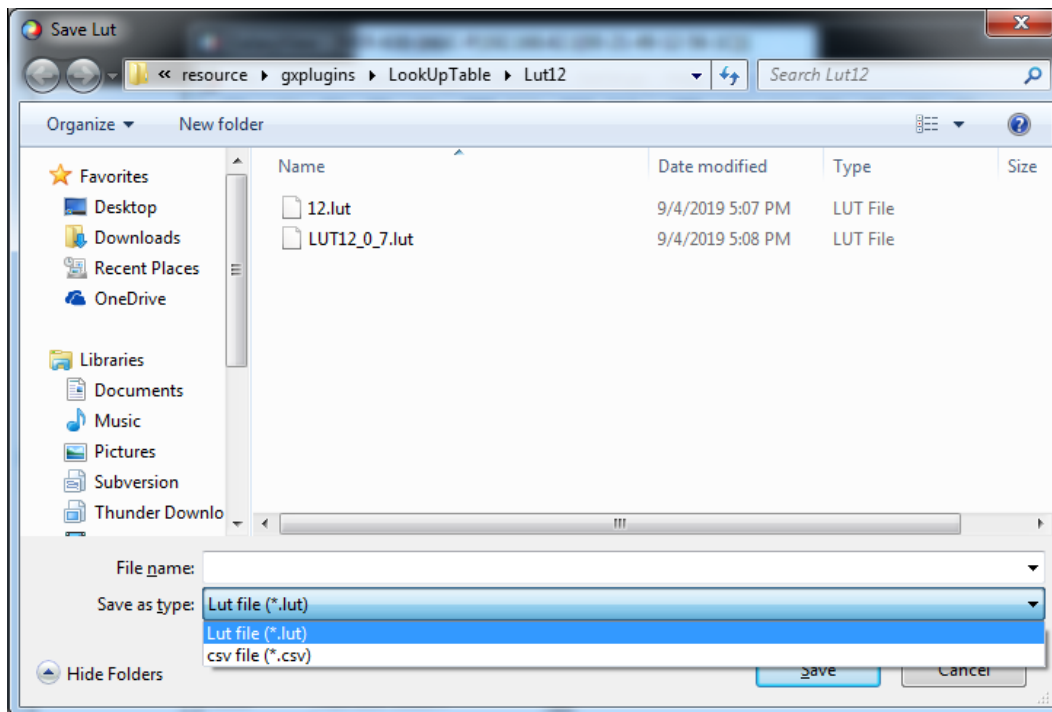


Figure 9-6 Save to file

The save type can be changed when saving the file. The default save path is ".\resource\gxplugins\LookUpTable\Lut12", which is the directory where the GalaxyView.exe is installed.

2. When "Write To Device" is selected, the current Lut data is written to UserSet0, and UserSetDefault is modified to UserSet0. UserSet0 will be loaded when reading from the device again.

#### 9.1.3. Precautions

##### 9.1.3.1. Read From Device

When reading from device, UserSet0 will be loaded, which will cause the previously modified device feature information to be lost. Therefore, the information should be saved in time before reading from device.

### 9.1.3.2. Write To Device

In order to ensure that the device will restore the effect before power off after the device is power-on again. When writing to device, it will set the parameter set to UserSet0 and set the UserSetDefault to UserSet0. If you do not want to restore the case and the Lut in the flash after powering off and restarting the device, please use the "Write To Device" function with caution.

### 9.1.3.3. Directory Structure

When reading/writing Lut and Auto Creat Lut, you need to rely on some files in the installation package directory, so do not arbitrarily change the installation package directory structure to avoid read/write failure.

## 9.2. Flat Field Correction Plugin

ShadingCorrectionTool.plx is the companion software for DAHENG IMAGING digital camera. The plugin is integrated into GalaxyView.exe. After opening the device through this software, open the FFC plugin from the menu bar plugin list. Using the plugin, you can achieve the following functions:

- 1) Execute FFC on the current device.
- 2) Obtain the FFC factor that has been validated from the device.
- 3) Write the prepared FFC factor to the device to prevent the factor from being lost after the device is powered off.
- 4) Load the saved FFC factor from the file.
- 5) Save the prepared FFC factor to the file.



### 9.2.1. GUI

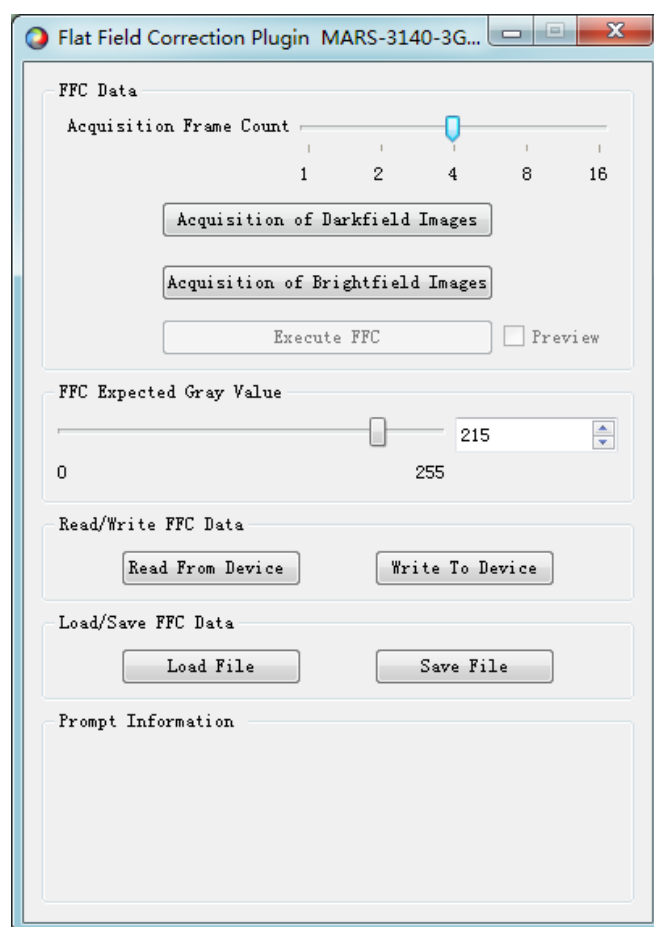


Figure 9-7 Flat field plugin GUI

After opening the device through GalaxyView.exe and opening the FFC plugin, the initial state of the GUI is shown in Figure 9-7. The widgets layout and function description are as follows:

No.	Widget	Function
1	Acquisition Frame Count	The number of images acquired for the acquisition of bright field images
2	Acquisition of Bright Field Images	Acquire a certain number of bright field images. Necessary operation
3	Execute FFC	Calculate the FFC factor and make it Immediate effect
4	Preview	Check the effects before and after the FFC
		Enable or disable FFC
5	Read from Device	If the device had executed FFC and the correction factor have been written to the device, the next time the camera is powered on, the FFC factor can be read directly from the device and take effect in real time
6	Write to Device	Write the calculated FFC factor to the device to prevent factors loss when the device is powered off

7	Load File	Load the FFC factor from the file and make it immediate effect
8	Save File	Save the calculated FFC factor to a file. When the factor is subsequent used, it can be loaded directly from the file
9	Prompt Information	Prompt the execution status and error message when executing FFC
10	Default prompt message	it is demanded to acquire bright field images again for executing FFC after changing ROI, Binning, Decimation, Mirror of the camera The prompt message will always be displayed on the GUI

Table 9-1 Function description of the FFC widgets

## 9.2.2. User Guide

### 9.2.2.1. FFC Execution Steps

Step1: Set the acquisition frame count. Not necessary operation. You can skip to step 2 directly. For details, please see [section 8.4.5.1](#).

Step2: Before acquiring bright field images, you need align the lens at white paper or the flat fluorescent lamp.

Step3: Start acquiring bright field images. For details on acquiring bright field images, please see [section 8.4.5.1](#).

Step4: Click "Execute FFC" to complete the correction.

Step5: You can view the effect before and after FFC through the preview function.

Step6: You can choose to write the correction factor (including the Acquisition Frame Count) to the device or save it to a file for subsequent use.

#### 9.2.2.2. Acquisition of Bright Field Images

- 1) When the device is in the stop acquisition mode, when you click "Acquisition of brightfield Images", the image will be displayed in the GalaxyView acquisition GUI.
- 2) When the device is in the acquisition mode, click "Acquisition of brightfield image" to complete the bright field image acquisition.
- 3) The number of bright field images acquired is related to the Acquisition Frame Count. For example, if the number of Acquisition Frame Count is set to 4, when you click "Acquiring of Brightfield Image", 4 images will be acquired for FFC calculation.
- 4) If the brightness of the acquired bright field image is less than 20, it will prompt in the prompt box that the acquired bright field image will affect the effect of FFC, as shown in Figure 9-8. In this case, it is recommended to adjust the image brightness in the range of 20~ 250, and then reacquiring the bright field images.

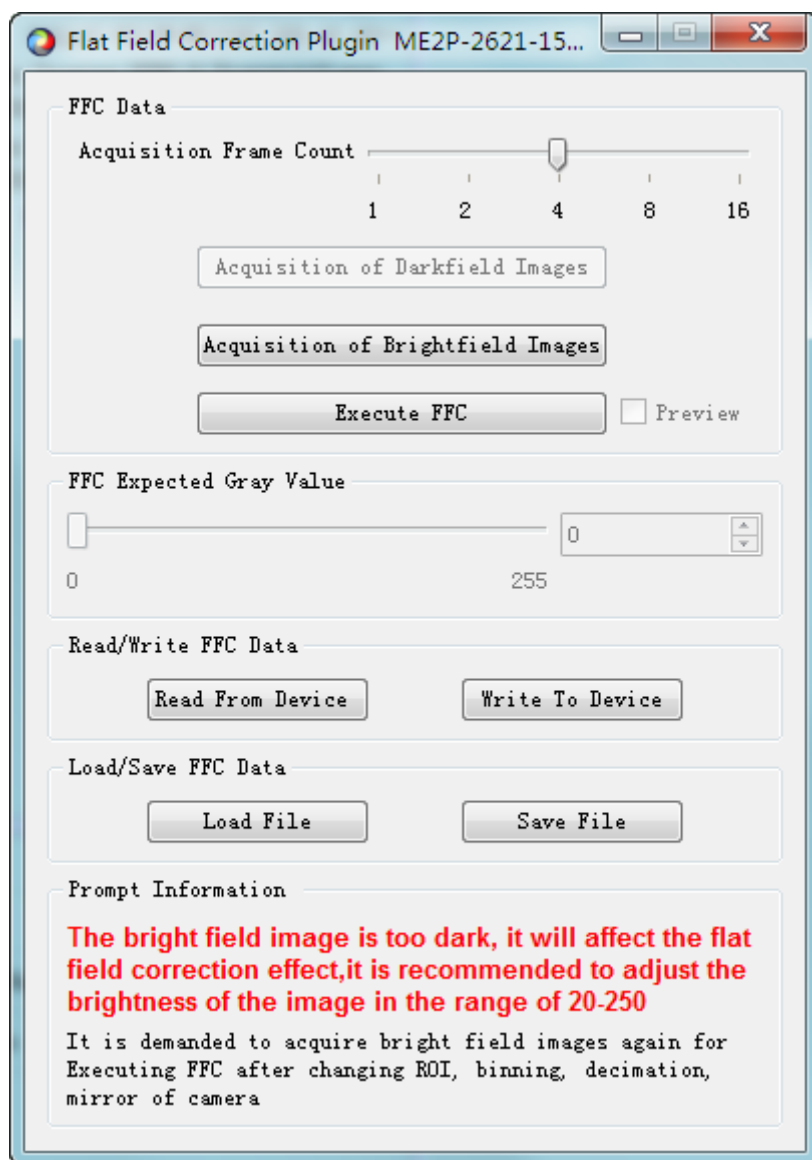


Figure 9-8 The bright field image is too dark

- 5) If the brightness of the acquired bright field image is greater than 250, it will prompt in the prompt box that the acquired bright field image will affect the effect of FFC, as shown in Figure 9-9. In this case, it is recommended to adjust the image brightness in the range of 20~ 250, and then reacquiring the bright field images.

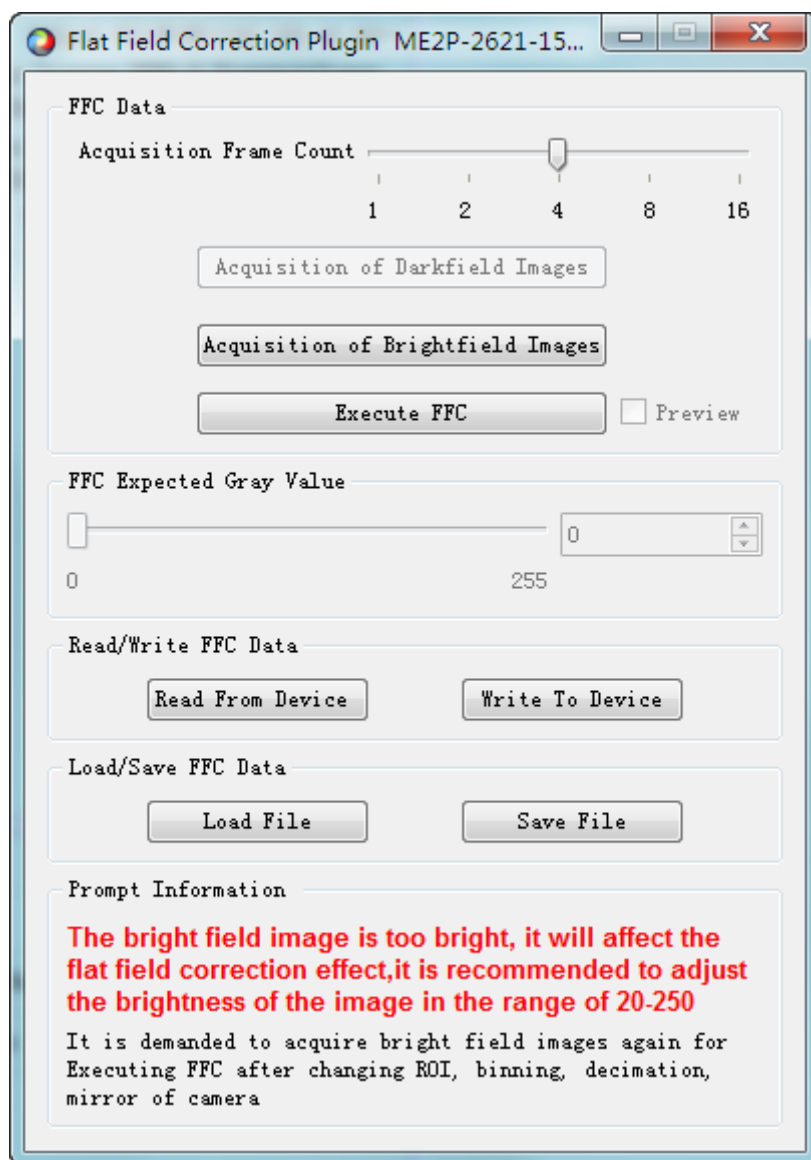


Figure 9-9 The bright field image is too bright

- 1) The larger the "Acquisition Frame Count" is set, the longer it will take to acquire the bright field images.



- 2) When the color camera is acquiring bright field images, if white balance has not been done, the image after FFC is an image with white balance effect.

#### 9.2.2.3. Execute FCC

- 1) "Execute FFC" is enabled after the bright field image acquisition is completed.
- 2) Click "Execute FFC" to calculate the FFC factor and set it to the device to take effect in real time. If the factor is not written to the device, it will be lost when the device is powered down. And the FFC needs to be redone.
- 3) When the FFC is completed, the preview widget takes effect. The preview function can be used to check the effects before and after the FFC.

#### 9.2.2.4. Read FFC Data from Device / Write FFC Data to Device

- 1) When reading FFC data from the device or writing FFC data to the device, the FFC is enabled by default. After the read from the device is successful, the FFC takes effect in real time.
- 2) When writing to the device, the user set will be saved and the startup user set will be set to userset0.

#### 9.2.2.5. Load FFC Data from File / Save FFC Data to File

- 1) When loading FFC data from file or saving FFC data to file, the FFC is enabled by default. After the read from the device is successful, the FFC takes effect in real time.
- 2) When loading FFC data from file or saving FFC data to file, the default file path is: under the installation path (\*\GalaxySDK\Demo\Win64\resource\gxplugins\FlatFieldCorrection).



When loading from a file, only files with a format of .ffc can be opened.

### 9.2.3. Precautions

#### 9.2.3.1. FFC Implementation

There are currently two device-side implementations, as shown in Figure 9-10 and Figure 9-11 respectively. At the same time, the plugin supports PC-side implementation, and the interface is shown in Figure 9-12.

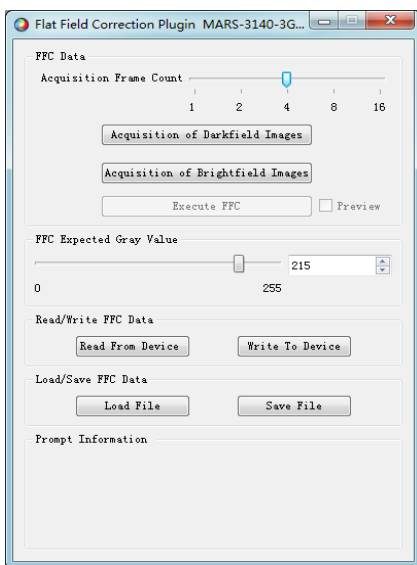


Figure 9-10 Device-side GUI 1

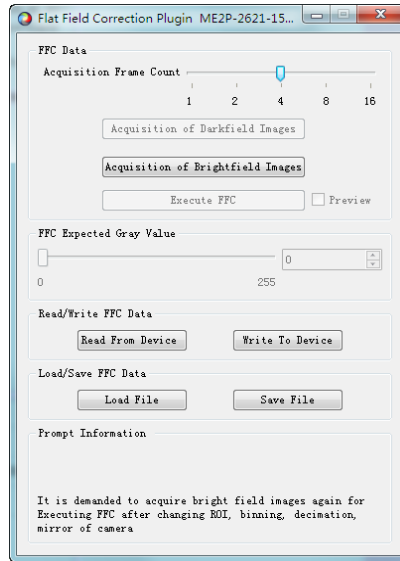


Figure 9-11 Device-side GUI 2

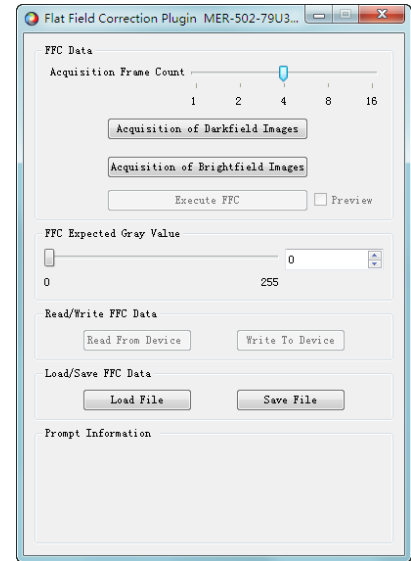


Figure 9-12 PC-side GUI

#### 9.2.3.2. Preview

The preview widget is grayed out when acquiring bright field images and cannot be previewed.

### 9.3. Frame Rate Calculation Tool

B	C
Width	2448
Height	2048
BinningHorizontal	1
BinningVertical	1
DecimationHorizontal	1
DecimationVertical	1
ExposureTime(us)	10000
PixelFormat(8/10)	8
DeviceLinkThroughputLimit(Bps)	300000000
MaxUSBControllerThroughput(Bps)	380000000
AcquisitionFrameRateMode	off
AcquisitionFrameRate	79.1
<b>FPS</b>	<b>59.83</b>
MER2-502-79U3X	+

Figure 9-13 Frame rate calculation tool

The frame rate calculation tool is currently provided in the form of Excel. When using it, firstly select the camera model in the table, and then achieve the expected frame rate by modifying the parameter of the camera. There are four major types of influencing factors, including image readout time (image width, image height, pixel format), exposure time, acquisition frame rate control, and device link throughput limit.

Table parameter explanation:

- 1) The Width and Height are the set ROI size.
- 2) For more details about BinningHorizontal, BinningVertical, DecimationHorizontal and DecimationVertical, please refer to [section 8.3.10](#) and [section 8.3.11](#). These four parameters affect the transmission time of the image data.
- 3) The ExposureTime is the exposure time when the camera acquires one frame of image.
- 4) The PixelFormat is the pixel format corresponding to the camera output image, including 8 bits, 10 bits or 12 bits.
- 5) The DeviceLinkThroughputLimit represents the maximum bandwidth of the image transmitted by the camera.
- 6) The MaxUSBControllerThroughputLimit represents the recommended maximum transmission bandwidth of the camera. If this value is exceeded, frame losing may occur.

- 7) The AcquisitionFrameRate represents the maximum value of the frame rate control when the AcquisitionFrameRateMode is set to on, and whether the maximum value can be reached depends on whether the camera is affected by other acquisition parameters.
- 8) AcquisitionFrameRateMode indicates whether frame rate control is enabled, On means frame rate control is enabled, and Off means frame rate control is disabled. When frame rate control is enabled, the camera acquires images at a frame rate no higher than the AcquisitionFrameRate. When frame rate control is disabled, the camera acquires images without being affected by the AcquisitionFrameRate.

When using the frame rate calculation tool, please fill in the above information of the camera into the corresponding table. When the filled value exceeds the range or does not conform to the rules, the calculation tool will report an error. Please modify and fill in the value again according to the prompt information. When all parameters are correctly filled in, the FPS shown in the last column of the table is the theoretical frame rate currently acquired by the camera, and usually the error between this value and the actual frame rate acquired by the camera is no more than 1%.

## 10. FAQ

No.	General Question	Answer
1	On the unactivated Windows7 64bit system, the installation of Galaxy SDK has been successfully, but open the demo program failed.	1) Activate Windows7 64bit system, uninstall the package, restart the system, reinstall the package and reopen the demo program.
2	The cameras cannot be enumerated.	1) Please check whether the LED is green, and check whether the USB cable is connected properly, re-enumerate after re-plugging the camera. 2) Please check whether the driver of connected controller works well, reinstall the controller driver and enumerate repeatedly. 3) Please check whether the driver of host controller works well, and whether the camera displays as "USB3 Vision Digital Camera", if not, try to reinstall the setup driver.
3	Fail to open device, it shows "Load XML failed".	1) Contact with the technical support to obtain upgrade program, and then upgrade your cameras.
4	Fail to open device, it shows that "The device has been opened".	1) Please close the software which has opened the camera.
5	Fail to open device, it shows that "This device can only be operated on an USB3.0 Port".	1) Please check whether the camera is connected to USB2.0 port or USB2.0 HUB. Be sure to connect the camera to USB3.0 port.
6	No images after acquisition start.	1) Please load the default parameter set, reopen the demo, execute the command AcquisitionStart again, and then check the frame rate. 2) Open the demo, switch to stream features page, and decrease the number of StreamTransferNumberUrb to 10. Then try to execute the command AcquisitionStart again and check the frame rate. 3) Open the demo, switch to stream features page, check the statistic information, and check if any packet has been received. If there are some incomplete frames, please refer to <a href="#">section 2.2</a> .
7	The frame rate is not up to the nominal value.	1) Change another PC with high performance. 2) It's recommended to use Intel host controller. 3) Be sure the main board support PCI-E2.0 or above. 4) If you have any other questions, please contact us.
8	Lose frames seriously in a multiple cameras' application.	1) The bandwidth of the camera is more than the bandwidth of the host controller. You can decrease the bandwidth through the DeviceLinkThroughputLimit function. 2) Connect the camera to the host controller separately.



9	Camera crashes on Advantech AIIS-1440 IPC.	1) Be sure the driver version of AMD USB controller is later than 2.20.
---	--	---

## 11. Revision History

No.	Version	Changes	Date
1	V1.0.0	Initial release	2019-09-27
2	V1.0.1	Add MER2-041-436U3x, MER2-160-227U3x, MER2-230-168U3x, MER2-302-56U3x, MER2-630-60U3x, ME2P-1230-23U3x	2019-12-17
3	V1.0.2	Modify Figure 1-1, Figure 5-1, Figure 5-2, Figure 5-3, Figure 7-6 and Figure 8-9 Rename camera models, for example, rename MER2-041-436U3x to MER2-041-436U3M/C(-L) Modify the power consumption of MER2-U3(-L) from <2.5W@5V to <2.7W@5V Modify the weight of MER2-U3 camera from 57g to 65g Modify the weight of MER2-U3-L camera from 53g to 61g	2020-03-09
4	V1.0.3	Add ME2P-2621-15U3M/C	2020-03-13
5	V1.0.4	Add ME2L-161-61U3M(-L)	2020-03-21
6	V1.0.5	Add <a href="#">section 8.4.4</a> and <a href="#">section 8.4.5</a>	2020-03-27
7	V1.0.6	Modify the I/O port of ME2L cameras from 6pin to 8pin Modify the description of <a href="#">section 7.3.2</a> Modify the mechanical dimensions of ME2L cameras Modify the description of <a href="#">section 7.3.2.2.2</a> Add the ME2L model to <a href="#">section 8.3.12</a>	2020-04-30
8	V1.0.7	Add <a href="#">section 8.2.8</a> Add <a href="#">section 8.3.20</a>	2020-05-20
9	V1.0.8	Modify the description of Figure 6-1 and Figure 6-2 Modify the diagram and core color of Table 7-9 in <a href="#">section 7.3.2</a>	2020-07-20
10	V1.0.9	Add <a href="#">section 8.4.5</a> and <a href="#">section 9.2</a>	2020-08-12
11	V1.0.10	Add the description of Global Reset Release shutter mode in <a href="#">section 8.2.8</a>	2020-08-28

## 12. Contact Us

### 12.1. Contact Sales

If you need to order products or inquire product information, please contact our sales:

1) Beijing Headquarters

Tel: 010-82828878

Fax: 010-82563343

Email: [isales@deheng-imaging.com](mailto:isales@deheng-imaging.com)

2) Shanghai Office

Tel: 021-35312826

Fax: 021-65201839-128

Email: [shanghai@daheng-imaging.com](mailto:shanghai@daheng-imaging.com)

3) Shenzhen Office

Tel: 0755-83479565

Fax: 0755-82044020

E-mail: [shenzhen@daheng-imaging.com](mailto:shenzhen@daheng-imaging.com)

4) Wuhan Office

Tel: 027-87223690

Fax: 027-87223690

Email: [wuhan@daheng-imaging.com](mailto:wuhan@daheng-imaging.com)

5) Chengdu Office

Tel: 028-63167707

Fax: 028-63167707

E-mail: [chengdu@daheng-imaging.com](mailto:chengdu@daheng-imaging.com)

6) Xi'an Office

Tel: 029-84501012

Fax: 029-89588451

Email: [xian@daheng-imaging.com](mailto:xian@daheng-imaging.com)

## 12.2. Contact Support

If you have any questions in using DAHENG IMAGING products, please contact the experts on our support team:

Tel: 400-999-7595

Email: [isupport@daheng-imaging.com](mailto:isupport@daheng-imaging.com)